

T Series Basic 7 inch Indoor Monitor User Manual_V1.0

T-IS11



Chapter 1 Function Overview

This product is a part of the 2-wire analog video door phone system. The system being connected via 2 core wires, consists of villa Outdoor Station Indoor Station(Built-in power supply). The functions and characteristic of this product are as follows:

- Support visual intercom, remote unlock
- Support real-time surveillance to villa outdoor station
- Support multiple indoor monitors in one apartment
- Support intercom between different indoor monitors in the same or other apartments
- Support secondary doorbell

1.1 Parameters

Working Voltage: AC100~240V

Quiescent Current: ≤ 20 W
(T-IS11 & Villa Outdoor Station)

Working Current: ≤ 8 W

LCD Display: 7.0 inch

(T-IS11 & Villa Outdoor Station)

Outline Dimension (L×W×D): 179× 179× 25mm


Resolution: 800×RGB×480(dot)

Storage Temperature: -25℃~70℃


Working Temperature: -10℃~+55℃

Chapter 2 Product Introduction

2.1 Product Dimension

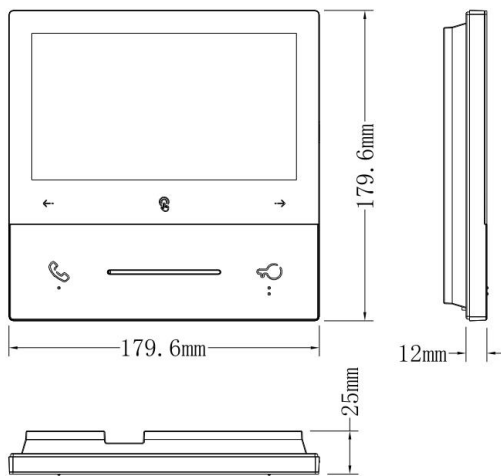

2.2 Touch Key Instruction

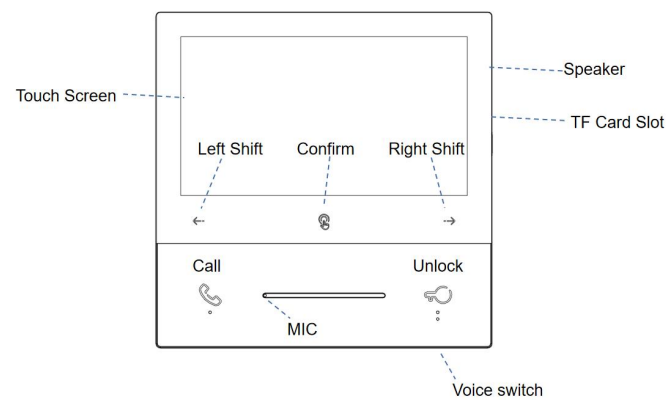

ICON: Short press under Stand-By mode to call other monitor/ answer calls


ICON: Unlock the door during a call

ICON: Left shift/ decrease the number

ICON: Long press for 3S under Stand-By mode to enter address setting interface/ Confirm

ICON: Short press under Stand-By mode to monitor the villa outdoor station/ Right shift/ increase the number

2.3 Interface Description

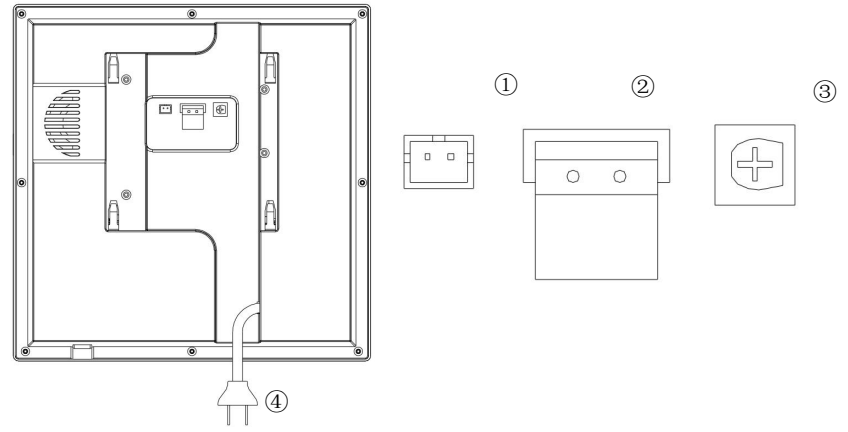


Number ① Doorbell port.

Number ② Bus Port, to power and connect the villa outdoor station ONLY

Number ③ Call volume adjustment.


Number ④ 110-220V AC power supply inlet

Chapter 3 Installation Height

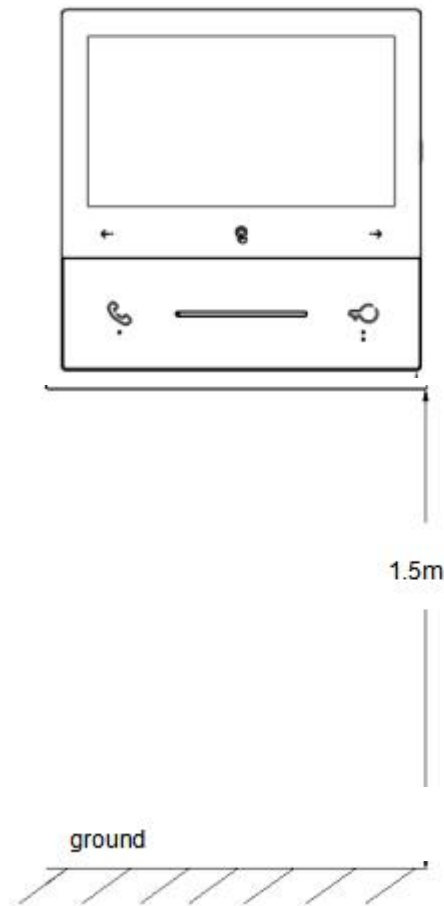

Recommended height: 1.5 m


Chapter 4 Installation Illustration

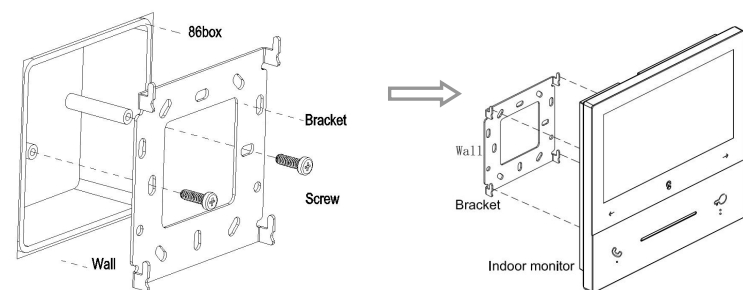

Step 1:

Drive the screws on the bracket with the holes on the 86 box.


Fasten the screws to fix the bracket

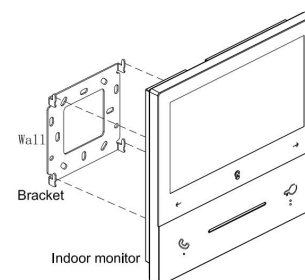

Step 2:

After finishing the wiring of the Indoor Monitor, align the slot behind the Indoor Monitor to the hook of the bracket.

After aligning correctly, move downward a little to make the Indoor Monitor well fastened on bracket.

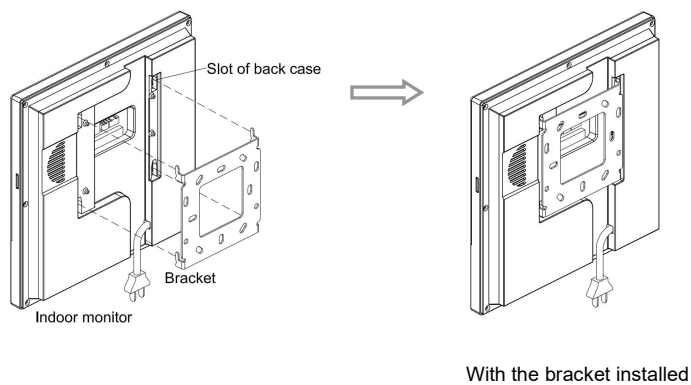

Chapter 5 Basic Functions


5.1 Stand-By mode

LCD Display turn off when the device is under Stand-By mode, and the button backlight is on with 1/4 brightness:

1. Within 60s since power up, under Stand-By mode, long press for 3S to enter address setting menu;
2. Under Stand-By mode, after short pressing , there will be a reminder to check whether you will call the other monitor; and then short press to make the call;
3. Under Stand-By mode, short press , to monitor the villa outdoor station .

5.2 Calling in

Basic workflow: Ring bell \Rightarrow **Talk** \Rightarrow **Unlock** \Rightarrow **Call ended**

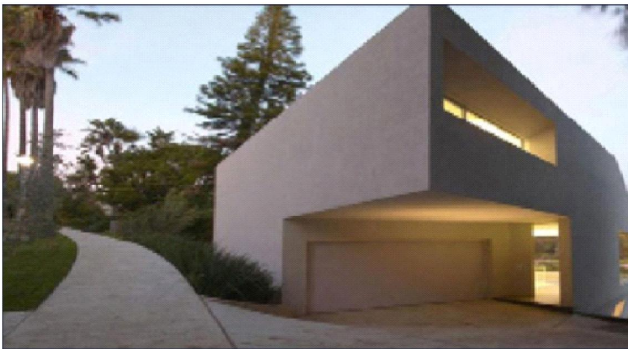

Calling Interface

Incoming Call:

1. Visitor can call indoor monitor from villa outdoor station, the bell of indoor monitor will ring;
2. Resident can press to answer the call; The maximum call duration is 120s.
3. Under the monitoring/ ringing/ calling mode, resident can press to unlock the first door; press to unlock the secondary door. After unlocking for 5s the call will be ended automatically.
4. Resident can press to end up the phone call.

5.3 Surveillance

Basic workflow: Choose monitoring device \Rightarrow **Monitoring** \Rightarrow **Unlock** \Rightarrow **Monitoring completed.**

1. Under Stand-By mode, press to monitor villa Outdoor Station, if the resident have installed multiple villa outdoor stations, press to switch to the other villa outdoor station;
2. During the monitoring/ ringing/ calling mode, resident can press to unlock the first door, press to unlock the secondary door. After unlocking for 5s the call will be ended automatically.
3. During the monitoring mode, resident can press to communicate with villa outdoor station, and press again to end up phone call.

5.4 Intercom

Under Stand-By mode, short press \Rightarrow enter Intercom interface:

1. In the Intercom interface, short press the "UP" to increase the number, press "Down" to decrease the number ; long press or , the address can be increased/ decreased rapidly (maximum 200, minimum 001, which can be cycled);
2. In the Intercom interface, short press to make a call;
3. In the Intercom interface, short press to cancel the call.


5.5 Mute

There is a Mute switch on the bottom right of device, you can slide the switch to set between Mute/Non-mute.

Chapter 6 System Setting

6.1 Address Setting

Within 60s power-on for Indoor Monitor, long press for 3s, after a long "Beep" \Rightarrow enter Address Setting interface:

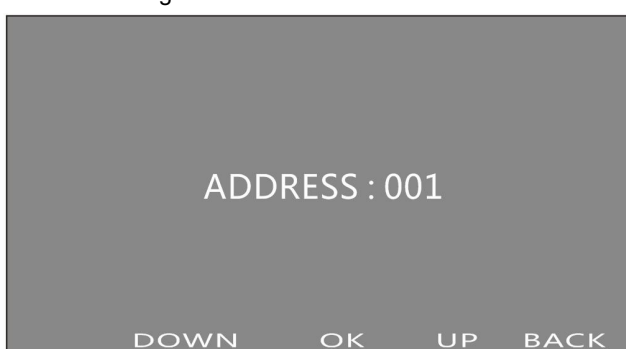

Address Setting Interface

1. Address Setting: short press "UP", address number increase, press "DOWN", address number decrease; long press or ,the address can be increased/ decreased rapidly (maximum 200, minimum 001, which can be cycled);
2. Address Saving: short press , current address number will be saved and the device will enter Stand-By mode;
3. Short press , quit to Stand-By mode without saving current address number.

6.2 Video Setting

While the device is in the state of ringing/ monitoring/ calling, long press , the Video Setting menu will show up:



Video Setting Interface

1. Before short pressing OK, press or to switch to set the BRIGHTNESS, CONTRAST and COLOR cyclically;
2. After finishing the last operation, press to save the parameters, and then press or to adjust the specific parameter (BRIGHTNESS, CONTRAST, COLOR), range: 0-10;
3. Press to get back in ringing/ monitoring/ calling interface, and the setting menu will disappear;
4. The OSD setting menu will exit automatically and the device will get back in surveillance mode if there's no operations in 5s.



When the wiring of the device is disturbed by the outside world, the image will appear abnormal