


User Manual

K-BUS Multifunctional Actuator with Secure, 3-Fold, Flush Mounted_V1.6

AMMAF-03/06.S

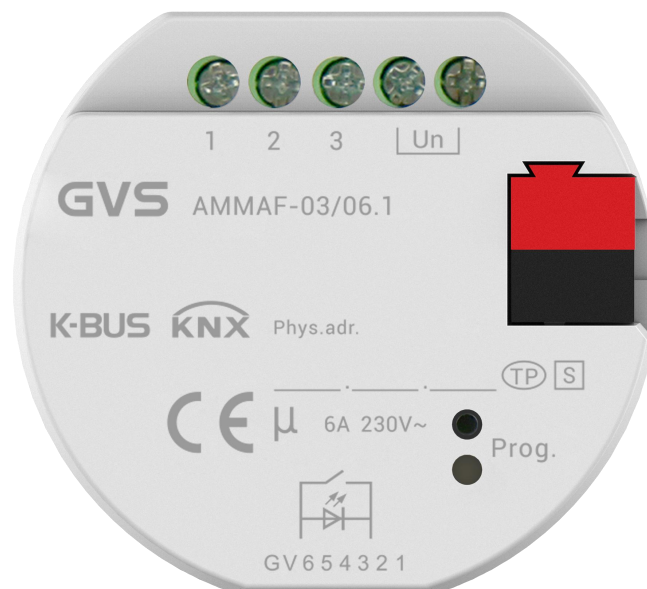

KNX/EIB Home and Building Control System

Attentions

1.Please keep devices away from strong magnetic field, high temperature, wet environment;



2.Do not fall the device to the ground or make them get hard impact;



3.Do not use wet cloth or volatile reagent to wipe the device;



4.Do not disassemble the devices.

Contents

Chapter 1 General	1
Chapter 2 Technical Data	5
Chapter 3 Dimension and Connection Diagram	7
3.1 Dimension diagram	7
3.2 Connection diagram	7
Chapter 4 Parameter setting description in the ETS	9
4.1. KNX Secure	9
4.2 Parameter window "General"	13
4.3 Parameter window "Output: Channel configuration"	15
4.4 Switch outputs-- Switch actuator	18
4.4.1 Parameter window "Output X Switch"	18
4.4.2 Parameter window "Output X: Time"	22
4.4.2.1 Selection "Delay"	23
4.4.2.2 Selection "Flashing"	24
4.4.2.3 Selection "Staircase"	26
4.4.3 Parameter window "Output X: Logic"	28
4.4.4 Parameter window "Output X: Scene"	31
4.4.5 Parameter window "Output X: Forced"	33
4.4.6 Parameter window "Output X: Operation hours counter"	35
4.5 Switch outputs-- Heating actuator(without controller)	36
4.6 Curtain output	42
4.6.1 Parameter window "Output Curtain: Venetian Blind"	42
4.6.1.1 Parameter window "Curtain: Drive"	47
4.6.1.2 Parameter window "Curtain: Auto."	50
4.6.1.3 Parameter window "Curtain: Scene"	54
4.6.1.4 Parameter window "Curtain: Safety"	55
4.6.2 Parameter "Output Curtain: Shutter"	58
4.7 Valve control	59
4.7.1 Parameter window "Vx: Heating/Cooling"	63
4.7.1.1 2 state-ON/OFF	65

4.7.1.2 Continuous, PWM	68
4.7.1.3 3 point, open and close	70
4.8 Fan control	77
4.8.1 Parameter window "Fan type -- One level"	77
4.8.1.1 Parameter window "Fan: Auto."	81
4.8.1.2 Parameter window "Fan: Status"	85
4.8.2 Parameter window "Fan type -- Multi-level"	87
4.8.2.1Parameter window "Fan: Auto."	95
4.8.2.2Parameter window "Fan: Status"	100
4.9 Parameter window "UI setting"	103
4.10 Dry contact Input	106
4.10.1 Function "Switch"	106
4.10.2 Function "Dimming"	109
4.10.3 Function "Value output"	111
4.10.4 Function "Scene control"	113
4.10.5 Function "Blind"	114
4.10.6 Function "Shift register"	116
4.10.7 Function "Multiple operation"	119
4.10.8 Function "Delay mode"	122
4.11 LED output	124
Chapter 5 Communication Object Description	127
5.1 Communication object of switch output	127
5.1.1 Communication object of switch actuator	127
5.1.2 Communication object of heating actuator(without controller)	131
5.2 Communication object of curtain output	132
5.3 Communication object of fan control	136
5.4 Communication object of valve control	140
5.5 Communication object of dry contact input	142
5.6 Communication object of LED output	146

Chapter 1 General

The Multifunctional Actuator, 3-Fold, 6A, Flush Mounted (Referred to as Multifunctional actuator) is a module that integrates multiple relay output functions, including switch output, curtain output, fan output or valve output, in addition to dry contact input and LED output indication functions. The corresponding output function can be configured according to actual application requirements.

This module is compact and small in design, Flush mounted, and can be installed in a conventional 80 mm or 86mm wiring box. The output adopts screw terminal to realize electrical connection, and the bus connection is directly connected via KNX terminal. The additional power supply is not required except KNX bus.

This manual provides detailed technical information about the Multifunctional Actuator for users as well as assembly and programming details, and explains how to use the device by the application examples.

The function of the Multifunctional Actuator is summarized as follows:

—**Switch output**, which can connect some electrical loads, such as lighting, sockets and heating control. There are 3 outputs, one output occupies one relay control, and each output has electronic switch control.

The module offers the following functions:

- ♦ **Switch**
- ♦ **Time function: on/off delay**
- ♦ **Time function: flashing switch, for lamps of aging test**
- ♦ **Time function: staircase lighting, for switch on the staircase lighting and after the duration time the lighting can be turned off automatically. It is better if the function is used together with motion detector.**
- ♦ **Provide 8 scenes, recall and storing via a 1byte object**
- ♦ **Logic operation: AND, OR, XOR, GATE function, up to three logic inputs**
- ♦ **Status response, for know the current output state in the visualization**
- ♦ **Forced operation, two data types: 1bit/2bit, for force action on or off, with the highest priority**

- ♦ **Heating valve control**
- ♦ **Set the relay contact position after bus voltage recovery**
- ♦ **Set the relay contact position after bus voltage failure**

—**Curtain output**, which can connect with motor blinds, awnings, roller blinds, vertical blind, etc. There is 1 outputs with AC motor or dry contact controlling motor. The output contacts for the directions UP and DOWN. The pause on change in direction can be set via the parameters. The curtain output occupies two relays per channel. For the specific wiring method, please refer to the connection diagram in the third chapter.

The specific functions are summarized as follows:

- ♦ **Movement UP/DOWN**
- ♦ **Stop/Louvre adjustment**
- ♦ **Move to position 0.....100%**
- ♦ **Adjustment Louvre to position 0.....100%(only “Venetian Blind” working mode)**
- ♦ **Set 8 scenes, store or recall via a 1byte object**
- ♦ **Automatic sun protection**
- ♦ **Safety function**
- ♦ **Status response, query and reply the current shutter/blind position and operation mode to the bus, thereby indicating the status in the visualization device**
- ♦ **Two working mode :Venetian Blind and Shutter**

—**Fan control**, can be connected to a single-phase fan, supports up to 3 levels of fan speed adjustment, the output contacts are the same as the switch output.

The function is summarized as follows:

- ♦ **Support the fan with 1-2-3 level fan speed**
- ♦ **The fan has two operating modes: step switch and changeover switch**
- ♦ **Forced operation: The fan speed is only allowed within the allowed fan speed range, with the highest priority**
- ♦ **Automatic operation: Automatically run the fan speed according to the control value.**

The control value is obtained by the sensing device on the bus, and the minimum running time of the fan speed can be set.

- ♦ **Normal operation: manually control the operation of the fan, such as through the operation panel, etc.**
- ♦ **Fan with multi-level fan speed can set start-up characteristics**
- ♦ **Single-level fan speed fan can set on/off delay or minimum running time**
- ♦ **Status feedback, such as automatic operation status, fan switching status, fan speed, etc.**
- ♦ **Operational control of bus power-up or power-down behavior**

—**Valve control**, can be used to connect 2-pipes or 4-pipes coil system, there are three types of valve control for 2-pipes: “3 point, open and close”, “continuous, PWM” and “2 state-ON/OFF”. The cooling valve and heating valve respectively use separate relay output for 4-pipes, but only support two valve control type: “continuous, PWM” and “2 state-ON/OFF” .

The “3 point, open and close” type controls the opening of the valve according to the control value of the valve. It can completely open or close the valve, and can also stop the valve in an intermediate position. This type of control is suitable for driving three-wire valves.

The “continuous, PWM” type can only make the valve fully open or completely closed. The valve is cyclically operated according to the control value (1byte) and PWM cycle. The valve switch is divided into normally open or normally closed. This control type is suitable for driving two-wire system. Valve.

The “2 state-ON/OFF” type is similar to the PWM switch type, and can only be fully opened or completely closed. The difference is that it is directly turned on or off according to the control value (1 bit) on the bus. It is usually suitable for the case where the switch valve is controlled according to the temperature difference. And suitable for driving two-wire valves.

The function is summarized as follows:

- ♦ **Supports three valve control types**
- ♦ **Monitor the control values on the bus to send fault status**
- ♦ **Valve characteristic curve correction (only for valve type of 3 point, open and close)**
- ♦ **Automatic valve adjustment (only for valve type of 3 point, open and close)**

- ♦ **Disable/enable heating or cooling valves**
- ♦ **Valve position status feedback or query**
- ♦ **Manual or automatic purge of the valve, sending the purge status**

—**Dry contact Input detection**, can be connected with dry contact panels or sensor devices, and supports up to 8 inputs.

The functions are summarized as follows:

- ♦ **Switching and dimming**
- ♦ **Blind control**
- ♦ **Value output**
- ♦ **Recall and Stored scene function**
- ♦ **Shift register function**
- ♦ **Multiple control**
- ♦ **Delay sending(e.g. switching value, dimming value)**

—**LED Output indicator**, can support common-anode LED indicator connection, and the voltage can be 5V or 12V. Up to 4 outputs.

The functions are summarized as follows:

- ♦ **Switch status indication**
- ♦ **Compare with the threshold, then output indication**
- ♦ **Always on indicator**

The above input/output functions can be configured according to actual application requirements, and each function can be configured separately. Programmers are able to use the Engineering Tool Software ETS (ETS5 version or above) with a .knxprod file to allocate the physical address and set the parameters.

To make sure that all the programmable functions are used correctly, you must check the connection of the loads/ inputs before use and note technical characteristic of loading equipment, particularly curtain driver, fan and valve, they refer more technical characteristics, some characteristics are inherent, if not properly set them, it is likely to cause the load device damage or not operating correctly.

Chapter 2 Technical Data

Power supply	Bus voltage	21-30V DC, via the KNX bus
	Bus current	<18.1mA/24V,<14.7mA/30V
	Bus consumption	<441.0mW
	Capacitor charge current	<24mA
Output	U _n rated voltage	230V AC(50/60Hz)
	I _n rated current	6A/per channel,total max.12A
	Max. switching current	16A/277V AC
	Mechanical endurance	>10 ⁶
	Electrical endurance	>5x10 ⁴ (16A 277VAC, Resistive load)
Output LED	5V or 12V,current limiting with 4mA	
Connection	KNX	Bus connection terminals
	Outputs	Screw terminals, Wire Range Multi-core 0.2-1.5mm ² Single core 0.2-2.5mm ² Torque 0.4N-m
	Input/Output LED	≤5M
Operation and display	Programming button and Red LED	For assigning the physical address
	Green LED flashing	For displaying application layer running normally
Temperature	Operation	-5 °C ... + 45 °C
	Storage	-25 °C ... + 55 °C
	Transport	- 25 °C ... + 70 °C
Environment	Humidity	<93%, except dewing
Mounting	In a conventional 80mm or 86 mm wring box	


Note: For the relay parameters, the above load is only for a single lamp. When multiple lamps are connected in parallel, the load can be reduced. Although the power is constant, the instantaneous inrush current will increase, which will easily melt the relay contacts. Therefore, in normal use, based on the measured current, the measured maximum inrush current must be within the allowable range.

Application program:


Application program	Max. number of communication objects	Max. number of group addresses	Max. number of associations	Secure group addresses
Multifunctional Actuator with Secure,3-Fold, Flush Mounted/1.0	104	250	250	250



Chapter 3 Dimension and Connection Diagram

3.1 Dimension diagram

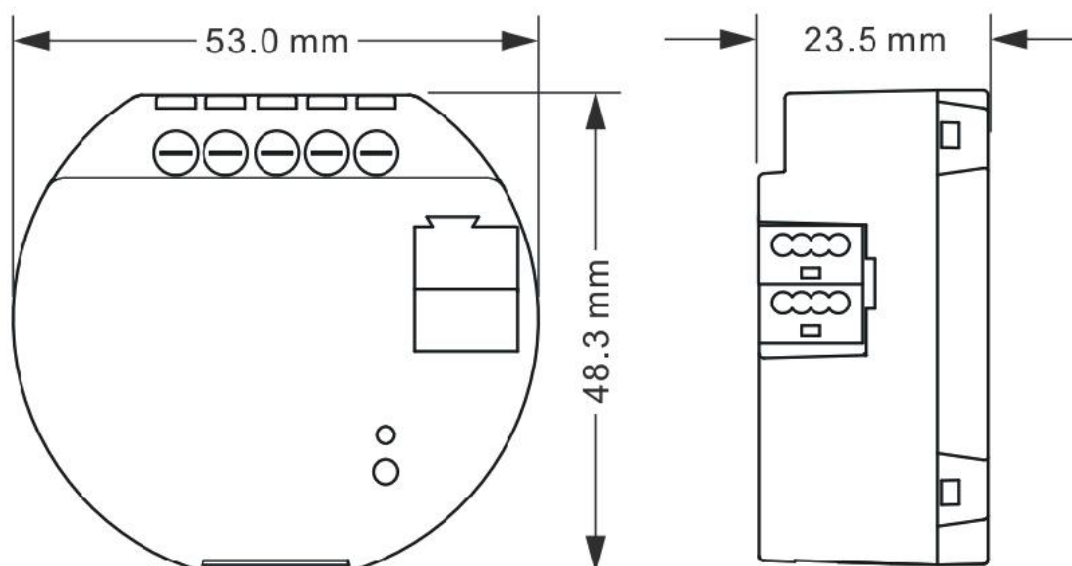


3.2 Connection diagram

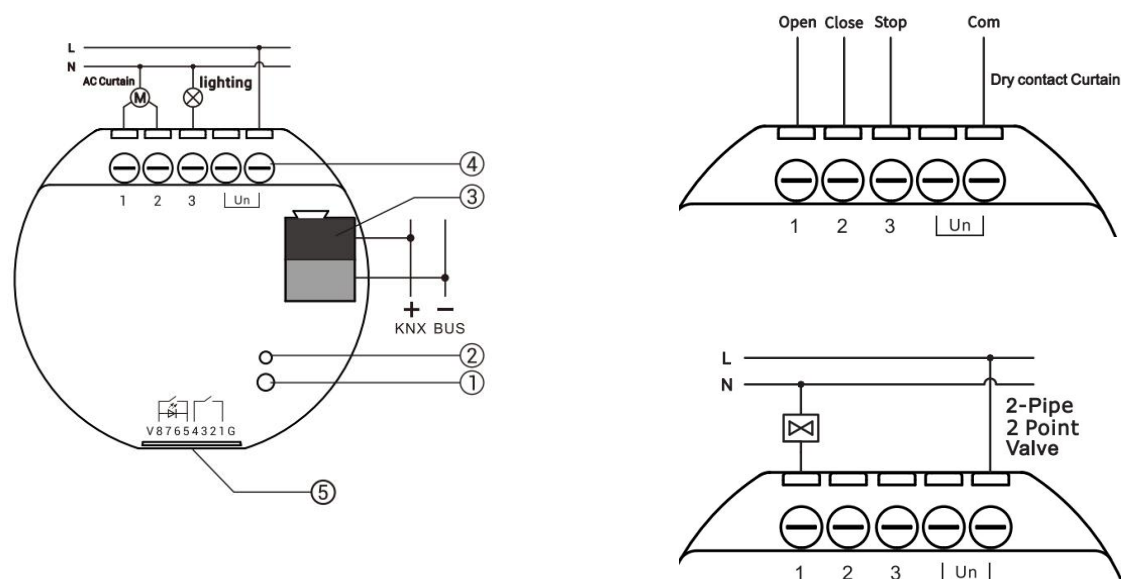

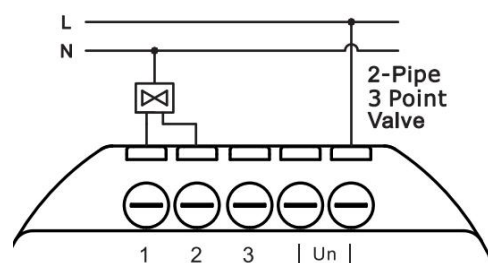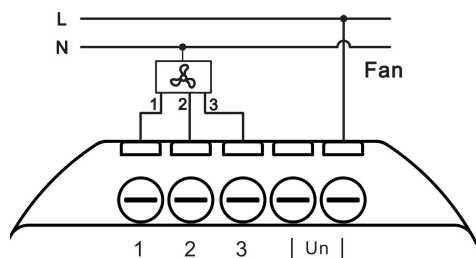

Input	1...8 — / — G	1...4 — / — G
LED Common Anode	NG	5...8 — / — V

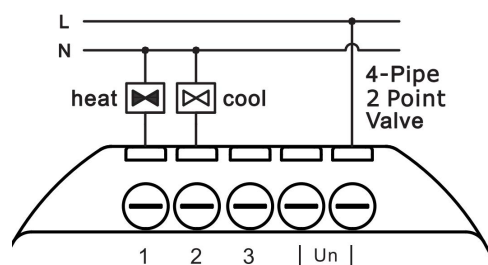

①② Programming button and LED

③ KNX bus terminal

④ Output terminals

⑤ Input/Output LED,

G: GND

V: VCC

1..8: Channel 1~8

Chapter 4 Parameter setting description in the ETS

The parameters will be described in the form of the function interfaces.

4.1. KNX Secure


Multifunctional Actuator with Secure,3-Fold,Flush Mounted is a KNX device that complies with the KNX secure standard. That is, you can run the device in safe way.



Fig.4.1 (1) "KNX Secure" parameter window

The device with KNX secure will be displayed notes on ETS, as shown as Fig.4.1(1).

 If secure commissioning is activated in ETS project, the following information must be considered during device debugging:



❖ It is essential to assign a project password as soon as a KNX Secure device is imported into a project. This will protect the project against unauthorized access.

The password must be kept in a safe place – access to the project is not possible without it (not even the KNX Association or device manufacturer will be able to access it)!

Without the project password, the commissioning key will not be able to be imported.

❖ A commissioning key is required when commissioning a KNX Secure device (first download). This key (FDSK = Factory Default Setup Key) is included on a sticker on the side of the device, and it must be imported into the ETS prior to the first download:

✧ On the first download of the device, a window pops up in the ETS to prompt the user to enter the key, as shown in Fig.4.1 (2) below.

The certificate can also be read from the device using a QR scanner (recommended).

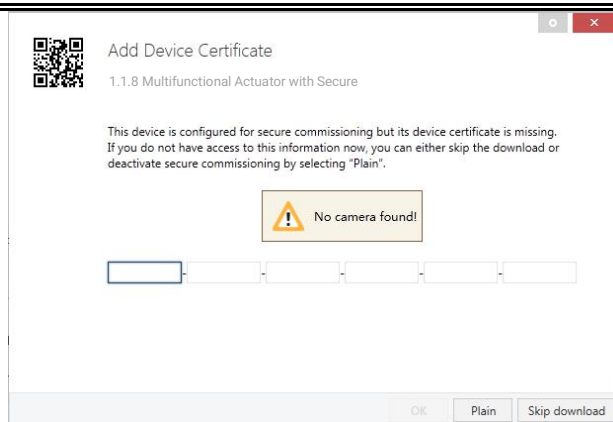


Fig.4.1(2) Add Device Certificate window

- ✧ Alternatively, the certificates of all Secure devices can be entered in the ETS beforehand.

This is done on the "Security" tab on the project overview page, as shown in Fig.4.1(3) below.

The certificates can be also added to the selected device in the project, as shown in Fig.4.1(4).

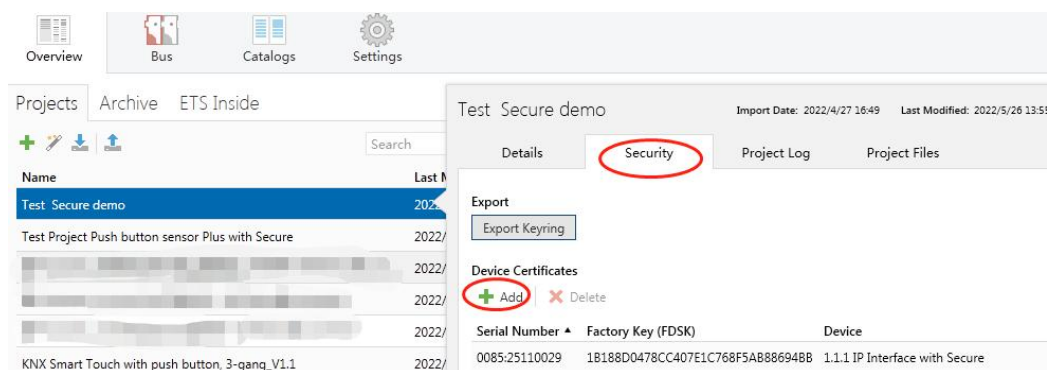


Fig.4.1(3) Add Device Certificate

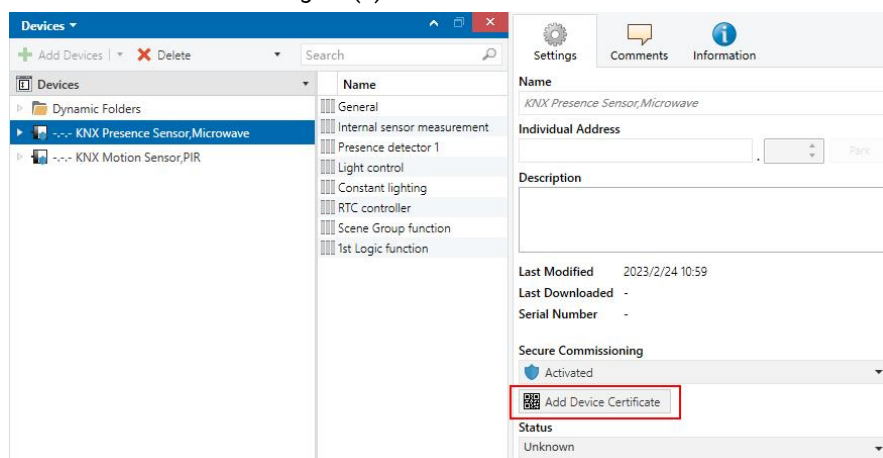


Fig.4.1(4) Add Device Certificate

- ✧ There is a FDSK sticker on the device, which is used for viewing FDSK number.

Without the FDSK, it will no longer be possible to operate the device in KNX Secure mode after a reset.

The FDSK is required only for initial commissioning. After entering the initial FDSK, the ETS will assign a new key, as shown in Fig.4.1(5) below.

The FDSK will be required again only if the device was reset to its factory settings (e.g. If the device is to be used in a different ETS project).

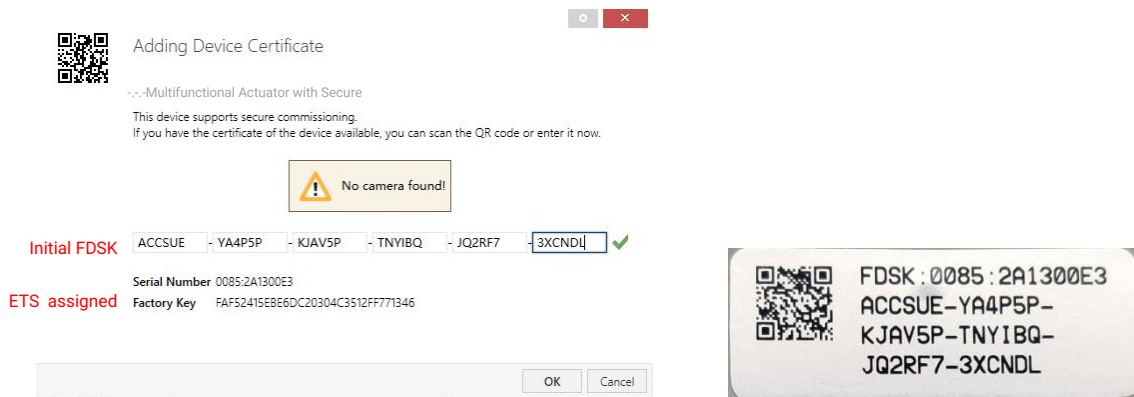


Fig.4.1(5)

Example:

If this application in the project needs to be tried with another device, it is no longer the original device. When the application is downloaded to a new device, the following prompt will appear on the left of Fig.4.1(6), click yes, the Add Device Certificate window will appear, then enter the initial FDSK of the new device, and you need to reset the device to the factory settings (it is not required if the device is still factory default; If it has been used, it will be required to reset, otherwise the following error message will appear on the right of Fig.4.1(6)), and then the device can be successfully downloaded again.

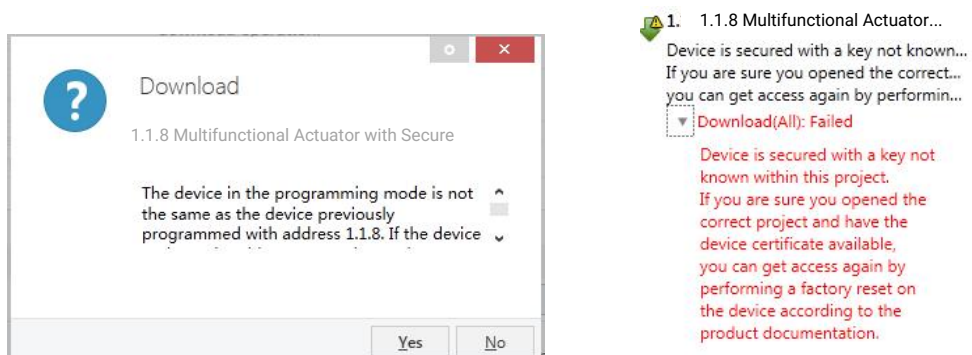


Fig.4.1(6) Example

Whether the device is replaced in the same project, or the device is replaced in a different project, the processing is similar: **Reset the device to the factory settings, then reassign the FDSK.**

After the device is downloaded successfully, the label Add Device Certificate turns gray, indicating that the key for this device has been assigned successfully, as shown in Fig.4.1(7) below.

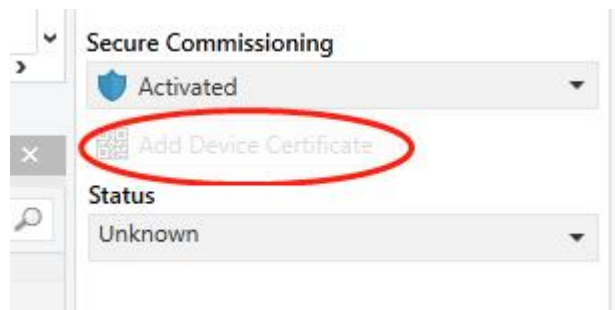


Fig.4.1(7)

ETS generates and manages keys:

Keys and passwords can be exported as needed to the use of security keys outside of the associated ETS projects. As shown in Fig.4.1(8) below, the file extension is .knxkeys.

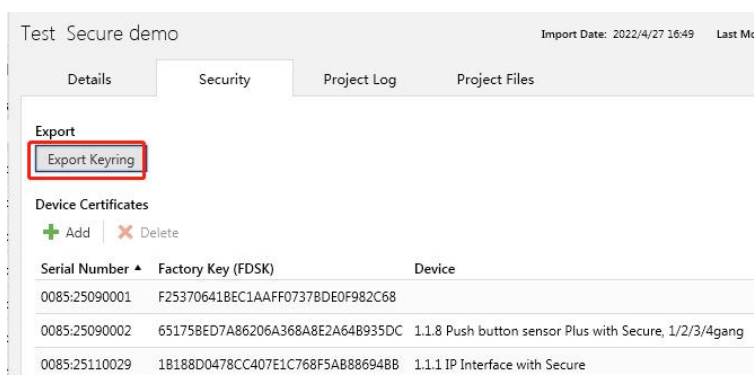


Fig.4.1(8)

Note: Any USB interface used for programming a KNX Secure device must support "long frames". Otherwise ETS will report a download failure information, as shown below.

4.2 Parameter window “General”

The parameter window “General” setting interface is shown in Figure 4.2. This interface is used to set some common parameters and apply to each function block.

Fig. 4.2 Parameter window “General”

Parameter “Operation delay after power on [5...250]s”

This parameter defines the time delay for the operation after the bus voltage recovery. Only when the delay is completed, the operation will be performed, and the device can send a telegram to the bus. During the delay period, the telegram received by the device from the bus is recorded, and is executed after the delay is completed.

This delay time does not include the initialization time of the device. After bus voltage is restored, the device start-up initialization time is about 3s. This operation delay starts after the device initialization time.

Note: During the delay period, that is, during the inoperable operation of the device, the device programming light indicates that the green light is always on, and after operation, the green light flashes.

Parameter “Limit number of send telegram”

This parameter is used to set the number of telegrams sent by the device to the bus, mainly to reduce the bus load.

When this parameter is enabled, Parameter “Period” and Parameter “Max. Number of tele. within a period [1...255]”

-- Parameter “Period”

Set the monitoring time for limiting the sending of telegrams. Options:

100ms

500ms

...

10min

Bus Voltage recovery, after the device initialization time and operation delay is completed, the monitoring time starts to count and starts counting the transmitted telegram. Once the maximum number of telegrams allowed to be sent is reached, there will be no telegram transmission on the bus until the monitoring time is over.

When this monitoring time is over, a new monitoring time begins and the telegram count restarts. Telegrams that were not sent during the last monitoring period will be sent in the next monitoring period, but up to 40 telegrams can be cached in the last monitoring period. For those duplicate telegrams in the buffer, only one telegram will be sent in the next cycle.

-- Parameter "Max. Number tele. within a period [1..255]"

This Parameter sets the maximum number of telegrams that can be sent during the monitoring time. Options: **1...255**

Note: The above two parameters only affect the telegram sent to the bus, and do not affect the operation performed.

Parameter "Sending cycle of "In operation" telegram [1.. 240, 0 = inactive]s"

The parameter sets the interval at which this module sends a telegram through the bus loop to indicate that the module is operating normally. When set to "0", the object "In operation" will not send a telegram. If the setting is not "0", the object "In operation" will send a telegram with logic "1" to bus for the set time period. Options: **0...240s, 0=no circular transmission.**

In order to reduce the bus load as much as possible, the maximum time interval should be selected according to actual needs.

Note: The time interval starts from the time when the bus resumes power supply, and has nothing to do with the bus power-on delay operation.

4.3 Parameter window “Output: Channel configuration”

The parameter setting interface “Channel configuration” is shown in Figure 4.3. This interface is used to set the output channel function.

Channel function: switch output, curtain output, fan output or valve output. Different functions occupy different relay channels.

Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > Outputs setting

KNX Secure

General

Outputs setting

Outputs config as

Output 1 Switch

Output 2 Switch

Output 3 Switch

3 switch outputs

☐

☐

☐

Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > Outputs setting

KNX Secure

General

+ Outputs setting

Outputs config as

Curtain output is fixed for Output 1& Output 2

If Curtain motor type is AC-motor, Output 3 as switch output

1 curtain output

Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > Outputs setting

KNX Secure

General

+ Outputs setting

Outputs config as

Output 3 Switch

Valve output is fixed for Output 1 if valve type is ON/OFF or PWM, and Output 2 as switch output

Valve output is fixed for Output 1&2 if valve type is 3 point, open and close

1 valve control 2-pipe and 1 switch outputs

☐

Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > Outputs setting

KNX Secure

General

+ Outputs setting

Outputs config as

Output 3 Switch

Heat output is fixed for Output 1

Cool output is fixed for Output 2

1 valve control 4-pipe and 1 switch outputs

☐

Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > Outputs setting

KNX Secure

General

+ Outputs setting

UI setting

Outputs config as

Fan output is fixed for

If Fan speed set to 1 level, Output 2&3 as switch output

If Fan speed set to 2 level, Output 3 as switch output

1 fan speed control output

1level:1; 2level:1&2; 3level: 1&2&3

<---Attention

<---Attention

Fig. 4.3 Parameter window "Channel configuration"

Parameter "Outputs config as"

This Parameter is used to set the channel function. Options:

Disable

3 switch outputs

1 curtain output

1 valve control 2-pipe and 1 switch outputs

1 valve control 4-pipe and 1 switch outputs

1 fan speed control output

The following table gives a simple output description for each function with an example:

Outputs	Switch	Curtain AC	Heating/Cooling/2-pipe	Fan control	4-pipe
Output 1	Switch 1	Curtain	Heat/Cool Valve (Output 1&2, if 3point, open and close; Output 2 as switch if 2-state ON/OFF or PWM)	Fan speed 1	Heat Valve
Output 2	Switch 2			Fan speed 2	Cool Valve
Output 3	Switch 3		Switch 3	Fan speed 3	Switch 3

From the above table, it can be seen that one switch output occupies one output channel, one curtain output (AC) occupies two output channels, and the fan output determines the output according to the level of fan speed. The valve output determines the number of output channels occupied according to the HVAC control mode and valve type, such as Heating/Cooling/2-pipe valve occupy one output channel if valve type is 2-state ON/OFF or PWM, or occupy two switch output channels if valve type is 3 point, open and close. While 4-pipe valve only support 2-state ON/OFF or PWM valve type, so it only occupies two output channels.

Comment Parameter Description:

-- Parameter "Curtain output is fixed for Output 1 & Output 2"

-- Parameter "If Curtain motor type is AC-motor, Output 3 as switch output"

This Parameter indicates that the output channel with AC motor curtain is fixed to Output 1 and Output 2. Output 1 is connected to Up/Open, Output 2 is connected to Down/Close.

When the curtain motor type is an AC motor, output 3 can be used as a switch output. If the motor type is a dry contact motor, output 3 is empty.

-- Parameter "Valve output is fixed for Output 1 if valve type is ON/OFF or PWM, and Output 2 as switch output"

-- Parameter "Valve output is fixed for Output 1&2 if valve type is 3 point, open and close"

When the output is a 2-pipe valve system, and the valve type is 2-state ON/OFF or PWM, the valve output channel is Output 1, regardless of whether the HVAC control mode is heating, cooling, or both heating and cooling. In this case, Output 2 can be used for switching output.

When the valve type is 3point, open and close, the valve output channels are Output 1 and Output 2.

-- Parameter "Heat output is fixed for Output 1"

-- Parameter "Cool output is fixed for Output 2"

When the output is a 4-pipe valve system, the heating valve output channel is Output 1, and the cooling valve output channel is Output 2. The valve type only supports 2-state ON/OFF or PWM, and the HVAC control mode only supports heating and cooling.

-- Parameter "Fan output is fixed for": **1level:1; 2level:1&2; 3level:1&2&3**

-- Parameter "If Fan speed set to 1 level, Output 2&3 as switch output"

-- Parameter "If Fan speed set to 2 level, Output 3 as switch output"

This parameter indicates that the output channel of the fan with 1 level fan speed is Output 1, and Output 2&3 can be used as switch output;

For the fan with 2 level fan speeds, the Output channels are Output 1 and Output 2, and Output 3 can be used as a switch output

For the fan with 3 level fan speeds, the Output channels are Output 1, Output 2 and Output 3.

The following chapters describe each function block:

4.4 Switch outputs-- Switch actuator

The switch outputs have a maximum of 3-fold output channels. Since the parameter and communication object assigned to each fold output are the same, a one-fold output is taken as an example.

4.4.1 Parameter window “Output X Switch”

The parameter setting interface “Output X Switch” is shown in Figure 4.4.1 The setting of this interface acts on the entire channel of the relay. In addition to setting the commonly used switching functions, it can also set the report of system power-on and switch status.

Fig. 4.4.1(1) Parameter window “Output X Switch”

Parameter “Description(max 30char.)”

This parameter is used to set the custom description of channel, up to input 30 characters.

Parameter “Work mode of the channel is”

This Parameter sets the work mode of the channel. Options:

Switch actuator

Heating actuator(Without controller)

“Switch Actuator”: for common switch control, such as lighting. This section will describe about the parameter functions and application under “Switch actuator” mode.

"Heating actuator (without controller)": is mainly for heating valve control, parameter functions and application refer to the details in the section 4.4.

Parameter "If bus recovery, output status is"

The Parameter sets the position of the relay contacts when the bus is powered up. Options:

Unchange

Contact open

Contact close

As before as bus fail

When selecting "Unchange", the contact will not change when bus power on;

When selecting "Contact open", the contact will be opened when bus power on;

When selecting "Contact close", the contact will be closed when bus power on;

When selecting "As before bus voltage fail", the contact position when bus power on is the same as that before power off.

Parameter "If bus failure, output status is"

The output can adopt a defined status after the bus voltage failure via this parameter. Options:

Unchange

Contact open

Contact close

When selecting "Unchange", the contact will not change when bus power on;

When selecting "Contact open", the contact will be opened when bus power on;

When selecting "Contact close", the contact will be closed when bus power on.

Parameter "After downloading, output status is"

This parameter set the contact position of the output after downloading. Options:

ontact open

As bus recovery

When selecting "***ontact open***", the contact is open after application downloading;

When selecting "As bus recovery", the contact will action according to the setting of parameter "If bus recovery, contact is" after application downloading.

Parameter "Set the reply mode of switch status"

This parameter defines how to respond the current switch status to the bus. There are two options to select. Options:

Respond after read only

Respond after change

If selecting "Respond after read only", the status telegram will not be sent out until receiving a read request telegrams via the object "reply switch status" from the bus.

If selecting "Respond after change", when switch status of the channel changes, object "switch status" will immediately send the current report telegram to the bus.

Parameter "Object value of switch status :"

Options:

0=contact close; 1=contact open

1=contact close; 0=contact open

When setting "0=contact close; 1=contact open", the value of object "switch status" is 0 indicates the contact of the relay will be closed; when is 1, indicates the contact of the relay will be closed will be open.

When setting "1=contact close; 0=contact open" indicates the opposite meaning.

Note: After programming or system reset, the switch status is determined, the object "switch status" will send status messages to the bus; if not, it will not be sent.

Parameter "Output status for the telegram"1"(telegram "0" is opposite of selection) "

This parameter defines the contact position when switch on the switch, which will be triggered by the communication object "switch". When enabling "input 0" in the logic function, it will use the communication object "switch" to modify the value of "input 0", rather than triggering the switch operation. In this case, this parameter setting is no significance. Options:

Contact open

Contact close

When select "Contact open", the contact position is open, when receive telegram "1", the contact will be open; when receive telegram "0", the contact close;

When select "Contact close", the contact position is close, when receive telegram "1", the contact will be closed; when receive telegram "0", the contact open.

Note: When the logic function input 0 enables, the object "switch" used as input of input 0, the operation of general switch will become invalid.

Parameter "Extension function"

This parameter defines whether enable the special functions of the switch actuator, The parameter setting interface "Ox: Function" will be seen when select "Enable", and able to set the special functions individually in Fig. 4.4.1(2)

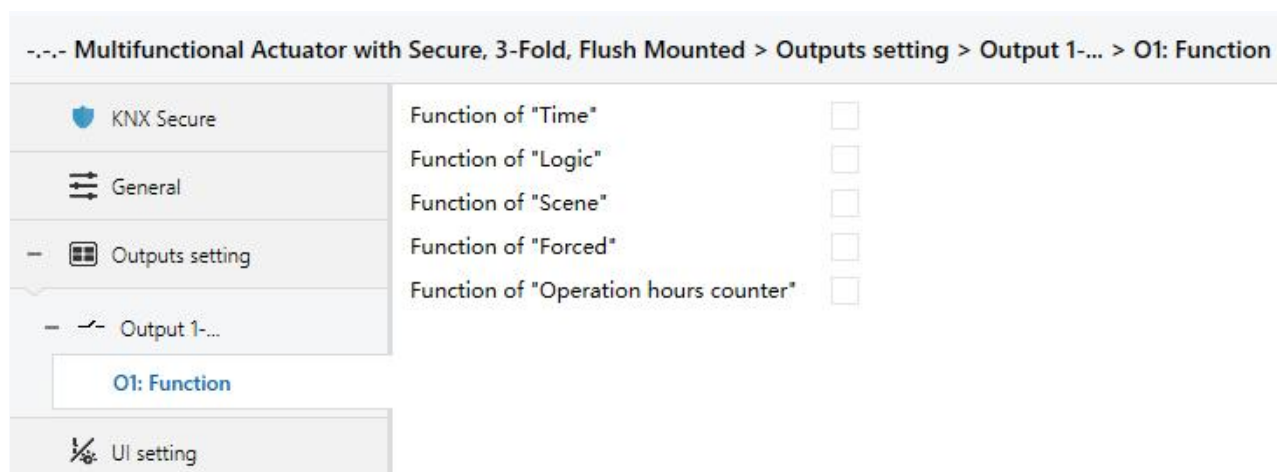


Fig. 4.4.1(2) Special function enable setting interface "Output X: Function"

4.4.2 Parameter window "Output X: Time"

This parameter window is visible when selecting "enable" in the parameter "Function of 'time'" in the window "Output X: Function" shown in Fig. 4.4.1(2). See Fig. 4.4.2. And the object "enable time function" will be also visible, which is used to disable the time function. After disabled, clear the current timer, stop running and ignore the delayed operation.

-. Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > Outputs setting > Output 1-... > O1: Time

<div> <div>KNX Secure</div> <div>General</div> <div>Outputs setting</div> <div>Output 1-...</div> <div>O1: Function</div> </div>	<div>Type of time function</div> <div>Delay for switch on(contact close) --[0...240]</div> <div>Delay for switch off(contact open) --[0...240]</div> <div>Delay for switch off(contact open) --[0...59]</div>	<div>Delay</div> <div>0 min</div> <div>0 s</div> <div>0 min</div> <div>0 s</div>
--	---	--

Fig. 4.4.2 Parameter window "Output X: Time-Delay"

Parameter "Type of time function"

The parameter defines the type of the time function, there are three options for the mode of work. Options:

Delay

Flashing

Staircase

4.4.2.1 Selection "Delay"

The parameter window "Output X: Time-Delay" setting interface in Fig. 4.4.2 will be shown when selecting "Delay". The delay switch can be started via the object "Delay function".

Parameter "Delay for switch on(contact close): --[0...240]min/[0...59]s"

This parameter defines the delay time of switching on. Options:

0...240 Minutes

0...59 Seconds

Setting the delay time to switch off when object receive the control telegram.

Parameter "Delay for switch off(contact open): --[0...240]min/[0...59]s"

This parameter defines the delay time of switching off. Options:

0...240 Minutes

0...59 Seconds

After receiving the delay off telegram, the switch is off once the delay over.

If receiving the re-trigger telegram again during delay, the delay will be reset.

4.4.2.2 Selection "Flashing"

The parameter window "Output X: Time-Flashing" setting interface in Fig. 4.4.2.2 will be shown up when selecting "Flashing" in the parameter "Type of time function". The flashing switch function is mainly used for lamp aging test.

Fig. 4.4.2.2 Parameter window "Output X: Time-Flashing"

Flashing function can be started via the object "Flashing function". It is able to set the flashing time in "Duration of switch on" or "Duration of switch off", which will restart the flashing when receiving the start flashing telegram, and define the contact position after flashing.

Parameter "Duration of switch on: --[0...240]min/[0...59]s"

This parameter defines the duration of the switch on the output when flashing. Options:

0...240 minutes

0...59 seconds

Note: It will not be executed unless the time is lower than the relay threshold switch frequency. Since there will be not sufficient energy to do it because of the frequent relay switching, and it may cause the time delay. The same situation will happen after the bus voltage recovery.

Parameter "Duration of switch off: --[0...240]min/[0...59]s"

This parameter defines the duration that the switch is turned off the output when flashing. Options:

0...240 minutes

0...59 seconds

Note: It will not be executed unless the time is lower than the relay threshold switch frequency. Since there will be not sufficient energy to do it because of the frequent relay switching, and it may cause the time delay. The same situation will happen after the bus voltage recovery.

Parameter "Number of ON-impulsed (1...255, 0=no limited)"

This parameter sets the flashing times. 0 means no limited. A flashing includes an on and an off. Options: **0...255**

Parameter "Output status after flashing"

This parameter defines the relay contact position after flashing. Options:

Unchange

Contact open

Contact close

Parameter "Contact mode of flashing"

This parameter is used to select the control mode of the flashing output. Options:

Start with "1", stop with "0"

Start with "0", stop with "1"

Start with "0/1", can not be stop

It will start flashing with value "1" when selecting "start with "1", stop with "0"", it will stop flashing with "0". The stop position is defined via last parameter.

It will start flashing with value "0" when selecting "start with "0", stop with "1""; it will stop flashing with "1". The stop position is defined via last parameter.

It will start flashing with either "1" or "0" when selecting "start with "1/0", can not be stopped"; under this circumstance it cannot terminate the flashing by value until operation over, unless it is blocked by other operation or wait for execution finish.

4.4.2.3 Selection "Staircase"

The parameter window "Output X: Time-Staircase" setting interface in Fig. 4.4.2.3 will be visible when selecting "Staircase" in the parameter "Type of time function".

Fig. 4.4.2.3 Parameter window "Output X: Time-Staircase"

The staircase lighting can be started via the object "Staircase function". The value that switches on the staircase lighting can be set via a parameter. The duration time of the lighting on is also set via a parameter.

Parameter "Duration of staircase lighting: --[0...1000]min/[0...59]s"

This parameter describes the duration time when switching on the staircase light function.

Options:

0...1000 Minutes

0...59 Seconds

Parameter "Control mode of staircase lighting"

This parameter defines the control mode on/off of the staircase lighting. Choose suitable control mode according to the needs. Options:

Start with "1", stop with "0"

Start with "1", no reaction with "0"

Start with "0/1", can not be stop

Start with "1", OFF with "0"

When selecting "Start with '1', stop with '0'", it will switch on the staircase lights with the value "1"; it will stop the time counting operation with "0" and don't change the contact position until changed by other operations;

When selecting "Start with '1', no reaction with '0'", it will switch on the staircase lights with the value "1" and no reaction with "0";

When selecting "Start with '0/1', can not be stop", it will switch on the staircase lights either with "0" or "1" but cannot stop it until the duration time finished or changed by other operation;

When selecting "Start with '1', OFF with '0'", it will switch on the staircase lights with the value "1", and off with "0".

Parameter "During the lighting time ,if receive the 'start' telegram"

Options:

Restart duration of staircase lighting

Extend duration time

Ignore the "start" telegram

If selecting "restart duration of staircase lighting", if the object "Staircase function" again receive the telegram of starting staircase lighting during the duration time, then the staircase lighting will restart and the duration time will be restart.

If selecting "Extend duration time", if the object "Staircase function" again receive the telegram of starting staircase lighting during the duration time, then the duration of the staircase lighting will be extended based on the current timing. For example, the duration of the staircase light is set to 60 seconds, and the current time is 20 seconds, then after receiving a start telegram, the lighting time of the staircase light will become $40+60=100$ seconds, and the staircase lighting will automatically turn off after 100 seconds. If multiple start telegrams are received continuously, the duration time will continue to accumulate before the maximum time limit is reached.

If selecting "Ignore the 'start' telegram", then it will ignore the receiving start telegram of the object "Staircase function" during the duration time.

4.4.3 Parameter window “Output X: Logic”

The parameter window “Output X: Logic” setting interface shown in Fig. 4.4.3, it will shown up in Fig. 4.4.1(2) “Output X: Function” when selecting “enable” in “Function of “Logic””.

Fig. 4.4.3Parameter window "Output X: Logic"

There are 2 logic communication objects to decide the status of each output, which are related to the "Switch".

It will re-operate when receiving a new object value as the final output status (close the contact with “1”, open it with “0”). The values of the communication object “Logic 1” makes logic operation with “switch” firstly, and then the result after that will makes operations with the value of “Logic 2”. This operation will ignore the objects which are unable, and continue to the next step with the ones who are enabled.

Parameter “Enable input 0”

This parameter is used to enable the function of logic operation of “Input 0”, whose value are wrote by the object "Switch".

In the both cases of “Input 0” enabled and not enabled, there are a little different parameters. All parameters of logic function have described in the following. If input x is disabled, the setting parameters will be less. If there are not certain parameters in the case, then it is also not available with the function of these parameters.

Parameter "Input 0/1/2 reverse"

This parameter defines whether negate the value of Input 0/1/2. Negate it with "Yes", don't with "No". Options:

No

Yes

Parameter "The input x of Logic (x = 1, 2)"

This parameter is used to enable Input 1 and Input 2. If enable, their communication objects "Logic 1" and "Logic 2" will be also visible.

Parameter "Logic function type"

This parameter set logic function type, provided three standard logic operations: AND, OR, XOR, and a GATE function. Explanation of gate function: it will use the next logic value as the enable mark of the previous logic. If the enable mark of the next logic is "1", that means it is able to use the previous logic value as the operation result. E.g. the value of input 1 is 1, that means the value of input 0 can be used as the operation result; if the value 2 is 1, that means the operation value of input 1 or input 0/1 can be used as the result. Options:

AND

OR

XOR

GATE

Below result of logic operation is possible:

Logic function	Object values					Description
	Input0(Switch)	Input1	Result of Input 0/1	Input2	Output	
AND	0	0	0	0	0	The result is 1 if both input values are 1.
	0	1	0	1	0	
	1	0	0	0	0	
	1	1	1	1	1	
OR	0	0	0	0	0	The result is 1 if one of both input values is 1
	0	1	1	1	1	
	1	0	1	0	1	
	1	1	1	1	1	
XOR	0	0	0	0	0	The result is 1 if both input values have a different value.
	0	1	1	1	0	
	1	0	1	0	1	
	1	1	0	1	1	
GATE	0	Closed		Closed		The input 0 of value is only allowed through if the GATE (input 1 and input 2) is open. Otherwise the input0 of value is ignored.
	0	Open	0	Open	0	
	1	Closed		Closed		
	1	Open	1	Open	1	

Note:

1. The value of the communication object "Input 1" makes logic operation with "Switch" firstly, and then the result will makes operations with the value of "Input 2", and the final operation result as the final output (close the contact with "1", open it with "0").

2. If an input is not enabled, the input is ignored.

3. If logical result needs to be negated, the first negated, then the next step.

4, The signal can be passed if the GATE is open, otherwise it is ignored. For example, the input 0 of value is ignored when the GATE of input 1 is closed, and the output is directly determined by the input 2.

Parameter "Invert result(if no,1=contact close,0=contact open,while yes is opposite)"

This parameter defines whether negate the logical operation results. Negate it with "yes", don't with "no". Options:

No

Yes

Parameter "Value of input 1/2 after bus recovery"

This parameter defines the default value of the object "Logic 1/2" after bus voltage recovery.

Options:

0

1

Value before power off

4.4.4 Parameter window "Output X: Scene"

The parameter window "Output X: Scene" setting interface shown in Fig. 4.4.4 will be visible when selecting "enable" in "Function of 'Scene'" in Fig. 4.4.(2) Here can set 8 scenes.

Fig. 4.4.4 Parameter window "Output X: Scene"

Parameter "Overwrite scene stored values during download"

This parameter sets whether to override the scene save value during application download.

Options:

When this parameter is disable: If selecting "Disable", the stored values before the download can be not overwritten by the parameterized scene value. When the scene is called, the scene saved before the download is still enabled until it is replaced by the new storage scene.

When this parameter is enable: If selecting "Enable", the stored values will be overwritten by the parameterized scene value during the download. When the scene is called, the scene will be set according to the parameters until it is replaced by the new storage scene.

Parameter "X > channel is assigned to (1... 64 ,0= no assignment),(X=1-8)"

It is able to allocate 64 different scene numbers to every output. There are 8 various scenes can be set per output. Options: **Scene 1... Scene 64** , **0=no assignment**

Note: 1-64 in the parameter setup corresponds to the scene number 0-63 received by the communication object "Scene". If a scene is stored via a learning telegram, the new scene will be active immediately and still be valid even if power failure.

Parameter "Output status is"

This parameter defines the switch output status when recall the scene. Options:

Contact open

Contact close

4.4.5 Parameter window "Output X: Forced"

The parameter window "Output X: Forced" setting interface in Fig. 4.4.5 "Output X: Function" will be visible with "Enable" in the parameter "Function of "Forced"" in Fig. 4.4.1(2)

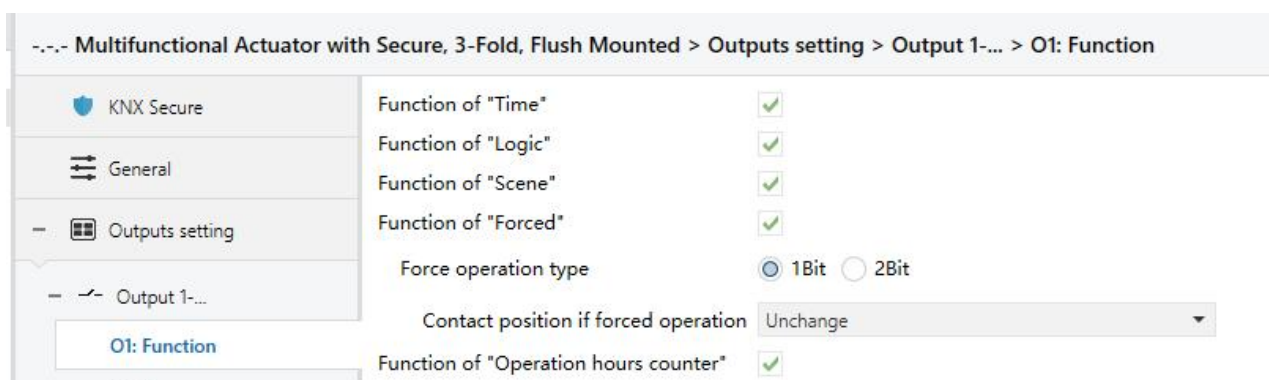


Fig. 4.4.5 Parameter window "Output X: Forced"

This function will be used in some special situation such as emergency, and are activated by the object "Forced output" with the highest priority in the system, which means only forced operation are valid in this case.

Parameter "Force operation type"

This parameter defines the control type of force operation. Options:

1bit

2bit

If selecting "1bit", the object "Forced output" receives the telegram "1" to activate force operation, telegram "0" to cancel the force operation.

If selecting "2bit" when the object "Forced output" receives a telegram value, the action as follow:

Value of the object "Forced output, X"	Action
00b (0) , 01b (1)	Cancel force operation, other operation can be performed
10b (2)	Force switch off (OFF)
11b (3)	Force switch on (ON)

When cancel the forced operation, the position of relay contact is unchanged. However, if time function(Delay/Flashing/Staircase) is running before forced operation, then time order will still continue during forced operation, if cancel the forced operation, time counting has not finished, it will continuously operate time function.

Parameter "Contact position if forced operation"

This parameter is visible if the option "1 bit" is selected via last parameter, which defines the contact position of force operation. Options:

Unchange

Contact open

Contact close

Unchange: the position of contact will keep on the current status;

Contact open: the position of contact is opened;

Contact close: the position of contact is closed;

The priority for various operations of switch actuator control:

Initialization(After the parameter download is completed) → force operation → general operation.

Forced operations have the highest priority, and all other operations are ignored during forced operations. Controlling telegrams received during forced operation is ignored

4.4.6 Parameter window "Output X: Operation hours counter"

The parameter window "Output X: Operation hours counter" setting interface in Fig. 4.4.6 will be visible with "enable" in the parameter "Function of "Operation hours counter"" in Fig. 4.4.1(2). The function is used for counting the time of relay on.

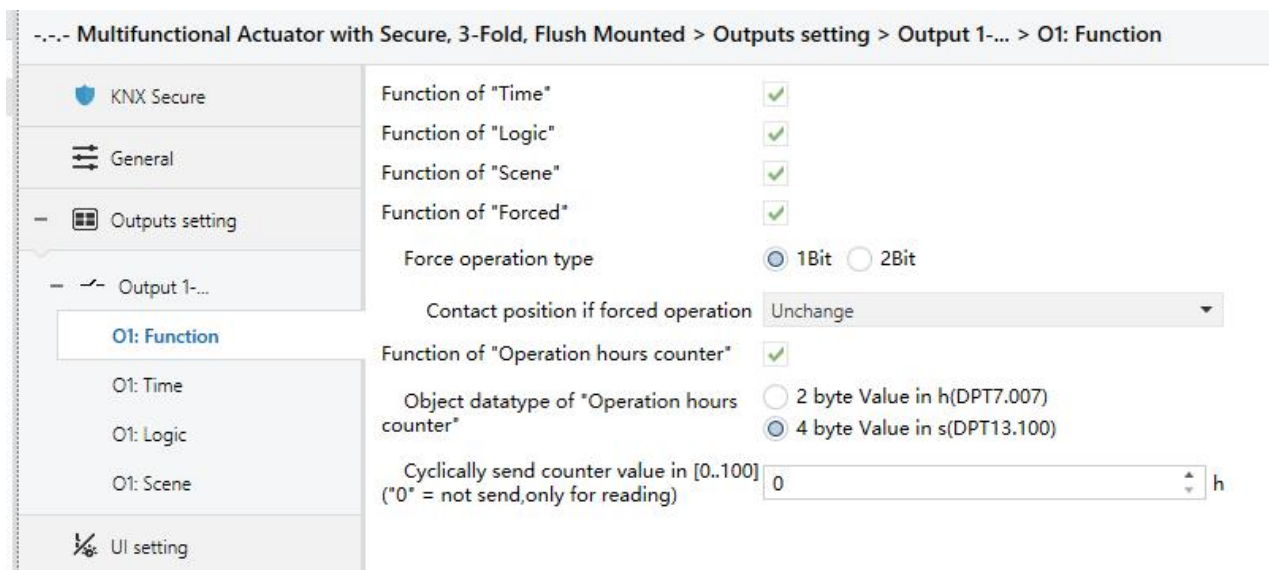


Fig. 4.4.6 Parameter window "Output X: Operation hours counter"

Parameter "Object datatype of "Operation hours counter"

This parameter is used to select data type of the operation hours counter. Options:

2 byte Value in h (DPT 7.007)

4 byte Value in s (DPT 13.100)

The "2 byte Value in h (DPT 7.007)" option indicates that the count value is 2 bytes; the "4 byte Value in s (DPT 13.100)" option indicates that the count value is 4 bytes.

Parameter "Cyclically send counter value in [0..100]h (0=not send, only for reading)"

The parameter determines the time interval to send the telegram which is used for counting the time of relay on. Available options: **0-100**

"0" means do not send. "1-100" means 1 hours to 100 hours cyclically send the value. When the parameter "Object of switch and operation hours counter" is set to 2 bytes, the operation time is in hours; when it is 4 bytes, the operation time is in s.

4.5 Switch outputs-- Heating actuator(without controller)

When option "Heating actuator (without controller)" of parameter "work mode of the channel is" is selected, parameter setting interface as shown in Fig. 4.5 Usually the device is used to control heating valve. We can realize constant room temperature via a temperature controller or a temperature sensor to command the operation of the device.

Each output has two different kinds of controlling command to select--1bit and 1 byte. When select 1bit, the controlling can be react through the telegram that communication object "On-off control value" has received; when 1 byte is selected, the controlling can be react through the telegram that communication "Control value(Continuous)" has received.

Control command "0%/OFF" means turn off the valve,"100%/ON" means turn on the valve. The mid value of 0-100% means the valve will be open for x% time in a cyclical time, and be off for the rest of the time.

--- Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > Outputs setting > Output 1-...

<ul style="list-style-type: none"> KNX Secure General Outputs setting Output 1-... UI setting 	<p>Description (max 30char.)</p> <p>Work mode of the channel is</p> <p>Valve type</p> <p>If bus failure, output status is</p> <p>If bus recovery, valve position</p> <p>PWM cycle time for continuous [60..65535]</p> <p>Control type</p> <p>Reply the status of contact state</p> <p>Function of monitoring</p> <p>Cyclic monitoring control value [0...65535]</p> <p>Valve position during fault</p> <p>Report fault status</p> <p>Function of forced operation</p> <p>Valve position during forced operation</p>	<p></p> <p> <input type="radio"/> Switch actuator <input checked="" type="radio"/> Heating actuator(without controller) </p> <p> <input checked="" type="radio"/> Normal (de-energised closed) <input type="radio"/> Inverted (de-energised open) </p> <p>Unchange</p> <p>0%[Closed]</p> <p>120 s</p> <p> <input checked="" type="radio"/> 1bit (on-off control or PWM) <input type="radio"/> 1byte (Continuous) </p> <p>Yes, 1=contact close; 0=contact open</p> <p><input checked="" type="checkbox"/></p> <p>120 s</p> <p>Unchange</p> <p><input checked="" type="checkbox"/></p> <p><input checked="" type="checkbox"/></p> <p>Unchange</p>
--	---	--

Fig. 4.5(1) Parameter window "Output X Heating actuator(without controller)_1bit (on-off control or PWM) "

--- Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > Outputs setting > Output 1-...

<div>KNX Secure</div> <div>General</div> <div>Outputs setting</div> <div>Output 1-...</div> <div>UI setting</div>	<div>Description (max 30char.)</div> <div>Work mode of the channel is</div> <div>Valve type</div> <div>If bus failure, output status is</div> <div>If bus recovery, valve position</div> <div>PWM cycle time for continuous [60..65535]</div> <div>Control type</div> <div>Reply the status for continuous control</div> <div>Reply the status of contact state</div> <div>Function of monitoring</div> <div>Cyclic monitoring control value [0...65535]</div> <div>Valve position during fault</div> <div>Report fault status</div> <div>Function of forced operation</div> <div>Valve position during forced operation</div>	<div></div> <div> <input type="radio"/> Switch actuator <input checked="" type="radio"/> Heating actuator(without controller) </div> <div> <input checked="" type="radio"/> Normal (de-energised closed) <input type="radio"/> Inverted (de-energised open) </div> <div>Unchange</div> <div>0%[Closed]</div> <div>120 s</div> <div> <input type="radio"/> 1bit (on-off control or PWM) <input checked="" type="radio"/> 1byte (Continuous) </div> <div>No reply</div> <div>Yes, 1=contact close; 0=contact open</div> <div><input checked="" type="checkbox"/></div> <div>120 s</div> <div>Unchange</div> <div><input checked="" type="checkbox"/></div> <div><input checked="" type="checkbox"/></div> <div>Unchange</div>
---	--	--

Fig. 4.5(2)Parameter window “Output X Heating actuator(without controller)_1byte(Continuous)”

Parameter “Valve type”

This parameter setting the valve type of the heating valve control. Options:

Normal(de-energised closed)

Inverted(de-energised open)

As for valve, “Normal(de-energised closed)” is applied for normal closed valve, “Inverted(de-energised open)” is applied for normal open valve.

Parameter “If bus failure, output status is”

This parameter setting the contact position when bus failure. Options:

Unchange

Contact open

Contact close

When select “Unchange”, contact of the channel will not change when bus failure;

When select “Contact open”, contact of the channel will open when bus failure;

When select “Contact close”, contact of the channel will close when bus failure;

After bus failure only when the relay possess enough energy can it perform the above setting.

Parameter "If bus recovery, valve position"

This parameter setting the valve position when bus recovery. Options:

0%[Closed]

10%[26]

20%[51]

...

80%[204]

90%[230]

100%[Open]

For example, 20%, the PWM cycle time as 100s(1min40s), then the cycle time of valve switching behavior is on for 20s, off for 80s.

Parameter "PWM cycle time for continuous[60..65535]s"

This parameter setting the PWM cycle time for continuous. Options: **60..65535**

Note: To extend the service life of the relay and the controlled equipment, the pulse period is set as long as possible.

Under the 1bit control type, pulse width control (PWM) is only used to control the actions of thermostat fault, forced operation mode, and bus voltage recovery.

Parameter "Control type"

This parameter setting the data type control telegram received. Options:

1bit(on-off control or PWM)

1byte(Continuous)

Under the "1bit" control, the valve control is similar to the normal switch control: the room temperature controller controls the output of the valve through the switch command. When the thermostat fails and the output does not receive the control signal, the valve will automatically carry out the PWM action according to the valve position set under the fault. The channel sets the PWM cycle time and is used for this purpose.

Under "1byte" control, the room thermostat sends control values between 0 and 255(corresponding to 0%.100%). This process is also called "continuous-action control ". the valve is closed at 0%, and at 100% it is fully open, at 0%...100% intermediate value, the channel controls the output through the pulse duty cycle adjustment.

Note: under the heating actuator function, each time the telegram of continuous regulation is received, the channel recalculates the duty cycle of the pulse according to the new control value, the time is up, and the action is carried out.

-- Parameter "Reply the status for continuous control"

This parameter is visible when previous parameter is selected as "1byte(Continuous)", for setting reply the status for continuous control. Options:

No reply

Yes, 0%=0, otherwise "1" (1 bit)

Yes, 0%=1, otherwise "0" (1 bit)

Yes, continuous control value (1 byte)

-- Parameter " "

Options:

No reply

Yes, 0=contact close; 1=contact open

Yes, 1=contact close; 0=contact open

When select "No reply", communication object will not reply the status for contact;

When select "0=contact close ; 1=contact open", when the value of communication object "status of contact" is "0" indicates contact close, when "1" indicates contact open;

When select "1=contact close; 0=contact open" has the contrary meaning.

Note: After programmed or system reset, if switch status is assure, object "status of contact" will send status telegram to the bus: if it is not assure, status telegram will not be sent.

Parameter "Function of monitoring"

This parameter setting whether to enable monitoring function.

The following parameters are visible when parameter "Function for monitoring is" is enable:

--Parameter "Cyclic monitoring control value[0..65535]s"

This parameter sets the time that the device monitors the control telegram from the thermostat. Normally the control telegram of the room thermostat is sent to the device at certain time intervals, and if one or more adjacent control telegrams are not received, the device's

function can indicate a communication or a thermostat fault in the room. If the controller's control message is not received within the time set by this parameter, the device automatically starts fault mode. The fault mode ends when the device receives the control telegram again. Every time a control telegram is received, the monitoring time will be reset. Option: **0..65535**

Note: If this function is activated, the room thermostat must periodically send a control telegram out. The monitoring time shall be greater than the interval when the controller sends the control telegram .

--Parameter "Valve position during fault"

This parameter is set in the valve position in fault mode, the valve will switch action according to the PWM cycle. Options:

0%[Closed]

10%[26]

...

100%[Open]

Unchange

For example, 20%, the PWM cycle time as 100s(1min40s), then the cycle time of valve switching behavior is on for 20s, off for 80s.

If select "Unchange", the valve position does not change.

--Parameter "Send object "Report fault status"

This parameter sets whether to send a telegram to report a fault in fault mode. If enabled, when the device does not receive a control value during the monitoring time, an error report is sent, and this output channel performs a dynamic action in fault mode until it is interrupted by another operation. When the control value is received again, the monitoring time starts again.

When this parameter is enabled, object "Report fault" will be active, when object "Report fault" is "1", indicates that this output channel enter fault mode,when"0" indicate this output channel is not fault.

Parameter "Function of forced operation"

This parameter setting whether to enable function of forced operation.

--Parameter "Valve position during forced operation"

This parameter setting the valve position during forced operation. Options:

0%[Closed]

10%[26]

...

100%[Open]

Unchange

If option “Unchange”, the valve position does not change.

At the end of the forced operation mode, the valve output state will return to the previous operation. For example, if the valve position under forced operation is 40% and the previous operation is 60%, then the valve output state will return to the valve position of 60% after exiting the forced operation.

During forced operation, monitoring time of the monitor is still continuous, and when the monitoring time is up, an error report will be sent, but the action under the fault cannot be executed, and it can only be executed after the forced operation is exited.

The priority for various operations of heating actuator:

Initialization(After the parameter download is completed)→force operation→general or fault operation

At the end of the forced operation mode, the status of switch output will return to the current control value or the fault status. During the force operation, the received control telegram of general operation will be recorded.

4.6 Curtain output

There is one output channel. This chapter will describe the curtain output function.

4.6.1 Parameter window “Output Curtain: Venetian Blind”

Parameter window “Output Curtain” setting interface can be shown in fig. 4.6.1 Here set the general parameters of output curtain.

Fig. 4.6.1 Parameter window “Output Curtain”

Parameter “Config channel function as:”

This parameter is used to define the output mode. Different output modes have different parameters and communications. Options:

Venetian Blind

Shutter

If selecting “Venetian Blind”, the output is for the Venetian Blind operation mode, which can operate the curtain with louvres.

If selecting “Shutter”, the output is similar with the Venetian Blind operation mode, except that it cannot adjust louvres.

The section details the parameters and communication objects for the “Venetian Blind” mode.

Parameter "Motor type"

This parameter is used to set the mode of curtain drive. Options:

AC-motor

Dry contact-motor

The option "AC-motor", is applied to driver of AC power.

The option "Dry contact-motor", is applied to driver of dry contact control.

——Parameter "Drive pulse time[1..50]*100ms"

This parameter is only visible when the option "Dry contact-motor" is selected via the above parameter, which is used to define the drive pulse time for the dry contact motor. Options: 1..50

The setting of this parameter needs to be considered in conjunction with the technical characteristics of the curtain.

——Parameter "Drive type"

This parameter is only visible when the option "Dry contact-motor" is selected via the above parameter, which is set according to the wiring of the dry contact motor. Options:

Three-wire

Four-wire

The option is "Three-wire", which is suitable for three-wire motors. For example, Open/Close/Com three wires are used, Open + Com connection controls the curtain opening, Close + Com connection controls the curtain closing, Open + Close + Com connection together control the curtain to stop moving.

The option is "Four-wire", which is suitable for four-wire motors. For example, Open/Close/Stop/Com four wires are use, Open + Com connection controls the curtain opening, Close + Com connection controls the curtain closing, Stop + Com connection control the curtain to stop moving.

Parameter "If bus recovery, position is"

The parameter is used to set the position where curtain moves, after the device on bus recovery. Options:

Unchange

Up

Down

Stop

If the option "Unchange" is set, the output contacts remain in their current position.

If the option "up" is set, the curtain is moved to the top after bus voltage recovery.

If the option "down" is set, the curtain is moved to the bottom after bus voltage recovery.

If the option "stop" is set, if the curtain is moving, it will be stopped after bus recovery.

All output contacts are opened after bus voltage recovery.

Note: If after programming or bus voltage recovery, the curtain actuator does not detect the current position of the curtain. The communication objects " position status0...100%" and "slat status 0...100%" have the default value "50%" and are not sent on the bus. Telegram will be sent to the bus after assure the position.

If after programming or bus voltage recovery a defined position of the curtain is required for the first time, it is first of all raised to the top or dropped to the bottom (toward near the target location moving) to determine the current position and then into the target position. Only the curtain finish a full running can confirm position.

Parameter "If bus failure, position is"

The parameter is used to set the position where curtain moves after on bus voltage failure. Options:

Unchange

Up

Down

Stop

If the option "Unchange" is set, the output contacts remain in their current position.

If the option "up" is set, the curtain is moved to the top after bus voltage failure.

If the option “down” is set, the curtain is moved to the bottom after bus voltage failure.

If the option “stop” is set, if the curtain is moving, it will be stopped after bus voltage failure.

Note: Before the power-down, the curtain is running, and in power-down it is required to perform a reverse operation, then this operation will not be implemented, but to maintain the current running state.

Parameter “After reference movement, Position is”

This parameter specifies how the curtain actuator behaves after a reference movement.

Options:

Disable

No reaction

Move to saved position

If “Disable” is selected, the reference movement is deactivated;

If “no reaction” is selected, the object “reference movement” receives a telegram “0”, the curtain is moved to the top; the object receives a telegram “1”, the curtain is moved to the bottom.

If “Moved to saved position” is selected, the object receives a telegram “1”, the curtain is moved to the bottom, then back to its original position; the object receives a telegram “0”, the curtain is moved to the top, then back to its original position.

During the movement of curtain, the curtain actuator continually determines the current position of the curtain as well as the angle position of the slat using the duration of individual movements. Over longer periods, slight inaccuracies may occur when determining the position due to temperature variations and aging processes. Therefore the curtain actuator uses the upper and lower limit positions to clearly define the current position of the curtain. Each time that the curtain is in the upper or lower limit position, the position is updated in the memory of the curtain actuator.

If the limit positions have not been reached during normal operation, a reference movement can be triggered via a bus telegram to move the curtain right to the top or right to the bottom. Depending on the parameter settings, the curtain either remains in the reference position after the reference movement or moves back into the saved position.

Parameter "Position of slat after arriving on lower end position"

The parameter can set the slat positions of slat after the lower end position is reached.

Options:

0%/10%/.../90%/100%

For example, if select "40%", when the object "Move UP/DOWN" receives a telegram "1", the curtain will move to the lower end position, then the slat positions are adjusted to 40%.

Note: the parameter only relates to the "Down" reaction (the parameter option with "Down"), the safety operation and the percentage value control way are not affected for the parameter.

Parameter "When blind is under end position, up/down object function is"

The parameter defines whether the curtain still can be moved via the object "Move UP/DOWN" when the curtain is under end position.

When this parameter is disabled, It can not be moved.

When this parameter is enabled, It can be moved, and the running time is the total move time.

Parameter "Set response mode for position"

The parameter defines the response mode for curtain position. Options:

Respond after read only

Respond after change

If select "Respond after read only", only when the device receive the current curtain position from other bus devices or the bus read the current curtain position, object "Position status 0..100%/Slat status 0..100%" send the information of curtain position to the bus.

If select "Respond after change", when the curtain position changes, object "Position status 0..100%/Slat status 0..100%" send the telegram to the bus, so as to report the curtain position.

4.6.1.1 Parameter window "Curtain: Drive"

--- Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > Outputs setting > Curtain-... > C: Drive

KNX Secure	Total travel time [20..50000]	600	*0.1s
General	Delay time from switch-on to moving [0..200]	0	*10ms
Outputs setting	Duration of Slat adjustment [10...250]	20	*10ms
Curtain-...	Total travel time of Slat 0..100% in [10..250]	100	*10ms
C: Drive	Pause on change in direction [5...255]	50	*20ms
C: Auto.	Additional travel time in upward direction [0..255]	0	*0.1s

Venetian Blind type (with louvers)

--- Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > Outputs setting > Curtain-... > C: Drive

KNX Secure	Total travel time [20..50000]	600	*0.1s
General	Delay time from switch-on to moving [0..200]	0	*10ms
Outputs setting	Pause on change in direction [5...255]	50	*20ms
Curtain-...	Additional travel time in upward direction [0..255]	0	*0.1s


Shutter type (without louvers)

Fig. 4.6.1.1 Parameter window "Curtain: Drive"

Parameter "Total travel time [20...50000]*0.1s"

This parameter sets the time required for the curtain to move the total stroke.

The total travel time is the time it takes for the curtain to move from the highest position to the lowest position (as shown below). When the louver actuator receives a command to move up or down, the louver moves according to the required direction until the louver receives a command to stop moving, or until it moves to the highest or lowest position, then the louver passes through itself. The limit switch turns the motor off. If the curtain are closed by the motor, the corresponding output of the connected actuator is still closed and the output connection will only be disconnected if the set total travel time has elapsed.

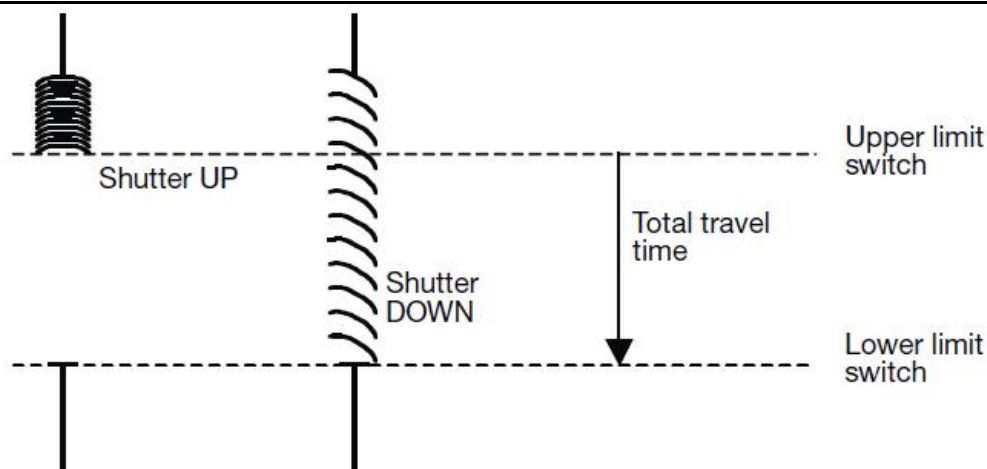

Note: The current position of the curtain during operation can also be determined with the help of the total move time. It is therefore important to measure and set the total move time as accurately as possible, particularly if the functions “Move to position via a 1 byte value” and “Status response” are used. Only then is it possible to calculate the current position of the curtain precisely.

Parameter “Delay time from switch-on to moving [0..200]*10ms”


This parameter sets the delay time for the curtain to start running, that is, after receiving the control command and closing the relay contact, how much time delay is required before the curtain starts to slide, that is, the start buffer time of the motor. Options: **0..200**

The setting of this parameter needs to be considered in conjunction with the starting technical characteristics of the curtain.

Parameter “Duration of slat adjustments [10..250]*10ms”

This parameter sets the curtain angle adjustment time, that is, the time when the louver angle is adjusted when a command to adjust the angle up or down is received. The shorter the time, the more accurate the angle is adjusted.

After the curtain moves up, the curtain angle is usually open. If the curtain is lowered now, the louver angle is first closed and then the curtain moves downward. If the curtain are now rising again, the louver angle first opens and then rises. (As shown below)

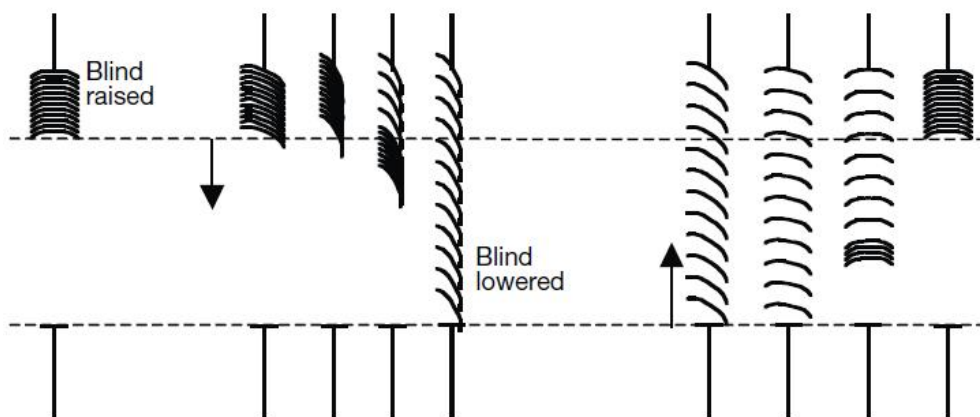

Parameter "Total travel time of slat 0...100% in [10...250]*10ms"

Here curtain angle adjustment is provided from the fully closed state to the fully opened state of the overall travel time required, the current position of the curtain during angular adjustment is determined by this parameter. Therefore, it is very important to measure and set the total travel time of the curtain adjustment as accurately as possible. Especially in the case of "Slat position via a 1 byte value" and "Status response", the only way to accurately calculate the current position of the louver is.

When the louver angle is adjusted by the object "Slat adj./Stop", the maximum number of times the louver angle needs to be adjusted from the fully closed state to the fully open state = the total travel time of the louver angle adjustment / the one adjustment time. The adjustment time of one time is set by the previous parameter. The shorter the set time, the more the adjustment will be, and the more accurate the angle.

Parameter "Pause on change in direction [5...255]*20ms"

This parameter is used to set the time to pause when the direction of movement or angle adjustment is changed. The pause time when the direction is changed needs to be considered in conjunction with the technical data provided by the manufacturer of the drive unit to obtain an appropriate value. Steering can prevent the curtain drive from damaging when it suddenly changes direction, extending the life of the drive.

Parameter "Additional travel time in upward direction [0..255]*0.1s"

This parameter is used to set an additional movement time when the curtain is moved up to the limit position. If the position does not reach the top, the travel time does not increase. In another case, after reaching the limit position of 0%, the steering is performed and moved to the target position (such as shifting), and the moving travel time is also increased.

Note: The extreme position here means that the curtain position is 0%, as long as it reaches this position, it will increase the moving travel time of the upward movement.

4.6.1.2 Parameter window "Curtain: Auto."

The parameter window "Curtain: Auto." setting interface is shown in Figure 4.6.1.2. Here, the automatic function and sun protection operation are mainly set. The louver actuator positions the louver based on the intensity of the light sensed by the illuminance sensor. For example, when the sun is very weak or there is no light coming through the window, the curtain can be raised to allow as much light as possible to enter the room. If there is strong sunlight outside the window, you can lower the curtain and adjust the louver angle so that direct light does not penetrate into the room, while the curtain are partially open to allow some diffuse light to enter the room.

--- Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > Outputs setting > Curtain... > C: Auto.

KNX Secure	Function automatic	<input checked="" type="checkbox"/>
General	Object value of "Enable auto. control" after bus voltage recovery	<input checked="" type="radio"/> "0"(Disable auto. control) <input type="radio"/> "1"(Enable auto.control)
Outputs setting	Automatically enable for auto.control	<input type="radio"/> No <input checked="" type="radio"/> Yes
Curtain...	Enable auto. control after [10..6000]	10 min
C: Drive	Sun protection	
C: Auto.	Position if sun = 1 (sun is shining)	Down
C: Scene	Delay time on sun = 1 [0..65535]	10 s
C: Safety	Position if sun = 0 (sun not shining)	Down
UI setting	Delay time on sun = 0 [0..65535]	10 s

Fig. 4.6.1.2 Parameter window "Curtain: Auto."

Parameter "Function automatic"

Set whether to activate the automatic control operation, that is, the automatic sun protection function.

When this parameter is enabled, the following parameters are visible, the objects "Enable auto. control", "Sun operation", "Sun: blind/shutter position 0...100%" and "Sun: slat adj. 0...100%" visible.

When the object "Enable auto. control" receives the message "1", the operation of the curtain switches to automatic operation; when the object "Enable auto. control" receives the message "0" or the user sends a direct move command (such as Up/down, moving to a certain position, etc. These commands cause the curtain to move), and the operation state exits the automatic operation, and switch to normal operation (If the scene is saved, these commands that are not directly moved will not cause the operation state to exit the automatic operation). The priority of normal operation and automatic operation is the same, but they cannot happen at the same time.

Note: After the automatic operation exits, the message "1" must be received again via the object "Enable auto. Control" or the duration of the automatic activation has elapsed (see the parameter "Enable auto. Control after [10...6000min]" below for details). Description), in order to enter the automatic operation again.

Parameter "Object value of 'Enable auto. control' after bus voltage recovery"

This parameter defines the initial value of the object "Enable auto. control" after a bus reset.

Options:

"0" (Disable auto. control)

"1" (Enable auto. control)

When the option is "0", the initial value of the object "Enable auto. Control" is 0, indicating that automatic operation is not enabled after the bus reset;

When the option is "1", the initial value of the object "Enable auto. Control" is 1, indicating that automatic operation is enabled after the bus reset.

Parameter "Automatically enable for auto. control"

This parameter defines whether automatic reactivation can be performed after the automatic operation exits via normal operation or the object "Enable auto. control". Options:

No

Yes

Select "yes" and the following parameters are visible.

-- Parameter "Enable auto. control after [10...6000min]"

This parameter defines the duration of the automatic activation of the automatic operation, that is, when the automatic operation is exited by a normal operation or an object, the automatic operation is activated again after the preset time of this parameter has elapsed.

If the automatic operation is interrupted by the object "Enable auto. control" or normal operation during this time, the duration of the automatic activation is re-timed.

Note: The safety operation has the highest priority. In the case of safety operation is activated, automatic operation cannot be activated automatically. The automatic activation duration will not start until the safety operation are canceled.

Parameter "Sun protection"

-- Parameter "Position if sun= 1 (Sun is shining) "

In the case where the sun is set here, the position of the louver, that is, the position at which the louver is moved when the object "Sun operation" receives the telegram "1", activates the sun protection. Options:

No reaction

Up

Down

Stop

Receive 1 byte value

If the option is "no reaction", the object "Sun operation" will maintain the current running state when it receives the message "1". If it is not running yet, it will not run. If there is currently running, it will continue to run.

If the option is "Receive 1 byte value" and the object "Sun operation" receives the telegram "1", the position of the curtain is determined by the object "Sun: blind/shutter position 0...100%" and "Sun: slat adj. 0...100%". The received value determines that after the bus reset or programming, the values of these two objects are undefined, the default value is "130" (51%), only when they receive the value, can be determined. The location, and any operational status, the values they receive are saved, including in the higher priority protection operation state.

-- Parameter "Delay time on sun= 1 [0...65535]s"

This parameter is used to set the delay time, that is, when the object "Sun operation" receives the message "1", the time when the curtain actuator delays the execution of the action is mainly to prevent the curtain actuator from frequently moving due to the fluctuation of the illumination. Make the device easy to damage and affect the life of the curtain motor. Options: **0...65535 s**


-- Parameter "Position if sun= 0 (Sun not shining) "

This parameter is similar to the previous one. The difference is that the location of the curtain when the object "Sun operation" receives the message "0" and the sun protection are canceled.

-- Parameter "Delay time on sun= 0 [0...65535]s"

This parameter is used to set the delay time, that is, when the object "Sun operation" receives the message "0", the time when the curtain actuator delays the execution of the action is mainly to prevent the curtain actuator from frequently moving due to the fluctuation of the illumination. Make the device easy to damage and affect the life of the curtain motor. Options: **0...65535 s**

Here's a simple automatic sun protection system:

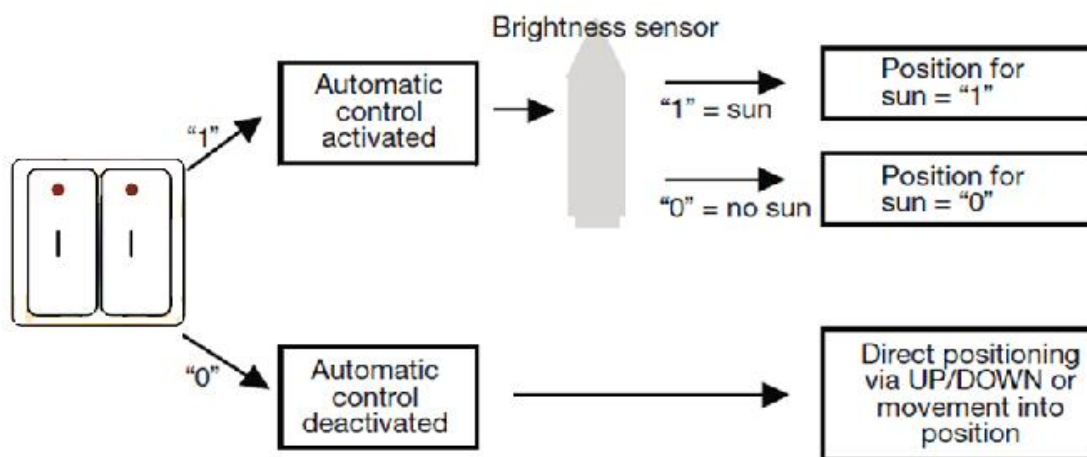

The illuminance sensor senses the intensity of the external light, the button can be switched on, or other control switches on the bus can be used.

Through the second switch of the button, the user can specify whether to enable the automatic sun protection function, or by manually controlling the curtain, if the automatic sun protection is activated by the switch, the curtain will automatically move until the automatic sun protection is disabled through the same switch, or the user sends a direct movement The command (up/down, or move to a location), the auto function is therefore disabled.

The curtain actuator receives information from the illuminance sensor to indicate if there is direct illumination outside the window. Once the adjustable delay has elapsed, the actuator will adjust the curtain according to the set position.

4.6.1.3 Parameter window "Curtain: Scene"

The parameter window "Curtain: Scene" setting interface is shown in Figure 4.6.1.3 The main setting scene is here. Each scene can be set with 8 scenes at the same time. Different scenes can define different louver positions and louver angles.

Fig. 4.6.1.3 Parameter window "Curtain: Scene"

Parameter "Overwrite scene stored values during download"

This parameter sets whether to override the scene save value during application download.

When this parameter is disabled: During the application download, the saved scene values are not overwritten by the parameter setting scene. When the scene is called, the scene saved before the download is still enabled until it is replaced by the new storage scene.

When this parameter is enabled: During the application download, the saved scene values will be overwritten by the parameter setting scene. When the scene is called, the scene will be set according to the parameters until it is replaced by the new storage scene.

Parameter "X > Channel is assigned to (1..64, 0= no assignment), (X=1-8)"

The curtain actuator can be assigned 64 different scene numbers per output. Each output can be set to 8 different scenes at the same time. Options: **1... 64 , 0=no assignment**

Note: The effective scene number in the parameter setting option is 1~64, and the corresponding message is 0~63.

If a scene is stored via a learning telegram, the new scene will be active immediately and still be valid even if power failure.

--Parameter "Shutter/Blind position: 0...100%(0%=top,100%=bottom)"

This parameter sets the position of the curtain when the scene is recalled: **0...100%**, **0%=top**, **100%=bottom**

--Parameter "Slat position: 0...100%(0%=open,100%=close)"

This parameter sets the angular position of the louver when the scene is recalled: **0...100%**, **0%=open**, **100%=close**

4.6.1.4 Parameter window "Curtain: Safety"

The parameter window "Curtain: Safety" setting interface is shown in Figure 4.6.1.4 Here, the safety operation function of the curtain is mainly set.

-. Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > Outputs setting > Curtain-... > C: Safety

KNX Secure

General

Outputs setting

Curtain-...

C: Drive

C: Auto.

C: Scene

C: Safety

UI setting

Safety function ☒

Safety operation 1 ☒

Trigger value of safety operation (Cancel safety is opposite of selection) ☒ 0 ☐ 1

Position on safety operation 1 Unchange

Cyclic monitoring time in [0..65535, 0= no monitoring] 120 s

Safety operation 2 ☒

Trigger value of safety operation (Cancel safety is opposite of selection) ☒ 0 ☐ 1

Position on safety operation 2 Unchange

Cyclic monitoring time in [0..65535, 0= no monitoring] 120 s

Position with canceling of the safety operation Unchange

Note: the priority of Safety operation 2 is higher than that of 1

Fig. 4.6.1.4 Parameter window "Curtain: Safety"

In this interface, the action that the curtain should perform after the safety operation function of each output is triggered is set. The settings for each channel are relatively independent and do not affect each other.

Parameter "Safety operation 1/2 "

This parameter is used to set whether to activate the safety operation function of the curtain.

Options:

Inactive

Active

When "Inactive" is selected, the safety operation function will not be activated;

If "Active" is selected, the safety operation function is activated, the following parameters will be visible, the trigger condition can be set for the safety operation function, and the corresponding communication object "Safety operation 1/2" will be enabled.

Parameter "Trigger value of safety operation (Cancel safety is opposite of selection)"

This parameter is used to set the trigger value for the safety operation function of the curtain.

Options:

0

1

When set to "0", if the communication object "Safety operation 1/2" receives a telegram with a logic value of "0", the safety operation will be triggered. When the telegram "1" is received, the safety operation will be canceled. At this time, the monitoring period of the safety operation function is reset;

When set to "1", if the communication object "Safety operation 1/2" receives a telegram with a logic value of "1", a safety operation will be triggered. When the telegram "0" is received, the safety operation is canceled. At this time, the monitoring period of the safety operation function is reset.

Parameter "position on safety operation 1/2"

This parameter sets the action that the curtain perform after the safe action is triggered.

Options:

Unchange

Up

Down

Stop

Parameter "Cyclic monitoring time in [0..65535, 0=no monitoring]s "

This parameter sets the monitoring period of the safety operation function, and the monitoring period should be at least twice as large as the cyclic transmission telegram period of

the sensor. In order to prevent the missing sensing signal when the bus is busy, the curtain are moved to the safety operation position. If the value of this parameter is set to "0", it means that the monitoring of the safety operation is not activated, and it can be directly controlled by the object of the safety operation.

During the set monitoring time, the object "Safety operation 1/2" does not receive the telegram to cancel the safety operation, it will trigger the safety operation function of the curtain, and the curtain will perform the action after the safety operation is triggered.

Parameter "Position with canceling of the safety operation"

This parameter sets the action that the curtain perform after the safety operation is canceled.

Options:

Unchange

Up

Down

Stop


This action will only be performed if a safety operation is performed, a cancel command is executed, and all safety operations on this channel are canceled, otherwise it is not executed.

The safety function of the curtain has a higher priority than other functions. If the safety operation function of a certain output is activated, the other operations of this output will be prohibited, and the safety 2 priority is higher than safety 1.

4.6.2 Parameter "Output Curtain: Shutter"

The parameter window "Output Curtain:Shutter" mode of operation of the curtain actuator is similar to the parameters and communication objects of the "Venetian Blind" mode of operation, and the functions are similar. The difference is that there is no function to adjust the louver angle in the "Shutter" mode. The "Shutter" mode only involves the movement of the curtains and does not have louvers.

The difference between "Shutter" and "Venetian Blind" is as follows:

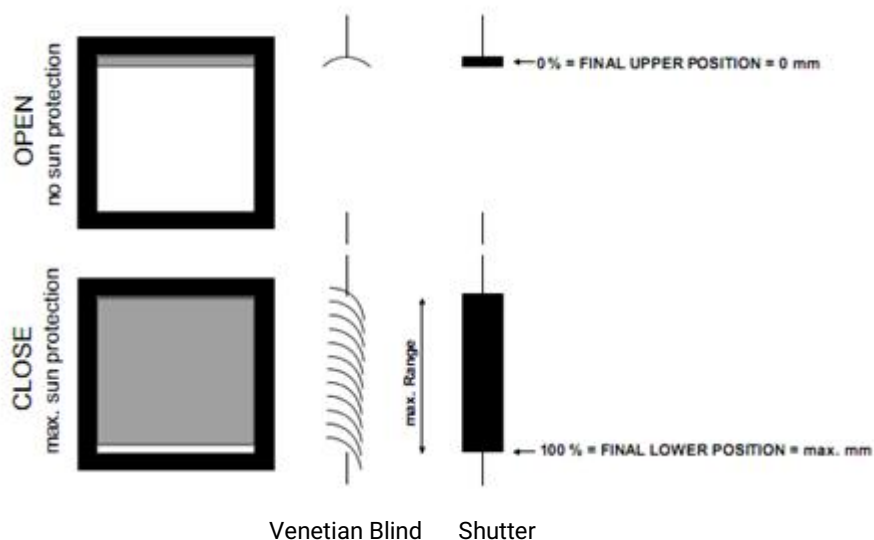

The "Shutter" working mode is not introduced here. The function can refer to the "Venetian Blind" working mode (except for the louver adjustment function).

The priority for various operations of curtain control:

Initialization(After the parameter download is completed)→safety 2→safety 1→General or automatic operation

Apply to the following points:

1. Any general operation command with movement can exit automatic operation.
2. In the case of safety operation are activated, automatic operation cannot be activated automatically. The automatic activation duration will not start until safety operation are exited.(Under safety operation, time counting will be interrupted, it will continue after exiting safety operation.)

4.7 Valve control

The valve control is divided into Heating, Cooling, 2 pipes system and 4 pipes system, their parameter setting are similar, just 4 pipes system occupies two output channels, and only support the valve control types “continuous, PWM” and “2 state-ON/OFF”.

While up to two output channels are occupied by Heating/Cooling/2-pipe system in the case of the valve control type “3 point, open and close”, only one output is occupied if “continuous, PWM” and “2 state-ON/OFF”.

Unused output channels can be used as switch outputs.

The valve output is divided into 2-pipe and 4pipe, which are set in the parameter interface “Channel configuration”, as shown in Figure 4.7(1). Under 2-pipe, the HVAC control mode has three modes: heating, cooling, and heating and cooling, as shown in Figure 4.7(2). Under 4-pipe, the HVAC control mode is only heating and cooling, as shown in Figure 4.7(3). Regardless of whether the valve output is 2-pipe or 4-pipe, their parameters are basically similar. The following will describe their parameter functions uniformly.

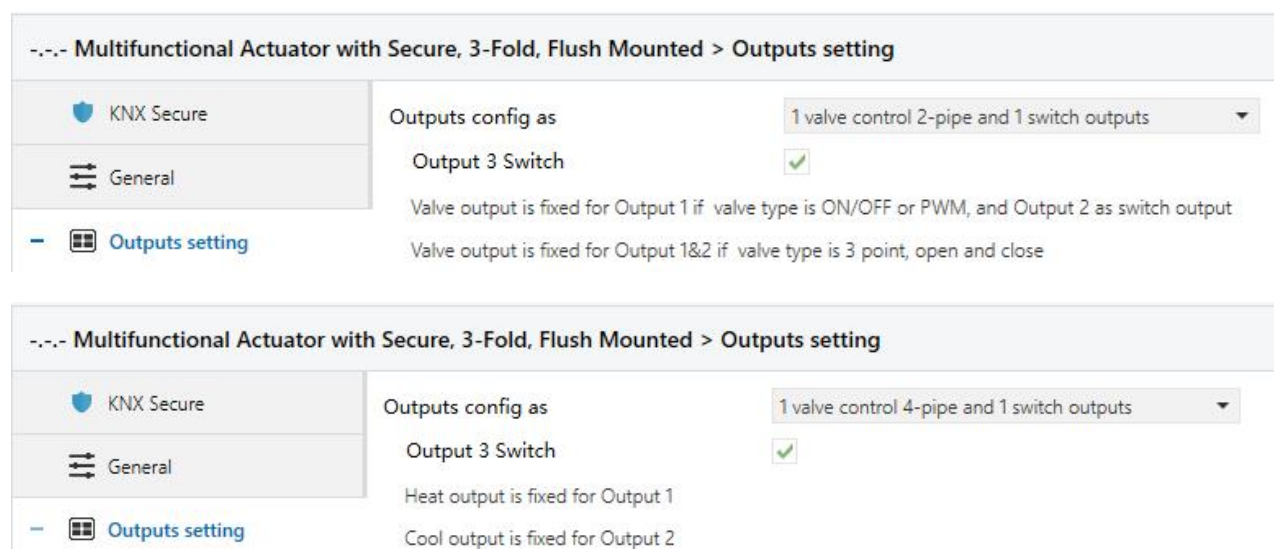


Fig. 4.7(1) Parameter window “Channel configuration--valve control”

--- Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > Outputs setting > 2-pipe Valve-...

<div> <div>KNX Secure</div> <div>General</div> <div>Outputs setting</div> <div>2-pipe Valve-...</div> <div>V: Heating</div> <div>Output 2-...</div> </div>	<div>Description (max 30char.)</div> <div>HVAC control mode</div> <div>Monitoring control value</div> <div>Monitoring period of control value [10..65535]</div> <div>Reply mode of Obj."Control value fault"</div> <div>Control value after fault occurs [0..100]</div>	<div></div> <div>Heating</div> <div><input checked="" type="checkbox"/></div> <div>60 s</div> <div> <input type="radio"/> Respond after read only <input checked="" type="radio"/> Respond after change </div> <div>0 %</div>
--	---	--

Fig. 4.7 (2) Parameter window "Output Valve--Heating"

--- Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > Outputs setting > 2-pipe Valve-...

<div> <div>KNX Secure</div> <div>General</div> <div>Outputs setting</div> <div>2-pipe Valve-...</div> <div>V: Cooling</div> <div>Output 2-...</div> </div>	<div>Description (max 30char.)</div> <div>HVAC control mode</div> <div>Monitoring control value</div> <div>Monitoring period of control value [10..65535]</div> <div>Reply mode of Obj."Control value fault"</div> <div>Control value after fault occurs [0..100]</div>	<div></div> <div>Cooling</div> <div><input checked="" type="checkbox"/></div> <div>60 s</div> <div> <input type="radio"/> Respond after read only <input checked="" type="radio"/> Respond after change </div> <div>0 %</div>
--	---	--

Fig. 4.7 (3) Parameter window "Output Valve--Cooling"

--- Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > Outputs setting > 2-pipe Valve-...

<div> <div>KNX Secure</div> <div>General</div> <div>Outputs setting</div> <div>2-pipe Valve-...</div> <div>V: Heating/Cooling</div> <div>Output 2-...</div> <div>Output 3-...</div> </div>	<div>Description (max 30char.)</div> <div>HVAC control mode</div> <div>HVAC System</div> <div>Monitoring control value</div> <div>Monitoring period of control value [10..65535]</div> <div>Reply mode of Obj."Control value fault"</div> <div>Control value after fault occurs [0..100]</div>	<div></div> <div>Heating and Cooling</div> <div>2 pipes system</div> <div><input checked="" type="checkbox"/></div> <div>60 s</div> <div> <input type="radio"/> Respond after read only <input checked="" type="radio"/> Respond after change </div> <div>0 %</div>
--	--	--

Fig. 4.7 (4) Parameter window "Output Valve--Heating and Cooling (2-pipes)"

--- Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > Outputs setting > 4-pipe Valve-...

<ul style="list-style-type: none"> KNX Secure General Outputs setting 4-pipe Valve-... <ul style="list-style-type: none"> V: Heating V: Cooling Output 3-... 	<p>Description (max 30char.)</p> <p>HVAC control mode: Heating and Cooling</p> <p>HVAC System: 4 pipes system</p> <p>Number of control value: 2 control value</p> <p>Monitoring control value: <input checked="" type="checkbox"/></p> <p>Monitoring period of control value [10..65535]: 60 s</p> <p>Reply mode of Obj. "Control value fault": <input type="radio"/> Respond after read only <input checked="" type="radio"/> Respond after change</p> <p>Control value after fault occurs [0..100]: 0 %</p>
---	---

Fig. 4.7(5) Parameter window "Output Valve-Heating and Cooling (4-pipes)"

Parameter "HVAC Control mode"

This parameter is used to set the HVAC control mode. Options:

Heating

Cooling

Heating and Cooling

Heating: The HVAC system can only achieve heating function;

Cooling: The HVAC system can only achieve cooling function;

Heating and cooling: The HVAC system can achieve both heating and cooling function.

Parameter "HVAC System"

This parameter is visible when select 2 pipes or 4 pipes system, for indicating HVAC system, i.e. the type of pipe in which the fan coil enters and exits the water.

2 pipes system: Two-pipe system, using one inlet and outlet pipe for heating and cooling, that is, hot water and cold water share a valve control;

4 pipes system: Four-pipe system, which has its own inlet and outlet pipes for heating and cooling, and requires two valves to control the ingress and egress of hot and cold water.

Parameter "Number of control value"

This parameter is visible when select "Valve control (4-pipe)". It is used to indicate that there are two control values under 4 pipes system, one for controlling the heating valve and the other controlling the cooling valve.

Parameter "Monitoring control value"

This parameter sets whether to enable monitoring the control value.

When this parameter is enabled: The following parameters are visible.

-- Parameter "Monitoring period of control value[10..65535]s

This parameter sets the time period for monitoring the control value. If the control value has not been received within this time, the device will consider the external controller error and the valve will output according to the control value set by the next parameter. Options: **10...65535s**

-- Parameter "Reply mode of Obj. "Control value fault""

This parameter defines the reply mode when the external control value is incorrect. Options:

Respond after read only

Respond after change

Respond after read only: The object "Control value fault" sends the current state to the bus only when the device receives the read status from other bus device or bus.

Respond after change: When the status changes or the device receives a request to read the status, the object "Control value fault" immediately sends a message to the bus to report the current status.

-- Parameter "Control value after fault occurs [0..100]%"

When an error occurs in the external controller, the device will output the valve according to the control value set by this parameter. Options: **0...100 %**

If the valve type is ON/OFF or PWM type, then when the control value set by this parameter is >0%, the valve is opened; when the control value is set to 0%, the valve is closed.

4.7.1 Parameter window “Vx: Heating/Cooling”

The parameter window “Valve: Heating” and “Valve: Cooling” setting interface are shown in Figures 4.7.1(1) and 4.7.1(2). These two interfaces are mainly used to set the valve control mode and related parameters of the heating and cooling valve. Different valve types are applicable to different control modes. Therefore, when setting the control mode, it needs to be considered in combination with the valve type.(Control modes and parameters of the valve under both 2 pipes and 4 pipes system are similar, here no longer explain.)

--- Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > Outputs setting > 2-pipe Valve-... > V: Heating

<div> <div>KNX Secure</div> <div>General</div> <div>Outputs setting</div> <div>2-pipe Valve-...</div> <div>V: Heating</div> <div>Output 2-...</div> <div>Output 3-...</div> <div>UI setting</div> </div>	<div>Valve control mode</div> <div>2 state-ON/OFF</div> <div>Valve type</div> <div> <input checked="" type="radio"/> Normal(de-energised closed) <input type="radio"/> Inverted(de-energised open) </div> <div>If bus recovery, valve position</div> <div> <input checked="" type="radio"/> Unchange <input type="radio"/> Close valve </div> <div>If bus failure, valve position</div> <div> <input checked="" type="radio"/> Unchange <input type="radio"/> Close valve </div> <div>Reply mode for valve status</div> <div> <input type="radio"/> Respond after read only <input checked="" type="radio"/> Respond after change </div> <div>Valve purge function</div> <div><input type="checkbox"/></div> <div>"Disable Heating" object function</div> <div><input type="checkbox"/></div>
--	---

Fig. 4.7.1(1) Parameter window “Valve: Heating”

--- Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > Outputs setting > 2-pipe Valve-... > V: Cooling

<div> <div>KNX Secure</div> <div>General</div> <div>Outputs setting</div> <div>2-pipe Valve-...</div> <div>V: Cooling</div> <div>Output 2-...</div> <div>Output 3-...</div> </div>	<div>Valve control mode</div> <div>2 state-ON/OFF</div> <div>Valve type</div> <div> <input checked="" type="radio"/> Normal(de-energised closed) <input type="radio"/> Inverted(de-energised open) </div> <div>If bus recovery, valve position</div> <div> <input checked="" type="radio"/> Unchange <input type="radio"/> Close valve </div> <div>If bus failure, valve position</div> <div> <input checked="" type="radio"/> Unchange <input type="radio"/> Close valve </div> <div>Reply mode for valve status</div> <div> <input type="radio"/> Respond after read only <input checked="" type="radio"/> Respond after change </div> <div>Valve purge function</div> <div><input type="checkbox"/></div> <div>"Disable Cooling" object function</div> <div><input type="checkbox"/></div>
--	---

Fig. 4.7.1(2) Parameter window “Valve: Cooling”

Parameter "Valve control mode"

This parameter is used to set the type of valve to be controlled. Options:

- 2 state-ON/OFF**
- Continuous, PWM**
- 3 point, open and close**

2 state-ON/OFF: Two-point switch control mode, suitable for ordinary on-off valve, the valve is based on the received switch control value switch output;

Continuous, PWM: PWM continuous control mode, the valve performs periodic switching output according to the control value received by the object.;

3 point, open and close: The control type is suitable for driving three-wire valves, and the valve opening is controlled according to the control value of the valve. **Note: This valve type is only applied to 2-pipe, because there are not enough relay output channels to support 4-pipe.**

The following takes the heating/cooling valve parameter interface as an example to illustrate the parameter settings of three different modes, and other valve is similar.

4.7.1.1 2 state-ON/OFF

The parameter setting interface is shown in Figure 4.7.1.1

Fig. 4.7.1.1 Parameter window "2 state-ON/OFF"

Parameter "Valve type"

This parameter sets the direction of the valve switch. Options:

Normal(de-energised closed)

Inverted(de-energised open)

For on-off valves, "Normal (de-energised closed)" is suitable for normally closed switching valves, and "Inverted (de-energised open)" is suitable for normally opening switching valves.

Parameter "If bus recovery, valve position"

This parameter sets the position of the valve after the bus voltage is reset. Options:

Unchange

Close valve

Unchange: After the bus voltage is powered down, the valve status remains unchanged;

Close valve: Valve closed.

Note: After the application programming , the valve status is off by default.

Parameter "If bus failure, valve position"

This parameter sets the position of the valve after the bus voltage is powered down. Options:

Unchange

Close valve

Unchange: After the bus voltage is powered down, the valve status remains unchanged.;

Close valve: valve closed.

Parameter "Reply mode for valve status"

This parameter defines how the valve status responds. Options:

Respond after read only

Respond after change

Respond after read only: The object "Valve status, Heat/Cool" sends the current status to the bus only when the device receives a status read from another bus device or bus.

Respond after change: When the status changes or the device receives a request to read the status, the object "Valve status, Heat/Cool" immediately sends a telegram to the bus to report the current status.

Parameter "Valve purge function"

When this parameter is enabled: A 1-bit communication object "Trigger valve purge, Heat/Cool" is visible for triggering the valve cleaning operation while the following parameters are visible.

-- Parameter "Duration of valve purge time[1...255]min"

This parameter sets the duration of the valve cleaning. During this time, the valve is fully open. When this time passes, the state before cleaning is re-established. Options: **1...255min**

If the heating/cooling operation is prohibited during the cleaning, the cleaning will continue.

And during the cleaning, the received operation prohibition telegram and the valve control telegram are both recorded, and the valve status will be updated according to the new telegrams after the cleaning is completed.

-- Parameter "Automatic valve purge"

Visible when the valve cleaning function is enabled.

When this parameter is enabled: Enable automatic valve cleaning function, the following parameters can be seen.

-- Parameter "Purge Cycle in weeks[1...12]"

This parameter defines the period of automatic valve cleaning. In weeks, the time starts from the power-on of the device, and the cleaning operation is triggered after timing.

Once the cleaning is completed, the time is reset, whether it is done by automatic cleaning or by object-triggered cleaning, which is reset. Options: **1...12**

-- Parameter "Reply mode for valve purge status (1bit)"

This parameter is visible when the valve cleaning function is enabled and defines the feedback mode for the valve cleaning status. Options:

Respond after read only

Respond after change

Respond after read only: The object "Valve purge status, Heat/Cool" sends the current status to the bus only when the device receives a status read from another bus device or bus;

Respond after change: When the status changes or the device receives a request to read the status, the object "Valve purge status, Heat/Cool" immediately sends a message to the bus to report the current status.

Parameter "'Disable heating/cooling' object function"

When this parameter is enabled A 1-bit communication object "Disable, Heat/Cool" is visible and can be used to disable heating/cooling operations while the following parameters are visible.

-- Parameter "Trigger object value"

This parameter sets the value of the message used to disable the heating/cooling operation. Options:

0=Disable/1=Enable

1=Disable/0=Enable

0=Disable/1=Enable: When the object "Disable, Heat/Cool" receives the message value "0", the heating/cooling operation is prohibited, and when "1" is received, it is reactivated;

1=Disable/0=Enable: When the object "Disable, Heat/Cool" receives the message value "1", the heating/cooling operation is prohibited, and when "0" is received, it is reactivated.

Note: When the operation is disabled, the valve position is immediately adjusted back to the off state. When enabled again, the valve state will be updated according to the current control

value. During the prohibition period, the received telegram is recorded, and fault monitoring still continues.

The cleaning function and the function of disabling the valve control are similar in each control mode. The following two control modes will not be repeated.

4.7.1.2 Continuous, PWM

The parameter setting interface is shown in Figure 4.7.1.2.


-. Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > Outputs setting > 2-pipe Valve-... > V: Heating/Cooling

<div> <div>KNX Secure</div> <div>General</div> <div>Outputs setting</div> <div>2-pipe Valve-...</div> <div>V: Heating/Cooling</div> <div>Output 2-...</div> <div>Output 3-...</div> <div>UI setting</div> </div>	<div>Valve control mode</div> <div>Valve type</div> <div>PWM cycle time [10..6000]</div> <div>If bus recovery, valve position</div> <div>If bus failure, valve position</div> <div>Reply mode for valve status</div> <div>Valve purge function</div> <div>"Disable Heating/Cooling" object function</div>	<div>Continuous,PWM</div> <div> <input checked="" type="radio"/> Normal(de-energised closed) <input type="radio"/> Inverted(de-energised open) </div> <div>120 s</div> <div> <input checked="" type="radio"/> Unchange <input type="radio"/> Close valve <input checked="" type="radio"/> Unchange <input type="radio"/> Close valve <input type="radio"/> Respond after read only <input checked="" type="radio"/> Respond after change </div> <div> <input type="checkbox"/> <input type="checkbox"/> </div>
--	---	---

Fig. 4.7.1.2 Parameter window "Continuous, PWM"

This control mode is suitable for driving two-wire valves.

This control mode has only two states "fully open" and "completely closed". The valve performs cyclic switching operation according to the control value and PWM cycle. For example, the control value is 20%, the PWM period is 15min, then the valve will open for 3min, close for 12min, control. When the value is 60%, then the valve will open for 9min, off for 6min, the control value is evaluated by the temperature controller or sensor device to the current temperature and

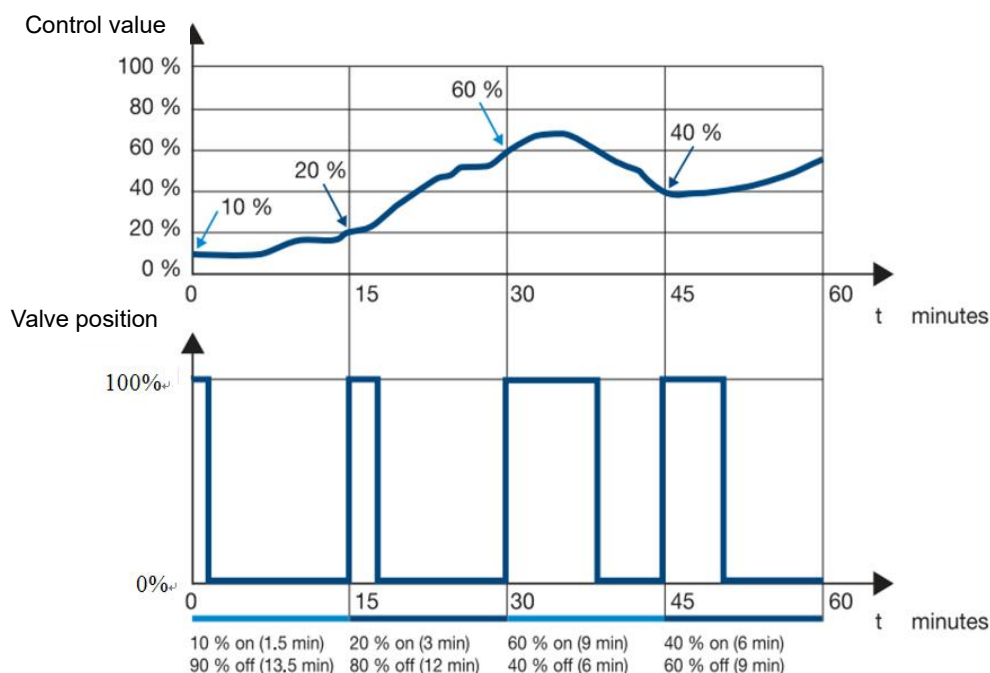

set temperature, and then sent to the device. The valve adjustment diagram is as follows:

This control mode enables relatively accurate temperature control without temperature overshoot. Simple, low-cost control valves can be used. For example, it can be used in conjunction with an electric valve actuator. The switching frequency of the control valve is relatively high.

This control mode parameter interface is similar to "2state-ON/OFF", and the description of the same parameters will not be repeated here. The difference is that the PWM switching period can be set as follows:

Parameter "PWM cycle time [10...6000]s"

This parameter is used to set the time period of PWM control. The larger the value, the smaller the valve switching frequency. Conversely, the smaller the value, the more frequent the valve switch. Options: **10...6000s**

Note: For Continuous, PWM valves, different switches, status feedback information is as follows:

Valve switch type	Description
Normal (de-energised closed)	When the valve is relayed, the object "Valve status, Heat/Cool" sends the telegram "0"; when there is current (relay closed), the telegram "1" is sent.
Inverted (de-energised open)	When the valve has a current (relay closed), the object "Valve status, Heat/Cool" sends a telegram "0"; when there is no current (relay opened), the telegram "1" is sent.

4.7.1.3 3 point, open and close


The parameter setting interface is as shown in Figure 4.7.1.3

--- Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > Outputs setting > 2-pipe Valve-... > V: Heating/Cooling

KNX Secure	Valve control mode	3 point, open and close
General	Observe reversing time	400ms
Outputs setting	If bus failure, valve position	Unchange
2-pipe Valve-...	If bus recovery, valve position	<input checked="" type="radio"/> Unchange <input type="radio"/> Close valve
V: Heating/Cooling	Valve control time 0%->100% [50..6000]	100 s
UI setting	Automatic adjust valve position	<input checked="" type="checkbox"/>
	Number of valve control up to adjust [1..65535]	200
	Correct Valve characteristic curve	<input checked="" type="checkbox"/>
	Min. controller value for closed valve [0..100]	0 %
	Max. controller value for fully opened valve [0..100]	100 %
	Lower valve position for opening [0..100]	0 %
	Upper valve position for opening [0..100]	100 %
	Reply mode for valve status	<input type="radio"/> Respond after read only <input checked="" type="radio"/> Respond after change
	Object type of valve status	<input type="radio"/> 1Bit <input checked="" type="radio"/> 1Byte
	Valve purge function	<input type="checkbox"/>
	"Disable Heating/Cooling" object function	<input type="checkbox"/>

Fig. 4.7.1.3Parameter window "3 point, open and close"

This control mode is suitable for driving three-wire valves. It controls the opening of the valve according to the control value received by the object. It can realize "completely open", "completely close" or open the valve to a certain position. This control mode is the most accurate. Control method, while the switching frequency of the valve is also very low. For example, if the control value is 20%, then the valve will stop output when it is 20% open. The valve adjustment diagram is as follows:

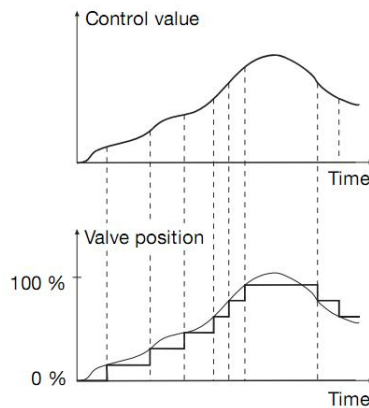

The parameter functions of this control mode are described below:

Parameter "Observe reversing time"

This parameter sets the time the valve will pause while running the steering, which helps protect the valve. Options: **100ms/200ms/.../1s/1.2s/1.5s**

The steering pause time is a technical feature of the valve and should be considered in any operation. When setting this parameter, refer to the technical characteristics of the valve.

Parameter "If bus failure, valve position"

This parameter annotates the state before the valve is held after the system voltage is powered down.

Parameter "If bus recovery, valve position"

This parameter sets the position of the valve after the system voltage is reset. Options:

Unchange

Close valve

Unchange: The default state of power-on after the system voltage is restored.

Close valve: Valve closed.

Note: The parameter download is not processed as a system reset, and the valve position is adjusted to 0%. Only when it is adjusted to 0%, the valve position can be determined and the next step is performed.

In this control mode, the timing of the automatic cleaning function is counted after determining the position of the valve.

Parameter "Valve control time 0% → 100% [50...6000]s"

This parameter sets the time required for the valve to go from fully closed to fully open, the total travel time. Options: **50...6000s**

Assuming that the travel time set by this parameter is 180s, the current valve position is 20%, and the target position is 60%, then the valve takes 72s from 20% → 60% of the travel time.

The setting of this parameter requires reference to the technical characteristics of the valve.

Parameter "Automatic adjust valve position"

This parameter sets whether the automatic adjustment function of the valve is enabled.

When this parameter is enabled: The following parameters are visible.

The automatic valve adjustment function mainly plays the role of correcting the position of the valve, Because the valve has undergone many adjustments, due to various reasons, such as temperature, aging of the device, etc, There is a phenomenon that the valve cannot be completely closed or fully opened, so it needs to be re-positioned by this function.

-- Parameter "Number of valve control up to adjust [1...65535]"

This parameter sets how many times the valve has been adjusted, and performs an automatic adjustment, that is, the valve position is adjusted to 0%, re-positioning, but only requires a longer travel time. Options: **1...65535**

Assume 100 times, when the valve has been adjusted 100 times, that is, at the 101st adjustment, If the valve is adjusted in the opening direction, no automatic adjustment is made, If the valve is adjusted in the closing direction, an automatic adjustment will be made, Adjust the valve to 0% position and then adjust to the target position. For example, the 100th valve position is 50%, and the 101st is 60%, The valve will not be automatically adjusted until a reverse adjustment command is received; If the 101st is 40%, then the valve is automatically adjusted, running to 0%, and then running to the target position 40%. The time of automatic adjustment is extended by 5% of the total travel time, that is, travel time + total travel time × 5%, The total travel time × 5% must be less than or equal to 1 min. When it is greater than 1 min, take 1 min.

When the automatic adjustment is performed, the number is counted again. When the valve adjustment stops, the count increases once (The positioning adjustment when the parameter download is completed is not counted in the number of times). In the process of performing automatic adjustment, If the control value is received, it will wait until the automatic adjustment is

completed., If there is a higher priority operation, then the high priority operation ends and then execute.

The setting of this parameter requires reference to the technical characteristics of the valve.

Parameter "Correct Valve characteristic curve"

This parameter sets whether the valve characteristic adjustment is enabled. Options:

When this parameter is enabled, the following parameters can be seen.

- parameter "Min. controller value for closed valve [0...100] %"
- parameter "Max. controller value for fully opened valve [0...100] %"
- parameter "Lower valve position for opening [0...100] %"
- parameter "Upper valve position for opening [0...100] %"

Characteristic curve for setting the valve output. Options: **0...100 [%]**


Min. controller value for closed valve: Lower limit control value of valve characteristic curve;

Max. controller value for fully opened valve: Upper limit control value of valve characteristic curve;

Lower valve position for opening: Lower limit of valve position;

Upper valve position for opening: Upper limit of valve position.

Take the valve with the valve interface as the relay as an example, Assuming the lower limit of the control value is set to 10%, the lower limit of the valve is set to 20%, the upper limit of the control value is set to 70%, and the upper limit of the valve is set to 80%, there is an output characteristic curve as shown below:

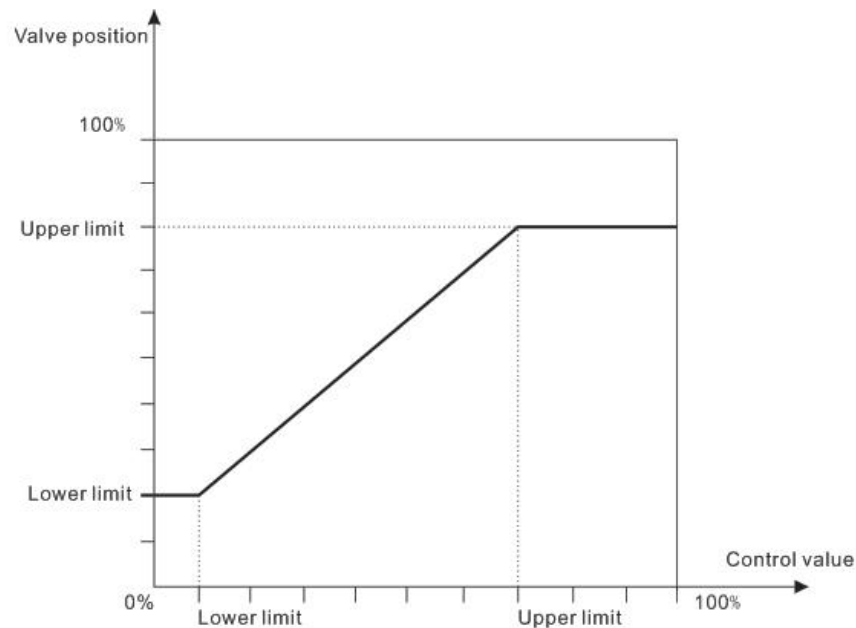

Parameter "Reply mode for valve status"

This parameter defines how the valve status responds. Options:

Respond after read only

Respond after change

Respond after read only: The object "Valve status, Heat/Cool" sends the current status to the bus only when the device receives a status read from another bus device or bus.

Respond after change: When the status changes or the device receives a request to read the status, the object "Valve status, Heat/Cool" immediately sends a message to the bus to report the current status.

Parameter "Object type of valve status"

Set the object type for valve position status feedback. Options:

1bit

1byte

1bit: The next parameter is visible, and a 1-bit object "Valve status, Heat/Cool" is visible for feedback valve switching status.

1byte: A 1byte object "Valve status, Heat/Cool" is visible for feedback valve position status.

Parameter "Object value with valve position >0"

Options:

0

1

The option "1", when the valve position is greater than 0, the object "Valve status, Heat/Cool" sends the message "1"; When the valve position is 0, the message "0" is sent. And vice versa.

The priority for various operations of valve control:

Initialization(After the parameter download is completed)→Purge function→Automatic adjust valve position(Only 3 point, open and close)→Disable valve operation→Fault monitoring or general operation (Trigger via the object "Control value, Cool/Heat")

Apply to the following points:

1. In the faulty mode, if the valve is disabled, the fault monitoring is still continue and there will also send a fault report to bus, but it can not perform the fault action until there is no higher priority operation. The fault status will be reset only when the control value is received, and at the same time, the monitoring cycle will be restarted.

2. Correct valve characteristic curve will correct the control value and the valve position of fault monitoring and general operation.(Only 3 point, open and close)

3. Cool/Heat mode can only be switched by control value . Due to the higher priority of purge operation, it is not limited by the control mode, for example, it can trigger the purging of the heat mode in the cool mode, and vice versa. If it is performing the purging of the cool mode currently, it will wait for the purging finished before performing the purging of the heat mode, but the control mode is no change, still in the cool mode. If there receive a control value of another mode during purging, it will switch the status of the control mode immediately, but it need to wait for the purging finished before performing the action according to current control value.

4. In the same control mode, if multiple operations occur within a period of time, it will process according to priority order, that is until high-priority operation to be canceled or end, the low-priority operation can be processed. Assuming currently there are purge function, disable valve operation and control value operation, if cancel the purge operation at the time, it will go back to the valve status of disable operation according to priority order, that is close the valve. If valve is enable again, the valve will tack action according to current control value or fault status.

The following points apply to automatic adjustment of valve position (If enable):

1. If automatic adjustment of valve is interrupted by purge function, it will perform again after finishing purge function.

2. Automatic adjustment of valve affects disable valve operation, fault action and the action of control value. When valve adjustment times meet the automatic adjustment times, valve travel time will increase, because the valve need to re-position before moving to the target position.

3. Adjustment of valve no matter what the control command(Such as purge function, disable valve operation, etc) is to adjust it, when stop the adjustment, the number of adjustments will be increase by one. And it will be reset to 1 after the automatic adjustment is finished.

4. During automatic adjustment of valve operation, if receive new control value, it will wait for the automatic adjustment (Positioning) finished before moving to new target position

4.8 Fan control

The fan control has one output channels. This chapter will describe the fan output function.

4.8.1 Parameter window “Fan type -- One level”

The parameter window “Fan type -- One level” setting interface is shown in Figure 4.8.1 Here, the parameters of the level 1 fan are set. The parameter settings are as follows:

-.-. Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > Outputs setting > Fan-...

<ul style="list-style-type: none"> KNX Secure General Outputs setting Fan-... Output 2-... Output 3-... UI setting 	<p>Fan type: <input checked="" type="radio"/> One level <input type="radio"/> Multi-level</p> <p>Description (max 30char.): <input type="text"/></p> <p>When bus failure, Fan speed is: <input type="text" value="Unchange"/></p> <p>When bus recovery, fan speed is: <input type="text" value="Unchange"/></p> <p>After downloading, fan speed is: <input type="text" value="OFF"/></p> <hr/> <p>Forced operation function: <input checked="" type="checkbox"/></p> <p>Forced operation on object value: <input type="radio"/> 0=Force/1=Cancel <input checked="" type="radio"/> 1=Force/0=Cancel</p> <p>Behaviour on Forced operation: <input type="text" value="Unchange"/></p> <p>Auto. operation function: <input type="checkbox"/></p> <hr/> <p>Time mode for function ON: <input type="text" value="Switch Delay"/></p> <p>Delay time [1..65535]: <input type="text" value="10"/> *0.1s</p> <p>Time mode for function OFF: <input type="text" value="Switch Delay"/></p> <p>Delay time [1..65535]: <input type="text" value="10"/> *0.1s</p>
--	---

Fig. 4.8.1 Parameter window “Fan type -- One level”

Parameter “Fan type”

This parameter defines the type of fan to be controlled. Options:

One level

Multi-level

One level: can control the fan with 1 fan speed;

Multi-level: A fan that can control fan speeds of up to 3 levels, optional 2 or 3.

Parameter “When bus failure, Fan speed is”

This parameter sets the action of the fan when the bus is powered down. Options:

Unchange

OFF

ON

Parameter "When bus recovery, Fan speed is"

This parameter defines the action of the fan after the bus voltage is restored. Options:

Unchange

OFF

ON

As before as bus fail

Unchange: The status does not change;

OFF: The fan is turned off;

ON: The fan is turned on;

As before as bus fail: The state before the bus was powered down.

Note: Before connecting the fan, in order to obtain a defined fan switch status, it is recommended to connect the bus voltage first to avoid the possibility of fan damage due to incorrect connection.

Parameter "After downloading, fan speed is"

This parameter notes that the fan will be turned off after the application programming is complete.

Parameter "Forced operation function"

This parameter is used to enable forced operation.

When this parameter is enabled, the 1-bit communication object "Forced operation" is visible, the following two parameters are also visible, used to set the activation value of the forced operation and the action of the forced operation.

-- Parameter "Forced operation on object value "

This parameter sets the value of the message used to activate the forced operation. Options:

0=Force/1=Cancel

1=Force/0=Cancel

0=Force/1=Cancel: When the object "Forced operation" receives the message value "0", the forced operation is activated. When "1" is received, the forced operation is canceled.

1=Force/0=Cancel: When the object "Forced operation" receives the message value "1", the forced operation is activated. When "0" is received, the forced operation is canceled.

-- Parameter "Behaviour on Forced operation "

This parameter defines how the fan behaves when a forced operation is performed. Options:

Unchange

OFF

ON

Unchange: The fan speed of the fan remains unchanged

OFF: Turn off the fan;

ON: Turn on the fan.

The forced operation has the highest priority, but is also affected by the minimum run time and delay switch set by the parameters below.

Parameter "Auto. operation function "

This parameter is used to enable automatic operation of the fan.

When this parameter is enabled: The parameter interface 4.28 is visible. At the same time, the following parameters will also affect the actions of automatic operation, such as delay switch and minimum running time.

Parameter "Time mode for function ON"

This parameter defines the run time of the fan. Options:

None

Switch delay

Minimum time

None: Execute immediately after receiving the control command of the blower;;

Switch delay: The delay time for turn on the fan and the action for ON after reset will also consider this delay time, the delay time is set by the following parameter "Delay time [1...65535] * 0.1s". If the fan object "Fan speed" receives the message "1" multiple times in succession, the delay time is timed according to the actual situation, instead of counting from the last received message time;

Note: The action for ON after resetting also needs to consider this delay time. After the delay is completed, turn on the fan.

Minimum time: The minimum running time of the fan can only be turned off after this running time has elapsed. The minimum running time is set by the parameter "Minimum time [1...65535]s".

If a message to turn off the fan is received during the minimum running time, then it is necessary to wait until the period has passed before the action of turning off the fan is performed.

-- Parameter "Delay time [1..65535]*0.1s"

This parameter defines the time at which the fan is turned on after a delay. Options: **1...65535**

-- Parameter "Minimum time [1..65535]s"

This parameter defines the minimum run time after the fan is turned on. Options: **1...65535**

Parameter "Time mode for function OFF"

This parameter defines the off time of the fan. Options:

None

Switch delay

Minimum time

None: Execute immediately after receiving the control command to turn off the fan;

Switch delay: Delay off the fan, the OFF action after reset, will also be turned off after the delay, the delay time is set by the following parameter "Delay time [1...65535] * 0.1s";

Minimum time: The fan is removed for the shortest time. Only after this time can the fan be turned on again. The minimum closing time is set by the parameter "Minimum time[1...65535]s". If a message of the fan is received during the shortest off time, then it is necessary to wait until the period has passed before the blower is executed.

Note: The action for OFF after resetting also needs to consider this minimum time.

-- Parameter "Delay time [1..65535]*0.1s"

This parameter defines the time for the fan to be turned off. Options: **1...65535**

-- Parameter "Minimum time [1..65535]s"

This parameter defines the minimum time that the fan is off. Options: **1...65535**

4.8.1.1 Parameter window "Fan: Auto."

When the parameter window "Auto. operation function" setting interface in Figure 4.8.1 is enable, the interface for automatic operation is visible. The interface of Figure 4.8.1.1 is used to set the automatic operation of level 1 fan speed, and the threshold can be defined. Automatically, the control value of the fan speed comes from the bus, and one control value or two control values can be set in the function parameters. For example, in the fan coil control system, only heating or cooling, at this time, the fan control only needs to set a control value. If there is heating in the system and there is cooling, then the fan control setting two control values will be more appropriate.

Normal operation and automatic operation cannot occur at the same time, that is, after the automatic operation is activated by the object "Automatic function", if there are other operations (such as normal operation, forced operation), the automatic operation will exit by itself, and the object "Automatic function" is required if activated again, and the object "Status Automatic" reports whether the automatic operating status is active.

--- Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > Outputs setting > Fan-... > F: Auto.

<div> <div>KNX Secure</div> <div>General</div> <div>Outputs setting</div> <div> <div>Fan-...</div> <div>F: Auto.</div> <div>F: Status</div> <div>Output 2-...</div> <div>Output 3-...</div> </div> <div>UI setting</div> </div>	<div> <div>Auto.operation on object value</div> <div> <input type="radio"/> 0=Auto/1=Cancel <input checked="" type="radio"/> 1=Auto/0=Cancel </div> </div> <div> <div>State of Auto.operation after startup</div> <div><input checked="" type="checkbox"/></div> </div> <div> <div>Automatically enable auto.operation</div> <div><input checked="" type="checkbox"/></div> </div> <div> <div>Enable auto.operation after in [10..6000]</div> <div>100 min</div> </div> <div> <div>Threshold value OFF<->ON[1..100]</div> <div>30 %</div> </div> <div> <div>Hysteresis threshold value in +/-[0..50]</div> <div>10 %</div> </div> <div> <div>Number of control value</div> <div> <input checked="" type="radio"/> 1 <input type="radio"/> 2 </div> </div> <div> <div>Monitoring control value</div> <div><input checked="" type="checkbox"/></div> </div> <div> <div>Monitoring period of control value [10..65535]</div> <div>120 s</div> </div> <div> <div>Reply mode of Obj."Control value fault"</div> <div> <input type="radio"/> Respond after read only <input checked="" type="radio"/> Respond after change </div> </div> <div> <div>Control value after fault occurs [0..100]</div> <div>0 %</div> </div>
---	---

Fig. 4.8.1.1Parameter window "Fan: Auto."

Parameter "Auto. Operation on object value"

This parameter sets the value of the message used to activate the automatic operation.

Options:

0=Auto/1=Cancel

1=Auto/0=Cancel

0=Auto/1=Cancel: When the object "Automatic function" receives the telegram value "0", it activates the automatic operation. When it receives "1", it exits the automatic operation;

1=Auto/0=Cancel: When the object "Automatic function" receives the telegram value "1", it activates the automatic operation. When it receives "0", it exits the automatic operation.

Parameter "State of Auto. operation after startup"

This parameter sets whether automatic operation is enabled when the device starts up.

When this parameter is disabled: After the device is started, the automatic operation is disabled by default.

When this parameter is enabled: After the device is started, the automatic operation is enabled by default.

Parameter "Automatically enable auto. operation"

This parameter sets whether the auto-enable feature of automatic operation is enabled.

When this parameter is enabled: When enabled, the next parameter is visible.

When the normal operation exits the automatic operation, in the absence of any operation, the automatic setting returns to the automatic operation after the time set by the next parameter is reached.

-- Parameter "Enable auto. Operation after in[10..6000]min"

This parameter sets the time from automatic return to automatic operation from normal operation. Options: **10..6000**

Parameter "Threshold value OFF<->ON [1...100]%"

This parameter defines the threshold. The fan can automatically change its operating state according to the threshold range in which the control value is located. The control value is determined by the object "Control value". Options: **1...100**

If the control value is greater than or equal to the threshold set by the parameter, the fan is turned on;

If the control value is less than this threshold, the fan is turned off.


Parameter "Hysteresis threshold value in +/- [0...50]%"

This parameter sets the hysteresis value of the threshold. The hysteresis can avoid unnecessary action of the fan when the control value fluctuates near the threshold. Options: **0 ... 50**

If it is 0, there is no hysteresis. Once the control value crosses the threshold, the fan will switch immediately;

Assuming a lag value of 10 and a threshold of 50, there will be an upper threshold of 60 (threshold + lag value) and a lower threshold of 40 (threshold - lag value), then when the control value is between 40 and 60, it will not cause The action of the fan still maintains its previous state.

Only less than 40 will turn off the fan, and more than or equal to 60 will turn on the fan as shown below:

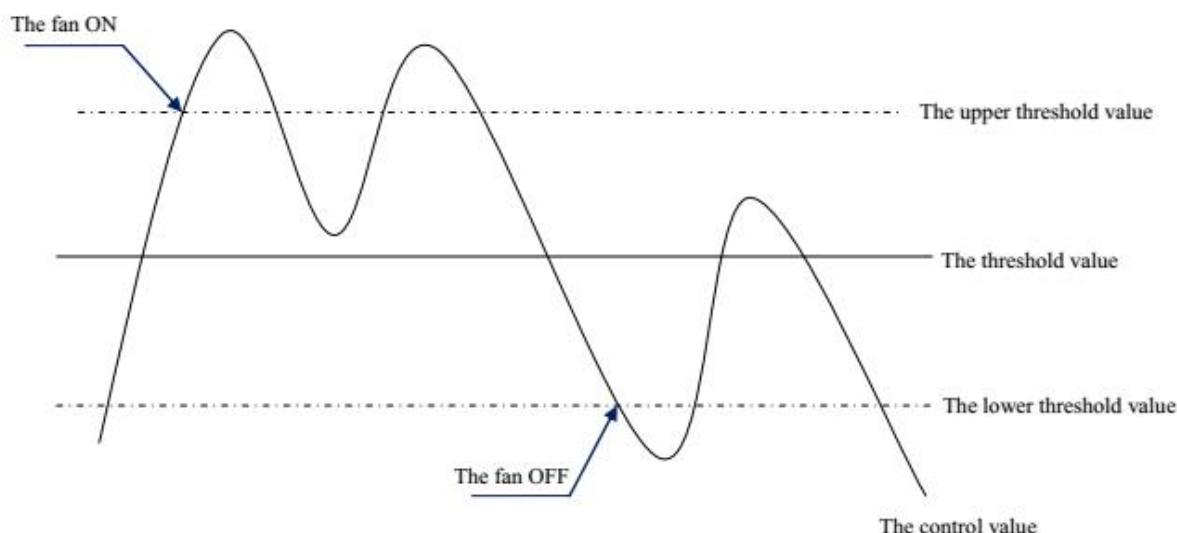

The following parameters in this subsection are descriptions of fan speed control values.

Parameter "Number of control value"

To set the number of automatic fan speed control values. Options:

1

2

1 control value: Only one control value can control the fan speed. Generally suitable for only heating, cooling, or 2 pipes fan coil control systems;

2 control values: There are two control values to control the fan speed. It is usually used in fan coil control systems that support both heating and cooling.

-- Parameter "Select by"

This parameter is visible when 2 control values are selected in the previous parameter, it is used to set the switching mode of the control value. Options:

Latest value

Control value with switching object

Latest value: The fan coil actuator will control the fan speed based on the latest control value received from the bus;

Control value with switching object: After selecting this option, the object "Switching control value1/2" is visible to switch the control value of fan speed, message 0 corresponds to control value 1, and message 1 corresponds to control value 2.

Note: When this option is selected, after the automatic operation is activated, it is necessary to select the control value to be 1 or 2 first, then the received control value is valid. It does not respond to the received control value until it is selected. The value received by the object "Switching control value1/2" is also logged when the automatic operation is not activated.

After the automatic operation exits, the (valid) control value received from the bus will be recorded. After the automatic operation is activated again, the fan speed will be operated according to the latest control value or fault control value. The effective control value refers to the currently selected control value. If it is control value 1, then control value 2 is invalid.

Parameter "Monitoring control value"

To set whether to enable monitoring of external control values.

When this parameter is enabled, the following parameters are visible.

-- Parameter "Monitoring period of control value[10..65535]s"

To set the monitoring period of external control value. If the control value is not received within this time, the device will consider the external controller error and the fan coil will output according to the control value set by the next parameter. Options: **10...65535s**

--Parameter "Reply mode of Obj. "Control value fault""

To define the feedback method when the external control value is incorrect. Options:

Respond after read only

Respond after change

Respond after read only: The object "Control value fault" sends the current state to the bus only when the device receives the read status from other bus device or bus.

Respond after change: When the fault status changes or the device receives a request to read the status, the object "Control value fault" immediately sends a message to the bus to report the current status.

-- Parameter "Control value after fault occurs [0..100]%"

When an error occurs in the external controller, the fan coil will output the fan speed according to the control value set by this parameter. Options: **0...100 %**

4.8.1.2 Parameter window "Fan: Status"

The parameter window "Fan: Status" setting interface is shown in Figure 4.8.1.2 This interface is used to set the status information of the fan operation.

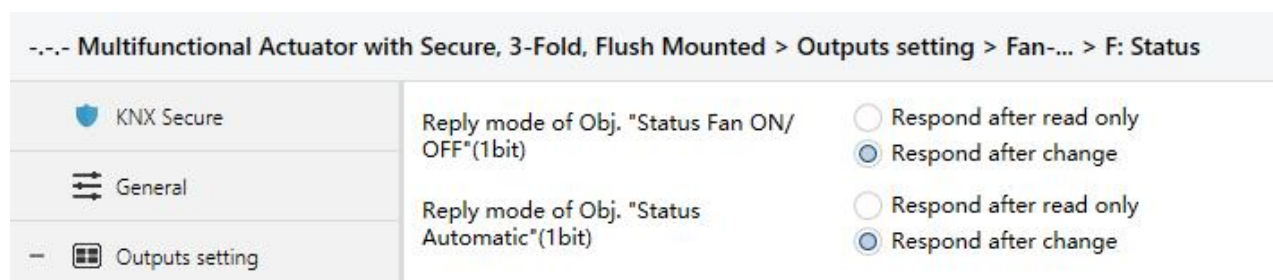


Fig. 4.8.1.2 Parameter window "Fan: Status"

Parameter "Reply mode of Obj. "Status Fan ON/OFF" (1bit)"

To define reply mode for the fan's operating status. Options:

Respond after read only

Respond after change

Respond after read only: The object "Status Fan ON/OFF" sends the current state to the bus only when the device receives the read status from other bus device or bus.

Respond after change: When the fan coil operation status changes or the device receives a request to read the status, the object "Status Fan ON/OFF" immediately sends a message to the bus to report the current status.

Parameter "Reply mode of Obj. "status Automatic"(1bit)"

This parameter is visible when the automatic operation is enabled, and defines the reply mode of the automatic operation status.

The object "Status Automatic" sends a message "1" to indicate that the automatic operation is activated, and "0" to indicate that the automatic operation is exited. Options:

Respond after read only

Respond after change

Respond after read only: The object "Status Automatic" sends the current state to the bus only when the device receives the read status from other bus device or bus.

Respond after change: When the automatic operation status changes or the device receives a request to read the status, the object "Status Automatic" immediately sends a message to the bus to report the current status.

4.8.2 Parameter window “Fan type -- Multi-level”

The parameter window “Fan type -- Multi-level” setting interface is shown in Figure 4.8.2 The parameter settings are as follows:

--- Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > Outputs setting > Fan-...

<div>KNX Secure</div> <div>General</div> <div>Outputs setting</div> <div>Fan-...</div> <div>F: Status</div> <div>Output 3-...</div> <div>UI setting</div>	Fan type	<input type="radio"/> One level <input checked="" type="radio"/> Multi-level
	Fan speeds on 2 limit	<input checked="" type="checkbox"/>
	Fan operation mode	<input checked="" type="radio"/> Changover switch <input type="radio"/> Step switch
	Delay between fan speed switch [50..5000]	500 ms
	When bus failure, Fan speed is	Unchange
	When bus recovery, fan speed is	Unchange
	After downloading, fan speed is	OFF
	Object value for fan speed	
	Object datatype of 1byte fan speed	<input checked="" type="radio"/> Percentage (DPT_5.001) <input type="radio"/> Fan stage (DPT_5.100)
	Object value for Fan speed 1	33 %
	Object value for Fan speed 2	67 %
	Object value for Fan speed 3	100 %
	Forced operation function	<input checked="" type="checkbox"/>
	Forced operation on object value	<input type="radio"/> 0=Force/1=Cancel <input checked="" type="radio"/> 1=Force/0=Cancel
	Limitation on forced operation	Unchange
Auto. operation function	<input type="checkbox"/>	
Obj. "Switch speed x " 1bit function	<input type="checkbox"/>	
Delay time for function OFF [0..65535]	0 *0.1s	
Starting characteristic of fan	<input checked="" type="checkbox"/>	
Switch on over fan speed	1	
Minimum time in switch [1..65535]	10 s	

Fig. 4.8.2 Parameter window “Fan type - Multi-level”

The fan coil parameters of 2 level fan speed and 3 level fan speed are the same. When the fan speed is set to 3, the output fan speed is the same as 2.

Since there is no fan with only 1 fan speed as described in the previous section, there is no need to consider too many technical parameters. In the case of multiple fan speeds, not only the starting characteristics of the fan but also the operating mode of the fan like changover switch or

step switch etc. must be considered. Only when you know the technical characteristics of the fan, the parameters can be properly set.

Parameter "Fan speeds on 2 limit"

This parameter is only visible when the fan type is selected as "Multi level". It is used to determine whether to enable the 2 level fan speed or the 3 level fan speed.

When this parameter is disabled: fan can control three level fan speeds;

When this parameter is enabled: The fan can control 2 level fan speed, the maximum fan speed can only reach 2, even if the parameter sets the 3 level fan speed. The communication object of fan speed 3 will be ignored.

Note: When the fan speed is limited to level 2, if the fan speed after power failure or reset is set to 3, it will not be executed, that is, the current state will be maintained.

Parameter "Fan operation mode"

This parameter defines the operating mode of the fan and needs to be considered in conjunction with the technical characteristics of the fan. Options:

Changeover switch

Step switch

Changeover switch: It can set the delay time of fan speed changeover, see next parameter. This type of control can switch the fan speed to any level, such as directly switching from the first level fan speed to the third stage fan speed, but in any case, the three channels have only one output.

Step switch: Under this control type, the 3rd-level fan speed is equivalent to the superposition of three one-level fan speeds. For example, when the 3rd-level fan speed is used, all three channels output simultaneously (such as Output 1&2&3). When the 2nd-level fan speed is used, 2 channels output at the same time (such as Output 1&2).

Note: This parameter must be considered in conjunction with the technical parameters of the fan.

Parameter "Delay between fan speed switch [50...5000]ms"

This parameter is visible when the operating mode is selected as "changeover switch" and is used to define the conversion delay, which is a specific element of the fan and should be considered in all cases. Available options: **50...5000**

When a fan speed converted telegram is received, the target fan speed will be performed after the delay has elapsed.

If the device receives a new fan speed during the switching delay, the delay time will not be interrupted, but the last received fan speed is executed.

Parameter "When bus failure, Fan speed is"

This parameter notes the action of the fan when the bus is powered down. Options:

Unchange

OFF

1

2

3

OFF: Turn off the fan;

1, 2 or 3: The fan is turned on to fan speed 1, 2 or 3.

Note: If the fan speed is limited to 2, while the parameter selects 3, the fan speed after power failure will maintain the fan speed before power failure.

Parameter "When bus recovery, fan speed is"

This parameter defines the action of the fan after the bus voltage is recovered. Options:

Unchange

OFF

1

2

3

As before as bus fail

OFF: Turn off the fan.

1, 2 or 3: The fan is turned on to fan speed 1, 2 or 3.

As before as bus fail: The fan speed is the same as the speed before the bus is powered down.

Note: Before connecting the fan, in order to obtain a defined fan switch status, it is recommended to connect the bus voltage first to avoid the possibility of damage to the fan due to incorrect connections. If the parameter 3 is selected in the case of limiting the 2nd fan speed, the fan speed after the reset does not change.

Parameter "After downloading, fan speed is"

This parameter indicates to turn off the fan after the application is programmed.

Object value for fan speed

Parameter "Object datatype of 1byte fan speed"

This parameter is used for setting the object datatype of 1byte fan speed. Options:

Percentage (DPT_5.001)

Fan stage (DPT_5.100)

-- Parameter "Object value for Fan speed 1/2/3"

To define the object value to switch to each fan speed, that is, the value of the communication object "Fan speed--1byte". Options: **1..100%/1..255**

The object value "0" defaults to fan speed off.

Note: the fan speed value must meet the condition fan speed $1 < 2 < 3$, if not, they can not be configured on ETS.

Parameter "Forced operation function"

To enable forced operation.

When this parameter is enabled, the 1-bit communication object "Forced Operation" is visible, and the following two parameters are also visible. It is used to set the activation value of the forced operation and the action that can be performed under the forced operation.

-- Parameter "Forced operation on object value "

To set the telegram value to activate the forced operation. Options:

0=Force/1=Cancel

1=Force/0=Cancel

0=Force/1=Cancel: When the object "Forced Operation" receives the message value "0", the forced operation is activated. When "1" is received, the forced operation is canceled.

1=Force/0=Cancel: When the object "Forced Operation" receives the message value "1", it activates the forced operation. When it receives "0", it cancels the forced operation.

Note: During forced operation, the minimum operating time of fan speed for automatic operation still needs to be considered, except for the starting fan speed, as it has its own minimum running time.

Forced operation is not activated by default after bus reset or after programming.

-- Parameter "Limitation on forced operation "

To define the limitation fan speed under forced operation. Options:

Unchange

1

1, off

2

2, 1

2, 1, off

3

3, 2

3, 2, 1

Off

Unchange: The fan speed of the fan remains unchanged and maintains the current operating state;

1: Only fan speed 1 is operated;

1, off: Only fan speed 1 and shut down the fan can be operated;

2: Only fan speed 2 can be operated;

2, 1: Only fan speeds 1 and 2 can be operated;

2, 1, off: Only fan speed 1, 2 and shut down the fan can be operated;

3: Only fan speed 3 can be operated;

3, 2: Only fan speed 3, 2 can be operated;

3, 2, 1: Only fan speed 1, 2 and 3 can be operated;

Off: Only shut down the fan can be operated;

Note: In the case of forced operation activation, if the current fan speed is not within the allowable range, the fan speed will switch to the nearest allowable current fan speed. For example, the current fan speed is 1, and the allowed fan speed is 2 3, then when the forced

operation is activated, the fan speed will automatically switch to 2, if the fan speed is adjusted to 1 by manual mode, the running fan speed will also be 2.

In another case, if the current fan speed is 0, the allowed fan speed is 1, 2, 3, and the starting fan speed is 3. When the forced operation is activated, the fan starts at fan speed 3 and then automatically switches to fan speed 1; if the current fan speed is 2, the allowed fan speed is 1, 2, when a forced operation is activated, a fan speed 0 message is received, then the fan speed will switch to 1. In this case, the fan speed switches to the fan speed near the target fan speed.

Parameter "Auto. operation function"

This parameter is used to enable automatic operation of the fan.

When this parameter is enabled: The parameter interface 4.7.2.1 will be visible.

Parameter "Obj. 'Switch speed x' 1bit function"

When this parameter is enabled: Three 1-bit objects "Fan speed 1", "Fan speed 2" and "Fan speed 3" are visible.

When the object receives the telegram "1", the fan speed is turned on. When any object of the three objects receives the telegram "0", the fan is turned off.

If three objects continuously receive multiple ON/OFF telegrams in a short time, the fan speed will be controlled with the telegram value received by the last object.

Note: In normal operation mode, the minimum dwell time set by the parameter in automatic mode is ignored. Therefore, the response of the direct operation can be detected in time.

In order to protect the fan, the delay time of the fan speed switching is still valid. At the same time, when the forced operation is activated, it is necessary to consider the fan speed that can be operated under the force operation.

Parameter "Delay time for function OFF[0...65535]*0.1s"

This parameter defines the delay off time of the fan. For example, if the fan speed of the current fan is speed1 and the control telegram of the fan OFF is received, and the fan will maintain the current fan speed and start the delay counting. After the time defined by the parameter, the OFF operation will be executed.

Note: When the fan is running in automatic mode, this parameter is evaluated and executed only if the parameter "Minimum time in fan speed [0...65535]s" is 0.

Parameter "Starting characteristic of fan"

This parameter defines the starting characteristics of the fan, which is also a technical feature of the fan. Usually to ensure the safe start of the fan motor, it is better to start the fan motor at a higher fan speed when the fan is turned on, so that the fan motor obtains a higher torque during the starting phase. For example, the fans and floor fans used in our lives are usually started from the second-stage fan speed when the fan is turned on, and then switched to the minimum fan speed. Some fans start up similarly.

When this parameter is enabled: The following two parameters are visible.

Note: Since the startup feature is a technical feature of the fan, so the startup behavior has a higher priority than the forced operation.

If the fan itself has no starting characteristics, you can ignore the parameters related to the characteristic, just select "No".

For example, the starting fan speed is 3, the fan speed allowed for the forced operation is 2, and is currently in the OFF state. When a control telegram with a fan speed of 1 is received, the fan will be turned on at fan speed 3 and then turned to fan speed 2. The needed fan speed 1 will not run due to forced operating restrictions.

For the step switch type of fan, the starting characteristics are different. The step switch type fan is usually the continuous opening fan speed, and the changeover switch type fan is the direct opening fan speed. Therefore, when defining the parameters of the start-up characteristics, it is also necessary to consider the switch type of the fan.

The minimum dwell time for fan speed switching in automatic mode is only considered after the start-up phase, which is inactive during the start-up phase. The minimum dwell time for the fan speed on during the start-up phase can be set additionally, see the parameters below.

Parameter "Switch on over fan speed"

This parameter sets the fan speed used by the fan when starts from the OFF state. Options: **1/2/3**

When controlling the fan with 2-level fan speed, if the starting fan speed is set 3, the fan speed 2 is automatically applied.

However, in order to ensure the normal operation of the fan, when setting these parameters related to the characteristics of the fan, it is best to first understand these characteristics, and then set the parameters properly to avoid damage to the fan.

-- Parameter "Minimum time in switch[1...65535]s"


This parameter defines the minimum dwell time at which a certain fan speed is turned on during the start-up phase. Options: **1...65535**

When the fan is turned on, it starts at the starting fan speed first, and then switch to the target fan speed after the minimum dwell time expires. This target fan speed may be the fan speed of the fan after resetting or the fan speed triggered by other operations.

During the start-up phase, the delay time between the two fan speeds must also be considered.

Example: Starting characteristics of a fan with 3 fan speeds

Assume that the current state of the fan is off, the starting fan speed is level 3, the target fan speed is level 1, and the final fan speed is level 2, as shown in the following figure:

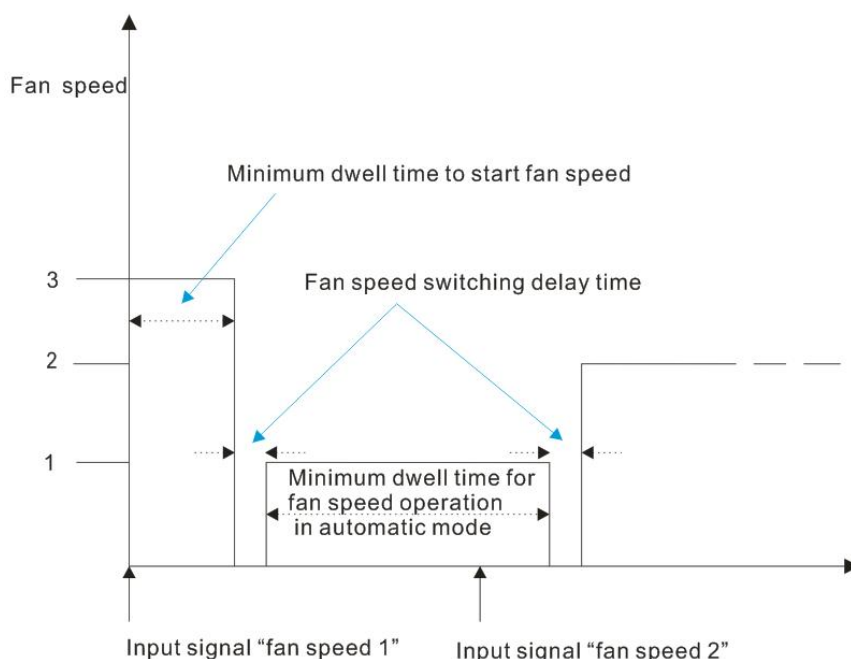

The above figure shows that if the fan is currently in the off state, when it receives a telegram of "Fan Speed 1", it will start "Fan Speed 3". After the minimum stay time of the start fan speed is over, it switches the fan speed. The fan speed switching needs a delay time (this is a technical parameter of the fan, which is conducive to protect the fan), After the delay time expires, the fan switches to the target fan speed "fan speed 1", in the "fan speed 1" operation, if the fan receives a "fan speed 2" telegram, then you need to consider whether the automatic mode is activated. If the automatic mode is activated, you need to consider the minimum dwell time of the fan speed operation. If it is direct operation, you do not need to consider dwell time of the fan speed operation. After the delay time has elapsed, the fan runs at "Fan Speed 2".

4.8.2.1 Parameter window "Fan: Auto."

When the parameter "Auto. operation function" in Figure 4.8.2 is selected as "Enable", the parameter interface of Figure 4.8.2.1 is visible.

This interface is used to set the automatic operation of multi-level fan speed, and the threshold can be defined. Under automatic operation, the fan speed control value comes from the bus, and the fan speed is determined according to the threshold range in which the control value is located.

--- Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > Outputs setting > Fan-... > F: Auto.

<p>KNX Secure</p> <p>General</p> <p>Outputs setting</p> <p>Fan-...</p> <p>F: Auto.</p> <p>F: Status</p> <p>UI setting</p>	<p>Auto.operation on object value <input type="radio"/> 0=Auto/1=Cancel <input checked="" type="radio"/> 1=Auto/0=Cancel</p> <p>State of Auto.operation after startup <input checked="" type="checkbox"/></p> <p>Automatically enable auto.operation <input checked="" type="checkbox"/></p> <p>Enable auto.operation after [10..6000] <input type="text" value="100"/> min</p> <hr/> <p>Threshold value OFF<->speed 1 [1..100] <input type="text" value="30"/> %</p> <p>Threshold value speed 1<->speed 2 [1..100] <input type="text" value="60"/> %</p> <p>Threshold value speed 2<->speed 3 [1..100] <input type="text" value="80"/> %</p> <p>Hysteresis threshold value in +/-[0..50] <input type="text" value="10"/> %</p> <p>Minimum time in fan speed [0..65535] <input type="text" value="10"/> s</p> <hr/> <p>Number of control value <input checked="" type="radio"/> 1 <input type="radio"/> 2</p> <p>Monitoring control value <input checked="" type="checkbox"/></p> <p>Monitoring period of control value [10..65535] <input type="text" value="120"/> s</p> <p>Reply mode of Obj."Control value fault" <input type="radio"/> Respond after read only <input checked="" type="radio"/> Respond after change</p> <p>Control value after fault occurs [0..100] <input type="text" value="0"/> %</p>
--	---

Fig. 4.8.2.1 Parameter window "Fan: Auto."

Parameter "Auto. operation on object value"

This parameter sets the value of the telegram used to activate the automatic operation.

Options:

0=Auto/1=Cancel

1=Auto/0=Cancel

0=Auto/1=Cancel: When the object "Fan Automatic ON/OFF" receives the telegram value "0", the automatic operation is activated. When "1" is received, the automatic operation is canceled.

1=Auto/0=Cancel: When the object "Fan Automatic ON/OFF" receives the telegram value "1",

the automatic operation is activated. When "0" is received, the automatic operation is canceled.

Parameter "State of Auto. operation after startup"

This parameter sets whether automatic operation is enabled when the device starts up.

When this parameter is disabled: After the device is started, the automatic operation is disabled by default.

When this parameter is enabled: After the device is started, the automatic operation is enabled by default.

Parameter "Automatically enable auto. operation"

This parameter sets whether the auto-enable feature of automatic operation is enabled.

When this parameter is enabled: When enabled, the next parameter is visible.

When the normal operation exits the automatic operation, in the absence of any operation, the fan returns to the automatic operation after the time set by the next parameter is reached.

Parameter "Enable auto. Operation after [10..6000]min"

This parameter sets the time when returns to automatic operation from normal operation.

Options: **10..6000**

Parameter "Threshold value OFF<-->speed 1 [1...100]%"

This parameter defines the threshold for turning off the fan and speed 1, options: **1...100%**

If the control value is larger than or equal to the threshold set by the parameter, the running speed 1;

If the control value is less than this threshold, the fan is turned off.

Note: The fan determines the switch or fan speed of the fan based on the threshold range in which the control value is located. The following two parameters are similar.

Parameter "Threshold value speed 1<-->speed 2 [1...100]%"

This parameter defines the threshold for switching the fan speed to speed 2, and if the control value is greater than or equal to the threshold set by the parameter, then speed 2 is operated. Options: **1...100%**

Parameter "Threshold value speed 2<-->speed 3 [1...100]%"

This parameter defines the threshold for switching the fan speed to speed 3, and if the

control value is greater than or equal to the threshold set by the parameter, then speed 3 is operated. Options: 1...100%

Note: The controller evaluates these thresholds in ascending order, that is, first checks the threshold of OFF \leftrightarrow fan speed 1, then fan speed 1 \leftrightarrow fan speed 2, then fan speed 2 \leftrightarrow fan speed 3. The correctness of function execution is only guaranteed in this case: OFF \leftrightarrow fan speed 1 threshold is less than fan speed 1 \leftrightarrow fan speed 2 threshold, fan speed 1 \leftrightarrow fan speed 2 threshold is less than fan speed 2 \leftrightarrow fan speed 3 threshold.


-- Parameter "Hysteresis threshold value in +/- [0...50]%"

This parameter sets the hysteresis value of the threshold. The hysteresis can avoid unnecessary action of the fan when the control value fluctuates near the threshold. Available options: 0...50

If it is 0, there is no hysteresis. Once the control value is greater than the threshold, the fan will switch the fan speed immediately;

Assuming a lag value of 10 and a threshold of 50, there will be an upper threshold of 60 (threshold + lag value) and a lower threshold of 40 (threshold - lag value), then when the control value is between 40 and 60, it will not cause the action of the fan and still maintains its previous state.

Only less than 40 or greater than (or equal to) 60 will change the operating state of the fan. As shown below:

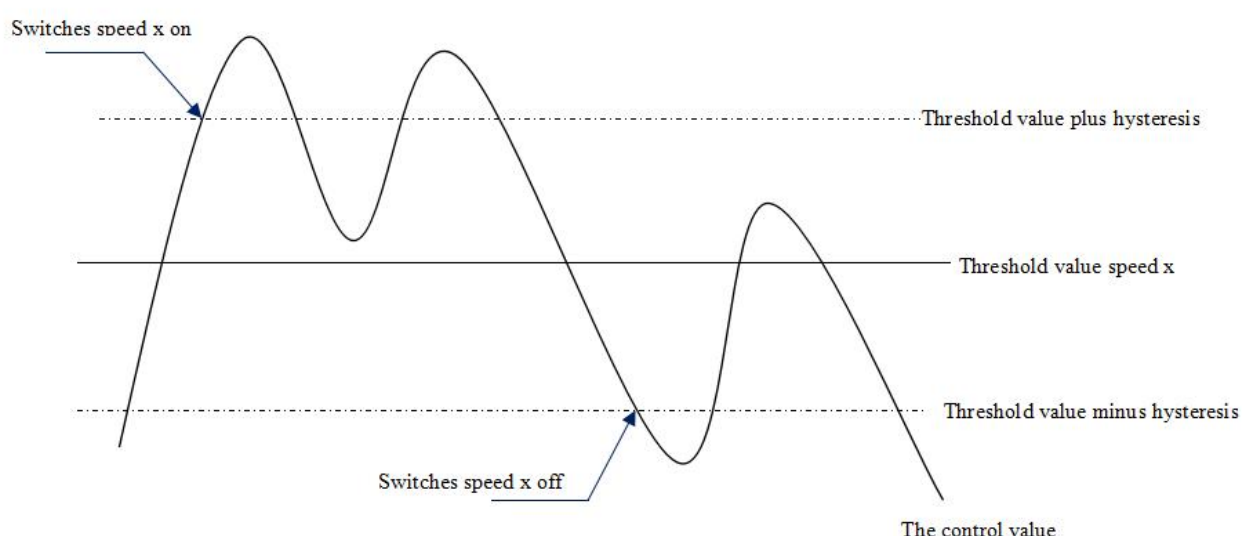

Note:

In the case of hysteresis enabled, if threshold overlap occurs, the action of the fan is specified as follows:

1) The hysteresis determines the control point at which the fan speed transition occurs;

2) If the fan speed transition occurs, this new fan speed is determined by the control value and the threshold, without considering the hysteresis;

For example (1):

OFF \leftrightarrow fan speed 1 threshold is 10%

Fan speed 1 \leftrightarrow fan speed 2 threshold is 20%

Fan speed 2 \leftrightarrow fan speed 3 threshold is 30%

Lag is 15%

The behavior of the fan when the fan speed rises from OFF:

The fan's OFF state will change at a control value of 25% ($\geq 10\% + 15\%$), and the new fan speed will be 2 (because 25% is between 20% and 30%, no need to consider hysteresis), so fan speed 1 is ignored ;

The behavior of the fan when the fan speed drops from 3:

The fan speed 3 of the fan will change at a control value of 14% ($< 30\% - 15\%$), and the new fan speed will be 1 (because 14% is between 10% and 20%, no need to consider hysteresis), so fan speed 2 is ignored. .

For example (2):

OFF \leftrightarrow fan speed 1 threshold is 10%

Fan speed 1 \leftrightarrow fan speed 2 threshold is 40%

Fan speed 2 \leftrightarrow fan speed 3 threshold is 70%

Lag is 5%

The behavior of the fan when the fan speed rises from OFF:

The OFF state of the fan will change at a control value of 15% ($\geq 10\% + 5\%$).

If the received control value is 41%, the new fan speed will be 2 (because 41% is between 40% and 70%, no need to consider hysteresis), so fan speed 1 is ignored;

If the control value received is 39%, the new fan speed will be 1 (since 39% is between 10% and 40%, no need to consider hysteresis).

The behavior of the fan when the fan speed drops from 3:

The fan speed 3 of the fan will change at a control value of 64% (<70%-5%).

If the received control value is 39%, the new fan speed will be 1 (because 39% is between 10% and 40%, no need to consider hysteresis), so fan speed 2 is ignored.

3) In any case, when the control value is 0, the fan will be turned off.

Parameter "Minimum time in fan speed [0...65535]s"

This parameter defines the dwell time before the fan switches from the current fan speed to a higher fan speed or a lower fan speed, that is, the minimum time for a fan speed operation.

If you want to switch to another fan speed, you need to wait for this period of time before switching. If the current fan speed has been running for a long enough time, the fan speed can be switched quickly. Available options: **0...65535**

0: means no delay switching.

Note:

The dwell time set by this parameter is only enabled in automatic mode.

The minimum running time is required for each fan speed (including off) in the automatic mode, and the fan speed under automatic operation is changed step by step.

For example, if the current fan speed is 1, and the target fan speed is 3, then the fan speed will first change from 1 to 2, then to 3, and each fan speed operation will change after the minimum running time.

Starting the fan speed does not need to consider the minimum running time, since the starting fan speed has its own minimum running time.

If the minimum time is set to 0, switch to the target fan speed directly, the fan speed will no longer change step by step.

Parameter "Number of control value"

The description of the fan speed control value is not described in this chapter. For details, please refer to section 4.7.1.1, parameter "Number of control value".

4.8.2.2 Parameter window "Fan: Status"

The parameter window "Fan: Status" setting interface is shown in Figure 4.8.2 This interface is used to set the running status information of the fan with multi-level fan speed.

Fig. 4.8.2 Parameter window "Fan: Status"

Parameter "Reply mode of Obj. "Status Fan ON/OFF"(1bit)"

This parameter defines the reply mode of the fan switch status. Options:

Respond after read only

Respond after change

Respond after read only: The object "Status Fan ON/OFF" sends the current state of the fan to the bus only when the device receives the read fan ON/OFF status from other bus device or bus.

Respond after change: When the fan on/off status changes or the device receives a request to read the status, the object "Status Fan ON/OFF" immediately sends a telegram to the bus to report the current status.

Parameter "Reply mode of Obj. "Status Automatic"(1bit)"

This parameter is visible when the automatic operation is enabled, and defines the reply mode of the automatic operation status.

The object "Status Automatic" sends a telegram "1" to indicate that the automatic operation is activated, and the telegram "0" to indicate that the automatic operation is canceled. Options:

Respond after read only

Respond after change

Respond after read only: The object "Status Automatic" sends the current state of automatic operation to the bus only when the device receives the read status from other bus device or bus.

Respond after change: When the automatic operation status changes or the device receives a request to read the status, the object "Status Automatic" immediately sends a telegram to the bus to report the current status.

Parameter "Reply mode of Obj. "status fan speed x"(1bit)"

This parameter defines the reply method for the fan speed status. Three 1-bit objects "Status Fan speed 1", "Status Fan speed 2" and "Status Fan speed 3" are used to reply the status of each level of fan speed. Options:

Respond after read only

Respond after change

Respond after read only: The object sends the current state to the bus only when the device receives the read status from other bus device or bus.

Respond after change: When the status changes or the device receives a request to read the status, the object immediately sends a telegram to the bus to report the current status.

Parameter "Reply mode of Obj. "Status fan speed "(1byte)"

This parameter sets the reply mode of the current running fan speed state. The object is "Status fan speed" and is of 1 byte type. The status value of each stage fan speed output is defined by the next parameter. Options:

Respond after read only

Respond after change

Respond after read only: The object sends the current state to the bus only when the device receives the read status from other bus device or bus.

Respond after change: When the status changes or the device receives a request to read the status, the object immediately sends a telegram to the bus to report the current status.

Status feedback for fan speed

-- Parameter "Status value for Fan speed 1/2/3 [1..100]%"

This parameter sets the status feedback value for each fan speed. Options: **1..100**, the state value of OFF is specified as 0.

Note: the fan speed value must meet the condition fan speed $1 < 2 < 3$, if not, they can not be configured on ETS.

The priority for various operations of fan control:

Initialization(After the parameter download is completed)→Forced operation→General or automatic operation

If it is one level fan, the forced operation can be exited the automatic operation, while the multi-level fan only limits the fan speed to the allowable range. After exiting the automatic operation, it must be activated again via the automatic operation object.

4.9 Parameter window “UI setting”

The parameter setting interface “UI setting” is shown as in Fig.4.9, here you can set the universal interface function, including dry contact input detection and LED output indicator. Generally, dry contact input detection is used to connect a conventional push button or switch panel or sensor, and LED output is used to connect with LED indicator. The combination of the two function can make the LED output to indicate the input status.

Fig. 4.9 Parameter window “Channel configuration”

Parameter “Function of Channel X,(X=1-4)”

This parameter is to set the function of channel. Options:

Disable

Input

Parameter “Function of Channel X,(X=5-8)”

This parameter is to set the function of channel. Options:

Disable

Input

Output LED

Note: After the bus power-on recovery or programming, the value of all communication objects is 0.

The following parameters are general setting for LED output.

Parameter "Output LED voltage"

This parameter sets the voltage of the LED output terminal and selects it according to the power supply voltage of the connected LED indicator. Options:

5V(Max.1mA)

12V(Max.1mA)

Parameter "The connect type for the LED"

This parameter is to set the connect type for the LED output. Options:

Common-anode

Parameter "LED status object need send read request after power on"

This parameter is to set whether the LED object will send a read request after bus recovery or program downloaded.

When this parameter is disabled: Do not send. And the following parameter "Initial LED status" is visible when you choose "No".

When this parameter is enabled: Send a read request. And the LED will indicate accordingly to the responded value.

Parameter "Initial status indication"

This parameter is visible when disable in the parameter "LED status object need send read request when power on", it is to set the initial LED status. Options:

No

As status as object value "0"

No: No indication.

As status as object value "0": To indicate accordingly to the status when LED object value is 0. If the function of LED x selects "control by external object, and 1byte", there is no indication.

Parameter "Brightness of LED"

This parameter is to set the brightness of LED output indicator. If no indicator, it is off. Options:

Level 1

Level 2

Level 3

Parameter "Debounce time"

It can set the debounce time to prevent unwanted multiple operation by bouncing of contacts in vibration time, which means the effective time of the contact operation. Options:

10ms

20ms

...

150ms

4.10 Dry contact Input

Dry contact input detection support the functions of switch, dimming, sending value, scene, blind, shift register, multiple operation and delay sending value. And the parameter settings and communication objects for each input are independent of each other. The following takes an input as an example for parameter description.

4.10.1 Function “Switch”

“Switch” parameter setting interface is shown as in Fig.4.10.1, with this application, the users can press or release the contact to send a switch telegram.

--- Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > UI setting > Input 1-...

<ul style="list-style-type: none"> KNX Secure General Outputs setting Fan-... F: Auto. F: Status Output 3-... UI setting 	<p>Description (max 30char.) <input type="text"/></p> <p>Function of channel Switch</p> <p>Distinction between short and long operation <input checked="" type="radio"/> No <input type="radio"/> Yes</p> <p>Reaction on press the contact No reaction</p> <p>Reaction on release the contact TOGGLE</p> <p>Send object value after bus recovery (valid if reaction is not toggle) <input checked="" type="radio"/> No <input type="radio"/> Yes</p> <p>Number of objects <input checked="" type="radio"/> 1 <input type="radio"/> 2</p> <hr/> <p>Disable function <input type="checkbox"/></p>
--	---

Fig. 4.10.1 Parameter window “Input x- Switch”

Parameter “Distinction between short and long operation”

This parameter defines whether the contact use long/short operation or not. If choose “Yes”, you should press it for certain time, so it can be identified as long operation and will act accordingly.

—Parameter “Long operation after [3..25]*0.1s”

This parameter is used to distinguish long/short operation, you can set the valid time for long operation. So, when you press longer than the time set here, it will be identified as long operation, otherwise, it will be taken as short operation. Options: **3...25**

Parameter "Reaction on short operation" / "Reaction on press the contact"

Parameter "Reaction on long operation" / "Reaction on release the contact"

You can set the operation to be performed while pressing the contact / release contact or during long / short operation. When the input is confirmed, the object value will be updated immediately. Options:

No action

ON

OFF

TOGGLE

No action: No telegram to be sent.

ON: Send telegram for on.

OFF: Send telegram for off.

TOGGLE: Each operation will switch between on and off. For example, if the last telegram was sent (or received) for on, then the next operation will trigger a telegram for off. When the switch is operated again, it will send a telegram for on etc., So the switch will always remember the previous state and covert to opposite value during next operation.

Parameter "Send object value after bus recovery (valid if reaction is not toggle)"

It can be set whether to send the value of the object "Switch" on the bus after voltage recovery, this parameter is visible if there is no distinction between a short and long operation. Options:

No

Yes

If the parameter "Yes" is selected, it will send the current value of the object "Switch" on the bus. Only when the value "Toggle" or "No reaction" has not been set in either of the two parameters "Reaction on press/release the contact", the value of the object "Switch" can be send on the bus. If one of the two parameters has the value "TOGGLE" or "No reaction", no values are sent in general on the bus after bus voltage recovery. If "No reaction" is selected, there is no values are sent on the bus either.

Parameter "Number of objects "

This parameter is able to set one or two communication objects, when one communication object is set, press and release or long and short operation share one communication object; when two communication objects are set, press and release or long and short operation use one communication object separately. Options:

1

2

Parameter "Disable function"

This parameter is to set whether to enable the disable function of the contact.

When this parameter is enabled, then you can enable or disable the contact function through objects. It is enabled by default.

This parameter will not be illustrated in next chapters, the usage is similar.

——Parameter "Trigger value of disable object"

This parameter is set the trigger value of disable/enable the contact. Options:

Disable=1/enable=0

Disable=0/enable=1

This parameter will not be illustrated in next chapters; the usage is similar.

4.10.2 Function “Dimming”

“Dimming” parameter setting is shown in fig. 4.10.2

--- Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > UI setting > Input 1-...

KNX Secure	Description (max 30char.)	
General	Function of channel	Dimming
Outputs setting	Long operation after [3..25]	5 *0.1s
Fan-...	Connected contact type	<input checked="" type="radio"/> Normally open <input type="radio"/> Normally closed
F: Auto.	Reaction on short operation	TOGGLE
F: Status	Reaction on long operation	Brighter/Darker
Output 3-...	Dimming mode	<input type="radio"/> Start-Stop dimming <input checked="" type="radio"/> Step dimming
UI setting	Step size	12.5 %
	Interval of tele. cyclic send [0..25] (0=send once)	0 *0.1s
Input 1-...	Disable function	<input type="checkbox"/>

Fig 4.10.2 Parameter window “Input x- Dimming”

Parameter “Long operation after [3..25]*0.1s”

This parameter is used to define the time for a long operation. If operation time is longer than the time set here, the operation will be identified as long operation, otherwise as short operation.

Options: **3..25**

Parameter “Connect contact type”

This parameter defines whether the input contact is a normally closed or normally open contact. Options:

Normally open

Normally closed

The parameters that are described in this chapter are based on normally open connect type as example, the normally close connect type is just opposite.

This parameter will not be illustrated in next chapters, the usage is similar.

Parameter “Reaction on short operation”

This parameter is used to define the value sent by short operation, Options:

No action

ON

OFF

TOGGLE

No action: no telegram sent to the bus.

ON: ON telegram sent to the bus.

OFF: OFF telegram sent to the bus.

TOGGLE: Every operation is alternately ON or OFF.

Parameter "Reaction on long operation"

This parameter is used to send the relative dimming value (up or down) during long operation, releasing the contact will stop the dimming, Options:

No action

Brighter

Darker

Brighter/darker

No action: no telegram sent to the bus.

Brighter: the dimming up value will be sent.

Darker: the dimming down value will be sent.

Brighter/Darker: dimming up and down will be sent alternately.

Note: In "TOGGLE" and "Brighter/Darker" mode of the parameter settings, the dimming value sent will be linked with received switch value. For example, if the last received value is switching on status, then it will be dimmed down in next dimming operation; if the last received value is switching off, then it will be dimmed up in next dimming operation.

Parameter "Dimming mode"

This parameter is used to set the way of relative dimming, to define whether the dimming is a start-stop one or step one, Options:

Start-stop dimming

Step dimming

If "Start-stop dimming" is used, the dimming mode will be start-stop, i.e. a dimming up or down telegram will be sent when the dimming starts, and a stop telegram will be sent when dimming ends. Here the dimming telegram will not be sent cyclically.

If "Step dimming" is used, the dimming mode will be a step one and the dimming telegram will be sent cyclically. When dimming ends, a stop dimming telegram will be sent immediately.

Parameter "Step size"

Under Step dimming mode, this parameter is used to set a cyclically sending dimming telegram which changes the brightness percentage, Options:

100%
50%
...
1.56%

Parameter "Interval of tele. Cyclic send [0..25]*0.1s(0=send once) "

Under Step dimming mode, this parameter is used to set intervals of two cyclically sending dimming telegram, the range is from 0 to 25, 0 means the telegram will be sent once only.

4.10.3 Function "Value output"

"Value output" parameter setting page is shown as fig. 4.10.3

--- Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > UI setting > Input 1-...

<ul style="list-style-type: none"> KNX Secure General Outputs setting Fan-... F: Auto. F: Status Output 3-... UI setting Input 1-... 	<p>Description (max 30char.)</p> <p>Function of channel: Value output</p> <p>Distinction between short and long operation: <input type="radio"/> No <input checked="" type="radio"/> Yes</p> <p>Long operation after [3..25]: 5 *0.1s</p> <p>Connected contact type: <input checked="" type="radio"/> Normally open <input type="radio"/> Normally closed</p> <p>Reaction on short operation: 1Bit value[0..1]</p> <p>Output value [0..1]: 0</p> <p>Reaction on long operation: 2Bit value[0..3]</p> <p>Output value [0..3]: 0</p> <p>Disable function: <input type="checkbox"/></p>
---	--

Fig. 4.10.3 Parameter window "Input x- Value output"

Parameter "Distinction between short and long operation"

This parameter defines whether the contact use long/short operation or not. If choose "Yes", you should press it for certain time, so it can be identified as long operation and will act accordingly. Options:

Yes

No

——Parameter “Long operation after [3..25]*0.1s”

This parameter is used to distinguish long/short operation, here the long operation activation time can be set. In operation when the contact is pressed longer than the time set here, it will be recognized as long operation, or else short operation.

Parameter “Reaction on short operation”/ “Reaction on press the contact”

Parameter “Reaction on long operation”/ “Reaction on release the contact”

This parameter is used to set the data type sent when contact is pressed/released or short/long operation, Options:

No reaction

1bit value [0...1]

.....

2 byte value [0...65535]

——Parameter“Output value[...]”

This parameter is used to define the data value sent after operation, range of the value is defined by the above parameter data type.

4.10.4 Function “Scene control”

“Scene control” parameter setting page is shown in fig. 4.10.4.

--- Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > UI setting > Input 1-...

KNX Secure	Description (max 30char.)	
General	Function of channel	Scene control
Outputs setting	Distinction between short and long operation	<input type="radio"/> No <input checked="" type="radio"/> Yes
Fan-...	Long operation after [3..25]	5 *0.1s
F: Auto.	Connected contact type	<input checked="" type="radio"/> Normally open <input type="radio"/> Normally closed
F: Status	Reaction on short operation	Recall scene
Output 3-...	8 bit scene number	Scene NO.1
UI setting	Reaction on long operation	Store scene
Input 1-...	8 bit scene number	Scene NO.1
	Number of objects	<input checked="" type="radio"/> 1 <input type="radio"/> 2
	Disable function	<input type="checkbox"/>

Fig. 4.10.4 Parameter window “Input x- Scene control”

Parameter “Distinction between short and long operation”

This parameter defines whether the contact use long/short operation or not. If choose “Yes”, you should press it for certain time, so it can be identified as long operation and will act accordingly. Options:

Yes

No

—Parameter “Long operation after [3..25]*0.1s”

This parameter is used to distinguish long/short operation, here the long operation activation time can be set. In operation when the contact is pressed longer than the time set here, it will be recognized as long operation, or else short operation, Options: **3..25**.

Parameter “Reaction on short operation”/ “Reaction on press the contact”

Parameter “Reaction on long operation”/ “Reaction on release the contact”

This parameter is used to set the reaction for the scene use or storage when contact is pressed/released or short/long operation, Options:

No reaction

Recall scene

Store scene

—Parameter“8 bit scene number”

This parameter is used to set the scene number, Options: **Scene NO.1 ...64** , is correspondent to telegram 0~63.

Parameter “Number of objects ”

This parameter is able to set one or two communication objects, when one communication object is set, press and release or long and short operation share one communication object; when two communication objects are set, press and release or long and short operation use one communication object separately. Options:

1

2

4.10.5 Function “Blind”

“Blind” parameter setting is shown in fig. 4.10.5

Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > UI setting > Input 1-...

KNX Secure	Description (max 30char.)	
General	Function of channel	Blind
Outputs setting	Long operation after [3..25]	5 * 0.1s
Fan-...	Connected contact type	<input checked="" type="radio"/> Normally open <input type="radio"/> Normally closed
F: Auto.	Reaction on short operation	Up/Down
F: Status	Reaction on long operation	Stop(Adjust Up/Down)
Output 3-...	Interval of tele. cyclic send [0..25] (0=send once)	0 * 0.1s
UI setting	Disable function	<input type="checkbox"/>

Fig. 4.10.5 Parameter window “Input x- blind”

Parameter “Long operation after [3..25]*0.1s”

This parameter is used to set the activation time of long operation. If the contact is pressed longer than the time set here, the operation will be defined as long operation, or else short operation. Options: **3..25**.

Parameter "Reaction on short/long operation"

This Parameter is used to set the actions when the contact is operated in short/long operation, Options:

No action

Up

Down

Up/Down

Stop (Adjust Up)

Stop (Adjust Down)

Stop (Adjust Up/Down)

No action: no action is performed.

Up: the shutter/blinds will be opened or moved up.

Down: the shutter/blinds will be closed or moved down.

Up/Down: alternately open/close or move up/down the shutter/blinds

Stop (Adjust Up): stop the shutter movement or move up one angle of blinds.

Stop (Adjust Down): or move down the angle of blinds.

Stop (Adjust Up/Down): stop the shutter movement or move up/down the angle of blinds alternately.

Parameter "Interval of Tele. Cyclic send (*0.1s, 0=send once) "

This parameter is visible when last one is chosen as "Stop...", it is used to set the time interval of cyclical blinds angle adjustment telegram sent, Options are 0..25, means once only.

4.10.6 Function “Shift register”

“Shift register” parameter setting page is shown in fig. 4.10.6, this function can send value by the way of shift register.

Fig. 4.10.6 Parameter window “Input x- Shift register”

Parameter “Shift type”

This parameter is used to set the shift type, whether shift by step value or without step value, Options:

Shift by step value

Shift without step value

Shift by step value: here the starting value and stopping value of shift can be set, the value increased (from low to high) or decreased (from high to low) from every shift can also be set.

Shift without step value: when there’s no step value, the actual value sent by each shift can be set (max. 10 value), in every operation one value will be sent.

Parameter “Value begin with”

This parameter is available when the “Shift by step value” is activated. It is used to set the starting value of the shift, Options: **0..240**.

——Parameter “Value end with (must be larger than value begin with)”

This parameter is available when the “Shift by step value” is activated. It is used to set the stopping value of the shift, Options: **1..255**.

The end value must be larger than begin value.

——Parameter “Step size”

This parameter is available when the “Shift by step value” is activated. It is used to set the increase (from low to high) or decrease (from high to low) value, Options: **0...240**.

Parameter “Shift number”

This parameter is available when “Shift without step value” is activated. It is used to set number of shift, with maximum 10 value, Options: **1/2/.../10**.

Setting the value sent from each shift in the following parameters:

——Parameter “Value 1/.../10”

This parameter is used to set the value of every shifting operation, Options: **0..255**

Parameter “Direction”

This parameter is used to set the shift direction, Options:

From lowest to highest and stop to the end

From highest to lowest and stop to the begin

From lowest to highest and cyclically

From highest to lowest and cyclically

From lowest to highest and stop to the end: shift from low to high, e.g. from starting value to stopping value, or value 1 to value 10; when it reaches stopping value or value 10, the shift will start once more from starting value or value 1.

From highest to lowest and stop to the begin: shift from high to low, e.g. from stopping value to starting value, or value 10 to value 1; when it reaches starting value or value 1, the shift will start once more from stopping value or value 10.

From lowest to highest and cyclically: shift from low to high, e.g. value 1 to value 10, can restart continuously cycling from low to high operation.

From highest to lowest and cyclically: shift from high to low, e.g. value 10 to value 1, can restart continuously cycling from high to low operation.

Parameter "Reset function"

This parameter is used to set the possibility of enable/disable shift reset function, Options:

Disable

Enable by long operation

Disable: not possible to reset shift.

Enable by long operation: possible to reset shift by long operation, when reset, shift will start new.

Parameter "Reaction on press/release the contact"

This parameter is available when the shift reset function is disabled. It is used to define whether the shift operation will be effected when the contact is pressed/released, Options:

No reaction

Send shift value

Parameter "Long operation after [3..25]*0.1s"

This parameter is available when the shift reset function is enabled. It is used to set the effective time of long operation. So when the contact is pressed for longer time than time set here, it will be defined as long operation, or else short operation, Options: **3..25**.

4.10.7 Function “Multiple operation”

Parameter setting interface of “Multiple operation” can be shown in fig. 4.10.7 Multiple operation functions are set here, with the application, different predefined values can be sent out and different types of functions can be invoked for an operation of the rocker switch. Max. 4 different objects value can be set for each input. Parameter is described as below:

Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > UI setting > Input 1-...

KNX Secure

General

Outputs setting

Fan-...

F: Auto.

F: Status

Output 3-...

UI setting

Input 1-...

Description (max 30char.)

Function of channel

Distinction between short and long operation

Object type for object1

Function of press the contact

Object type for object2

Function of press the contact

Object type for object3

Function of press the contact

Value 1 (Scene NO.)

Object type for object4

Function of press the contact

Value 1 (Percentage)

Disable function

Multiple operation

☒ No ☐ Yes

1Bit_On/Off

TOGGLE

1Bit_On/Off

TOGGLE

1Byte_RecallScene

☐ No reaction ☒ Send Value

Scene NO.1

1Byte_Percentage

☐ No reaction ☒ Send Value

30

☐

Fig. 4.10.7(1) Parameter window “Input x- Multiple Operation” (no distinctions between long & short operation)

Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > UI setting > Input 1-...

<div> <div>KNX Secure</div> <div>General</div> <div>Outputs setting</div> <div> <div>Fan-...</div> <div>F: Auto.</div> <div>F: Status</div> <div>Output 3-...</div> </div> <div>UI setting</div> </div> <div>Input 1-...</div>	<div>Description (max 30char.)</div> <div>Function of channel</div> <div>Distinction between short and long operation</div> <div>Long operation after [3..25]</div> <div>Connected contact type</div> <div>Object type for object1</div> <div>Function of short operation</div> <div>Function of long operation</div> <div>Object type for object2</div> <div>Function of short operation</div> <div>Function of long operation</div> <div>Object type for object3</div> <div>Function of short operation</div> <div>Value 1 (Scene NO.)</div> <div>Function of long operation</div> <div>Value 2 (Scene NO.)</div> <div>Object type for object4</div> <div>Function of short operation</div> <div>Value 1 (Percentage)</div> <div>Function of long operation</div> <div>Value 2 (Percentage)</div> <div>Disable function</div>	<div></div> <div>Multiple operation</div> <div> <input type="radio"/> No <input checked="" type="radio"/> Yes </div> <div>5 *0.1s</div> <div> <input checked="" type="radio"/> Normally open <input type="radio"/> Normally closed </div> <div>1Bit_On/Off</div> <div>TOGGLE</div> <div>TOGGLE</div> <div>1Bit_On/Off</div> <div>TOGGLE</div> <div>TOGGLE</div> <div>1Byte_RecallScene</div> <div> <input type="radio"/> No reaction <input checked="" type="radio"/> Send Value </div> <div>Scene NO.1</div> <div> <input type="radio"/> No reaction <input checked="" type="radio"/> Send Value </div> <div>Scene NO.2</div> <div>1Byte_Percentage</div> <div> <input type="radio"/> No reaction <input checked="" type="radio"/> Send Value </div> <div>30</div> <div> <input type="radio"/> No reaction <input checked="" type="radio"/> Send Value </div> <div>100</div> <div><input type="checkbox"/></div>
--	---	---

Fig. 4.10.7(2) Parameter window "Input x- Multiple Operation" (Distinctions of Long & Short Operation)

Parameter "Distinction between short and long operation"

This parameter defines whether the contact use long/short operation or not. If choose "Yes", you should press it for certain time, so it can be identified as long operation and will act accordingly. Options:

Yes

No

—Parameter "Long operation after [3..25]*0.1s"

This parameter is used to distinguish long/short operation, you can set the valid time for long operation. So, when you press longer than the time set here, it will be identified as long operation, otherwise, it will be taken as short operation. Options: **3...25**

Parameter "Object type for object x(x=1..4)"

Setting here when pressing contact or long/short operation, the data type of sending out.

Options:

Disable

1Bit_On/Off

.....

1Byte_Unsigned value

— — **Parameter "Function of press the contact/ Function of short operation/ Function of long operation"**

Setting the specific values of sending here when executing the operation, either no action or sending value (the specific value will be set in next parameter).

——**Parameter"Value 1/2 (...) "**

The parameter is visible when object type is selecting "1byte_RecallScene" "1byte_Store Scene" "1byte_Percentage" "1byte_Unsigned value". It's used to set sending values when executing operations. The range of value is up to the data type selected by the parameter before last one.

4.10.8 Function “Delay mode”

Parameter window of “Delay mode” can be shown in fig. 4.10.8 It’s used to set delay mode function here. Sending a value or none when operating, then delaying for a period, another value will be sent out.

--- Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > UI setting > Input 1-...

<div>KNX Secure</div> <div>General</div> <div>Outputs setting</div> <div>Fan-...</div> <div>F: Auto.</div> <div>F: Status</div> <div>Output 3-...</div> <div>UI setting</div>	Description (max 30char.)		
	Function of channel	Delay mode	
	Distinction between short and long operation	<input checked="" type="radio"/> No <input type="radio"/> Yes	
	Object type for press the contact	1Bit_On/Off	
	Send mode	No action when press,delay then send value1	
	Delay time [0..6500]	10 s	
	Value 1	<input checked="" type="radio"/> 0 <input type="radio"/> 1	
	Value 2	<input type="radio"/> 0 <input checked="" type="radio"/> 1	
	Disable function		<input type="checkbox"/>

Input 1-...

Fig.4.10.8(1) Parameter window “Input x- Delay mode” (no distinction between long & short operation)

--- Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > UI setting > Input 1-...

<div>KNX Secure</div> <div>General</div> <div>Outputs setting</div> <div>Fan-...</div> <div>F: Auto.</div> <div>F: Status</div> <div>Output 3-...</div> <div>UI setting</div>	Description (max 30char.)		
	Function of channel	Delay mode	
	Distinction between short and long operation	<input type="radio"/> No <input checked="" type="radio"/> Yes	
	Long operation after [3..25]	5 *0.1s	
	Connected contact type	<input checked="" type="radio"/> Normally open <input type="radio"/> Normally closed	
	Object type for short operation	1Bit_On/Off	
	Send mode	No action when press,delay then send value1	
	Delay time [0..6500]	10 s	
	Value 1	<input checked="" type="radio"/> 0 <input type="radio"/> 1	
	Value 2	<input type="radio"/> 0 <input checked="" type="radio"/> 1	
<div>Input 1-...</div>	Object type for long operation	1Bit_On/Off	
	Send mode	No action when press,delay then send value1	
	Delay time [0..6500]	10 s	
	Value 1	<input checked="" type="radio"/> 0 <input type="radio"/> 1	
	Value 2	<input type="radio"/> 0 <input checked="" type="radio"/> 1	
	Disable function		<input type="checkbox"/>

Fig.4.10.8(2) Parameter window “Input x- Delay Mode” (Distinction between long & short operation)

Parameter "Distinction between short and long operation"

This parameter defines whether the contact use long/short operation or not. If choose "Yes", you should press it for certain time, so it can be identified as long operation and will act accordingly. Options:

Yes

No

—Parameter "Long operation after [3..25]*0.1s"

The parameter is visible when distinguishing the short and long operation, and setting the valid time for long operation here. Therefore, when the operating time of contact surpasses the setting time here, the operation is defined as long operation, otherwise, it's considered as short operation. Options: **3..25**

Parameter "Object type for press the contact/ Object type for short operation/ Object type for long operation"

Setting here when pressing contact or long/short operation, the data type of sending out. Options:

Disable

1Bit_On/Off

4Bit_Dimming

1Byte_Unsigned value

—Parameter "Send mode"

Setting the sending mode here. Options:

No action when press, delay then send value 1

No action when press, delay then send value 2

Send value 1 when press, delay then send value 2

Send value 2 when press, delay then send value 1

—Parameter "Delay time [0..6500]s"

Setting delay time here. Options: **0..6500s**

—Parameter "value1/2 [...]"

Setting the data value 1/2 to send. The range of value is up to the selected data type.

4.11 LED output

The LED output is used to indicator according to the received value of the external object, or always-on indication. Each LED function can be set individually. Take one of the LED for detailed explanation.

--- Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > UI setting > LED 5-...

<div> <div>KNX Secure</div> <div>General</div> <div>Outputs setting</div> <div>Output 1-...</div> <div>O1: Function</div> </div>	<div>Description (max 30char.)</div> <div>Status LED indication</div> <div>External object datatype</div> <div>When object value="0", LED is</div> <div>When object value="1", LED is</div>	<div></div> <div>Control by external object</div> <div> <input checked="" type="radio"/> 1Bit <input type="radio"/> 1Byte </div> <div> <input checked="" type="radio"/> OFF <input type="radio"/> ON </div> <div> <input type="radio"/> OFF <input checked="" type="radio"/> ON </div>
--	---	--

External object - 1bit

--- Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > UI setting > LED 5-...

<div> <div>KNX Secure</div> <div>General</div> <div>Outputs setting</div> <div>Output 1-...</div> <div>O1: Function</div> <div>O1: Time</div> <div>O1: Scene</div> </div>	<div>Description (max 30char.)</div> <div>Status LED indication</div> <div>External object datatype</div> <div>Threshold value is</div> <div>If object value<threshold value, LED is</div> <div>If object value=threshold value, LED is</div> <div>If object value>threshold value, LED is</div>	<div></div> <div>Control by external object</div> <div> <input type="radio"/> 1Bit <input checked="" type="radio"/> 1Byte </div> <div>50</div> <div> <input checked="" type="radio"/> OFF <input type="radio"/> ON </div> <div> <input type="radio"/> OFF <input checked="" type="radio"/> ON </div> <div> <input checked="" type="radio"/> OFF <input type="radio"/> ON </div>
---	--	---

External object - 1byte

--- Multifunctional Actuator with Secure, 3-Fold, Flush Mounted > UI setting > LED 5-...

<div> <div>KNX Secure</div> <div>General</div> <div>Outputs setting</div> </div>	<div>Description (max 30char.)</div> <div>Status LED indication</div>	<div></div> <div>Always on</div>
--	---	----------------------------------

Always on

Fig. 4.11 Parameter window "LED X"

Parameter "Status LED indication"

LED function setting, Options:

None

Control by external object

Always on

None: Deactivating LED function;

Control by external object: The LED indicates according to the value received by the external object.

Always on: Constant light indicator.

Parameter "External object datatype"

This parameter is available when LED function "Control by external object" is activated. It is used for setting the data type of the LED object, Options:

1bit

1byte

—Parameter "The object value = '0/1', LED is"

This parameter is available when the LED function "Control by external object and 1bit" is activated.

OFF

ON

Parameter "Threshold value is"

This parameter is available when the LED function "Control by external object and 1byte" is activated. It is used for setting the threshold value of the LED indication. Options: **1..255**

—Parameter "If object value < threshold value, LED is"

This parameter is available when the LED function "Control by external object and 1byte" is activated. It is used for setting the status of the LED indication when the object value is smaller than the threshold value. The Options:

OFF

ON

—Parameter “If object value=threshold value, LED is”

This parameter is available when the LED function “Control by external object and 1byte” is activated. It is used for setting the status of the LED indication when the object value is the same with the threshold value. The Options:

OFF

ON

—Parameter “If object value>threshold value, LED is”

This parameter is available when the LED function “Control by external object and 1byte” is activated. It is used for setting the status of the LED indication when the object value is larger than the threshold value. The Options:

OFF

ON

Chapter 5 Communication Object Description

The communication object is the medium through which the device communicates with other devices on the bus, that is, only the communication object can perform bus communication.

The function of each communication object of each function block is described in detail below.

Note: "C" in the property bar of the table below represents the communication function of the communication object;

"W" represents the value of the communication object can be rewritten by the bus;

"R" represents the value of the communication object can be read through the bus;

"T" stands for communication object with transmission function;

"U" means that the value of the communication object can be updated.

5.1 Communication object of switch output

5.1.1 Communication object of switch actuator

Number	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
1	General	In operation			1 bit	C	-	-	T	-	switch	Low
2	Output 1 Switch	Switch			1 bit	C	-	W	-	-	switch	Low
3	Output 1 Switch	Switch status			1 bit	C	R	-	T	-	switch	Low
4	Output 1 Switch	Enable time function			1 bit	C	-	W	-	-	enable	Low
5	Output 1 Switch	Delay function			1 bit	C	-	W	-	-	switch	Low
6	Output 1 Switch	Operation hours counter			4 bytes	C	R	W	T	U	time lag (s)	Low
7	Output 1 Switch	Scene			1 byte	C	-	W	-	-	scene control	Low
8	Output 1 Switch	Forced output			2 bit	C	-	W	-	-	switch control	Low
9	Output 1 Switch	Logic 1			1 bit	C	-	W	-	-	boolean	Low
10	Output 1 Switch	Logic 2			1 bit	C	-	W	-	-	boolean	Low
5	Output 1 Switch	Flashing function			1 bit	C	-	W	-	-	switch	Low
5	Output 1 Switch	Staircase function			1 bit	C	-	W	-	-	switch	Low
6	Output 1 Switch	Operation hours counter			2 bytes	C	R	W	T	U	time (h)	Low
8	Output 1 Switch	Forced output			1 bit	C	-	W	-	-	enable	Low

Fig. 5.1 Communication objects of switch output-switch actuator

No.	Name	Object function	Type	Flags	DPT
1	General	In operation	1bit	C,T	1.001 DPT_Switch
<p>This communication object is used to periodically send a telegram "1" to the bus to indicate that the device is functioning properly. This communication object is always enabled.</p>					
2	Output X Switch	Switch	1bit	C,W	1.001 DPT_Switch
<p>This communication object is used to trigger the switch operation.</p> <p>When "input 0" in the logic function is enabled, The communication object "switch" is not directly used to trigger the switch operation., the action of the switch will be affected by the logic function. Please refer to the following flow chart for details:</p> <pre> graph TD Switch[Object "Switch"] --> SwitchFunc[Switch function] SwitchFunc --> Decision{Is logic "Input0" enable?} Decision -- No --> Output[Output
Relay to perform an action] Decision -- Yes --> LogicBox subgraph LogicBox [] direction LR L1[AND, OR, XOR, GATE
Logical connection] L2[AND, OR, XOR, GATE
Logical connection] L1 --> L2 L1 --> LogicFunc[Logic function] LogicFunc --> L2 end L1Out[Object "Logic 1"] --> L1 L2In[Object "Logic 2"] --> L2 L2 -- Result --> Output end </pre>					
3	Output X Switch	Switch status	1bit	C,R,T	1.001 DPT_Switch
<p>The value of this communication object (Specifically set in the parameter "Object value of switch status:" in Figure 4.3 "Output X") Can directly indicate the status of the relay contacts.</p> <p>If you choose "Respond after read only", only when the device receives a request from the bus to read the status of the channel switch, this object sends the current switch state to the bus;</p> <p>If you choose "Respond after change", when the switching state of the channel changes, This object immediately sends the current switch state to the bus.</p>					

4	Output X Switch	Enable time function	1bit	C,W	1.003 DPT_Enable
<p>The communication object is enabled when the time function is enabled. Time function can be prohibited by this communication object, When the communication object receives a message with a logical value of "1", the time function is enabled; When the telegram of "0" is received, the time function is disabled, but the operation before the disabling will continue to be completed, and time control command received during disable time is ignored.</p> <p>When the time function is turned on, the time function is enabled by default when the bus resumes power supply.</p>					
5	Output X Switch	Delay function	1bit	C,W	1.001 DPT_Switch
<p>The communication object is enabled when the parameter "Type of time function" is selected as "Delay", and the delay switch is turned on by this communication object.</p>					
5	Output X Switch	Flashing function	1bit	C,W	1.001 DPT_Switch
<p>The communication object is enabled when "Flashing" is selected in the parameter "Type of time function", and the flashing switch is turned on by this communication object.</p>					
5	Output X Switch	Staircase function	1bit	C,W	1.001 DPT_Switch
<p>The communication object is enabled when the parameter "Type of time function" is selected as "Staircase", and the stair light function is activated by this communication object.</p>					
6	Output X Switch	Operation hours counter	2byte 4byte	C,R,W ,T,U	7.007 DPT_TimePeriodHrs 13.100 DPT_LongDeltaTimeSec
<p>This communication object is used to report the time when the load of this loop is powered on, Displayed when "Enable" is selected in the parameter "Function of "Operation hours counter"", data type can be selected by "Object data type of "Operation hours counter"", the unit of 2byte type is hour, and the unit of 4byte is second.</p>					
7	Output X Switch	Scene	1byte	C,W	18.001 DPT_SceneControl
<p>The scene can be called or stored by sending an 8-bit instruction through this communication object. This communication object is enabled as long as the scene function is enabled. The meaning of the 8-bit instruction is explained in detail below.</p> <p>Set an 8-bit instruction to (binary code): FXNNNNNN</p> <p style="text-align: center;">F: "0" is the calling scene; "1" is the storage scene;</p> <p style="text-align: center;">X: 0;</p> <p style="text-align: center;">NNNNNN: Scene no. (0...63) 。</p> <p>The parameter setting option is 1~64. In fact, the scene message received by the communication object "Scene" corresponds to 0~63. If scene 1 is set in the parameter, the communication object "Scene" should receive the scene message 0. As follows:</p>					

<table> <tr> <th colspan="2">Object message value</th><th colspan="4">Description</th></tr> <tr> <td colspan="2">0</td><td colspan="4">recall scene1</td></tr> <tr> <td colspan="2">1</td><td colspan="4">recall scene2</td></tr> <tr> <td colspan="2">2</td><td colspan="4">recall scene3</td></tr> <tr> <td colspan="2">...</td><td colspan="4">...</td></tr> <tr> <td colspan="2">63</td><td colspan="4">recall scene64</td></tr> <tr> <td colspan="2">128</td><td colspan="4">storage scene1</td></tr> <tr> <td colspan="2">129</td><td colspan="4">storage scene2</td></tr> <tr> <td colspan="2">130</td><td colspan="4">storage scene3</td></tr> <tr> <td colspan="2">...</td><td colspan="4">...</td></tr> <tr> <td colspan="2">191</td><td colspan="4">storage scene64</td></tr> </table>						Object message value		Description				0		recall scene1				1		recall scene2				2		recall scene3							63		recall scene64				128		storage scene1				129		storage scene2				130		storage scene3							191		storage scene64			
Object message value		Description																																																																					
0		recall scene1																																																																					
1		recall scene2																																																																					
2		recall scene3																																																																					
...		...																																																																					
63		recall scene64																																																																					
128		storage scene1																																																																					
129		storage scene2																																																																					
130		storage scene3																																																																					
...		...																																																																					
191		storage scene64																																																																					
8	Output X Switch	Forced output	1bit 2bit	C,W	1.003 DPT_Enable 2.001 DPT_Switch control																																																																		
<p>This communication object is enabled after the enforcement function is enabled.</p> <p>In 1 bit, when the message value "1" is received, the enforcement mode is enabled. At this time, the device ignores other actions except for enforcement. When the message value "0" is received, the forced execution mode is ended, and the position of the contact at the time of forced operation is set by the parameter.</p> <p>At 2bit, the contact is forcibly closed when the message value "3" is received; The contact is forcibly disconnected when the message value "2" is received; the enforcement mode is canceled when the message value "1" or "0" is received.</p>																																																																							
9	Output X Switch	Logic 1	1bit	C,W	1.002 DPT_Bool																																																																		
<p>This communication object is enabled when the parameter "enable" is selected in the parameter "The input 1 of logic" for the logic input of input1.</p>																																																																							
10	Output X Switch	Logic 2	1bit	C,W	1.002 DPT_Bool																																																																		
<p>This communication object is enabled when the parameter "enable" is selected in the parameter "The input 2 of logic" for the logic input of input2.</p>																																																																							

Table 5.1 Communication object table of switch output

5.1.2 Communication object of heating actuator(without controller)

Number ^	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
1	General	In operation			1 bit	C	-	-	T	-	switch	Low
2	Output 1 Switch	On-off control value			1 bit	C	-	W	-	-	switch	Low
3	Output 1 Switch	Status of contact			1 bit	C	R	-	T	-	switch	Low
7	Output 1 Switch	Report fault			1 bit	C	R	-	T	-	alarm	Low
8	Output 1 Switch	Forced output			1 bit	C	-	W	-	-	enable	Low

1bit (on-off control or PWM))

Number ^	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
1	General	In operation			1 bit	C	-	-	T	-	switch	Low
3	Output 1 Switch	Status of contact			1 bit	C	R	-	T	-	switch	Low
5	Output 1 Switch	Control value(Continuous)			1 byte	C	-	W	-	-	percentage (0..100%)	Low
6	Output 1 Switch	Status of continuous, 1byte			1 byte	C	R	-	T	-	percentage (0..100%)	Low
4	Output 1 Switch	Status of continuous, 1bit			1 bit	C	R	-	T	-	switch	Low

1byte(Continuous))

Fig. 5.2 Communication objects of switch output-heating actuator(without controller)

No.	Name	Object function	Type	Flags	DPT
2	Output X Switch	On-off control value	1bit	C,W	1.001 DPT_Switch
The communication object is enable when option“1bit(on-off control or PWM)”is selected in parameter“Control telegram is received as”, sending 1 bit control value via this object. When receive “0”, the valve close; when receive “1”, the valve open.					
3	Output X Switch	Status of contact	1bit	C,R,T	1.001 DPT_Switch
This communication object is enabled when“Yes, 1= contact close; 0=contact open”or “Yes, 0= contact close; 1= contact open” is selected in parameter“Reply the status for contact”.This communication object can directly indicate the status of contact.					
5	Output X Switch	Control value(continuous)	1byte	C,W	5.001 DPT_Scaling
The communication object is enabled when option “1byte(Continuous)” is selected in parameter “Control telegram is received as”, sending 1 byte control value via this object. The value range of the object is 0..100%, when receive “0%”, the valve close; when received “100%”, the valve all open.					
4	Output X Switch	Status of continuous,1 bit	1bit	C,R,T	1.001 DPT_Switch
This communication object is enabled when option” Yes , 0%=0, otherwise “1”(1bit)”or “Yes , 0%=1, otherwise “0”(1bit)” is selected in parameter” Reply the status for continuous control”. This object indicates the running status of the current valve. When “Yes, 0% =0, otherwise“1”(1 bit)” is selected, telegram “0” indicates valve close, telegram “1” indicates other cases; When “Yes, 0% =1, otherwise“0”(1 bit)” is selected, telegram “1” indicates valve close, telegram “0” indicates other cases;					
6	Output X Switch	Status of continuous,1byte	1byte	C,R,T	5.001 DPT_Scaling
This communication object is enabled when option “Yes, continues control value (1byte) ” is selected in parameter ” Reply the status for continuous control”. The object indicates the running status of the current valve, for knowing the setting value of the PWM control.					

7	Output X Switch	Report fault	1bit	C,R,T	1.005 DPT_Alarm
<p>The communication object is visible when enable monitor function and "Send object "Report fault" is" is selected as "Enable", the object for indicating whether room temperature controller is faulty, object value "1" indicate enter faulty mode, "0" indicate exit faulty mode.</p>					
8	Output X Switch	Forced output	1bit	C,W	1.003 DPT_Enable
<p>This communication object is enabled after the forced function is enabled.</p> <p>When the logic value "1" is received, the forced operation is enabled. At this time, the device ignores other actions except for forced operation. When the logic value "0" is received, the forced execution mode is ended. When forced operation, the position of the contact at the time of forced operation is set by the parameter. Exit forced operation, control status recover the status before.</p>					

Table 5.2 Communication object table for switch output-heating actuator(without controller)

5.2 Communication object of curtain output

Number ^	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
1	General	In operation			1 bit	C	-	-	T	-	switch	Low
2	Output Curtain	Move UP/DOWN			1 bit	C	-	W	-	-	up/down	Low
3	Output Curtain	Slat adj/stop			1 bit	C	-	W	-	-	step	Low
4	Output Curtain	Reference movement			1 bit	C	-	W	-	-	up/down	Low
5	Output Curtain	Move to position 0..100%			1 byte	C	-	W	-	-	percentage (0..100%)	Low
6	Output Curtain	Slat position 0..100%			1 byte	C	-	W	-	-	percentage (0..100%)	Low
7	Output Curtain	Scene			1 byte	C	-	W	-	-	scene control	Low
8	Output Curtain	Position status 0..100%			1 byte	C	R	-	T	-	percentage (0..100%)	Low
9	Output Curtain	Slat status 0..100%			1 byte	C	R	-	T	-	percentage (0..100%)	Low
10	Output Curtain	Sun operation			1 bit	C	-	W	-	-	switch	Low
11	Output Curtain	Enable auto.control			1 bit	C	-	W	-	-	enable	Low
12	Output Curtain	Sun: blind position 0..100%			1 byte	C	-	W	-	-	percentage (0..100%)	Low
13	Output Curtain	Sun:slat adj. 0..100%			1 byte	C	-	W	-	-	percentage (0..100%)	Low
14	Output Curtain	Safety operation 1			1 bit	C	-	W	-	-	alarm	Low
15	Output Curtain	Safety operation 2			1 bit	C	-	W	-	-	alarm	Low
16	Output Curtain	Status of operation			1 byte	C	R	-	T	-		Low

Fig. 5.3 Communication objects of curtain output

No.	Name	Object function	Type	Flags	DPT
2	Output Curtain	Move UP/DOWN	1bit	C,W	1.008 DPT_UpDown
<p>If the communication object receives a message of "0", the curtain move up; If the object receives the message "1", the curtain move down. Telegram value:</p> <p>Telegram "0" --- the curtain move up / the curtains open</p> <p>Telegram "1" --- the curtain moving down / curtains closed</p>					
3	Output Curtain	Slat adj. / Stop	1bit	C,W	1.007 DPT_Step
3	Output Curtain	Stop	1bit	C,W	1.007 DPT_Step
<p>If the curtain is in the move operation, when the communication object receives a message of "0" or "1", the operation stops.</p>					

Venetian Blind operated mode: If the curtain is not running, the communication object adjusts the louver upward when receiving the message "0", and adjusts the louver downward when receiving the message "1".

Shutter operation mode: If the curtain is not running, the communication object will not perform any action when receiving any message. Telegram value:

Telegram "0" — stop/adjust the louver upwards

Telegram "1" — stop/down adjust louver

When the louver is adjusted to the limit position, the adjustment message will be ignored when the adjustment is continued.

4	Output Curtain	Reference movement	1bit	C,W	1.008 DPT_UpDown
----------	-----------------------	---------------------------	-------------	------------	-------------------------

When the parameter "After reference movement, Position is" is not "disable", this object is enabled, The object is used to make a reference movement of the curtain to ensure accurate positioning of the curtain.

Etailed description in the parameters section. Telegram value:

Telegram "0" — the curtain run to the top and then run to the target position

Telegram "1"— the curtain run to the bottom and then run to the target position

5	Output Curtain	Move to position 0...100%	1byte	C,W	5.001 DPT_Scaling
----------	-----------------------	----------------------------------	--------------	------------	--------------------------

If the communication object receives a message value, the curtain move to the position corresponding to this value. In the "Venetian Blind" operating mode, the position of the louver does not change, after moving to the target position, the position of the louver is adjusted to the previous position, unless the communication object "Slat position 0...100%" receives a message value, The position of the louver will be positioned accordingly based on this message value. Telegram value:

0% — move to the top

..... — middle position

100% — move to the bottom

6	Output Curtain	Slat position 0...100%	1byte	C,W	5.001 DPT_Scaling
----------	-----------------------	-------------------------------	--------------	------------	--------------------------

The communication object is only visible in the "Venetian Blind" mode of operation. If the communication object receives a message value, the louver performs corresponding positioning according to the message value. Telegram value:

0% — the louver is fully open

..... — middle position

100% — louvers are completely closed

7	Output Curtain	Scene	1byte	C,W	18.001 DPT_SceneControl
----------	-----------------------	--------------	--------------	------------	--------------------------------

The scene of the shutter actuator can be called or stored by sending an 8-bit instruction via this communication object. The meaning of the 8-bit instruction is explained in detail below.

Set an 8bit instruction to (binary code): FXNNNNNN

F: Calling the scene for '0'; storing the scene for '1';

X: 0;

NNNNNN: Scenes no. (0...63) 。

The parameter setting option is 1~64. In fact, the scene message received by the communication object "Scene" corresponds to 0~63. If the scene is set in the parameter 1, the communication object "Scene" receives the scene as 0. as follows:

Object message value	Description
0	Recall scene 1
1	Recall scene 2
2	Recall scene 3
...	...
63	Recall scene 64
128	Storage scene 1
129	Storage scene 2
130	Storage scene 3
...	...
191	Storage scene 64

8	Output Curtain	Position status 0..100%	1byte	C,R,T	5.001 DPT_Scaling
<p>The communication object is used to send the position of the curtain, and when the curtain run to the target position, the location is immediately sent to the bus. Telegram value:</p> <p>0% — at the top — middle position 100% — at the bottom</p>					
9	Output Curtain	Slat status 0..100%	1byte	C,R,T	5.001 DPT_Scaling
<p>The communication object is only visible in the "Venetian Blind" mode of operation and is used to transmit the position of the louver. When the louver runs to the target position, the louver position is immediately sent to the bus. Telegram value:</p> <p>0% — the louver is fully open — middle position 100% — louvers are completely closed</p>					
10	Output Curtain	Sun operation	1bit	C,W	1.001 DPT_Switch
<p>When the communication object receives the message "0" or "1", the curtain move to the predefined position, as described in the parameter section.</p>					
11	Output Curtain	Enable auto. control	1bit	C,W	1.003 DPT_Enable
<p>This communication object is used to disable and enable automatic operation. It receives the message "0" and exits the automatic operation; it receives the message "1" and enables automatic operation. Telegram value:</p> <p>Telegram "0" — exit automatic operation Telegram "1" — enable automatic operation</p>					

12	Output Curtain	Sun:blind/shutter position 0...100%	1byte	C,W	5.001 DPT_Scaling
<p>Under automatic operation, if the communication object receives a message value, the curtain move to the position corresponding to this value. In the "Venetian Blind" operating mode, the position of the louver does not change unless the communication object "Sun:slat adj. 0...100%" receives a message value, and the position of the louver is positioned accordingly according to the value of the message. Telegram value:</p> <p>0% — move to the top — middle position 100%— move to the bottom</p>					
13	Output Curtain	Sun: slat adj. 0...100%	1byte	C,W	5.001 DPT_Scaling
<p>Under automatic operation, this communication object is only visible in the "Venetian Blind" operation mode. If the communication object receives a message value, the louver performs corresponding positioning according to the message value. Telegram value:</p> <p>0%— the louver is fully open — middle position 100% — louvers completely closed</p>					
14/15	Output Curtain	Safety operation1/2	1bit	C,W	1.005 DPT_Alarm
<p>This communication object is used to receive messages sent from the sensor cyclically (0 or 1, depending on the parameter settings), If the value of the cancel security operation is "1", the object can receive the message "1" from the sensor during the monitoring period., indicates that no abnormality has occurred at this time, monitoring continues, and the monitoring period is reset.. If the object does not receive this message during the monitoring period, the actuator will consider the sensor to be faulty, once the monitoring cycle is over and the security operation is performed immediately, move the curtain to a safe location.</p> <p>Safety operation 2 has priority over Safety operation 1.</p>					
16	Output Curtain	Status of operation	1byte	C,R,T	No DPT
<p>This object is used to send the current operating state of the curtain output, and only one operation can be activated at a time. This object sends a message when the operation changes. The definition of the 8-bit instruction is described in detail below:</p> <p>Telegram "0" - normal operation Telegram "1" - no used Telegram "2" - automatic operation (sun protection) Telegram "3" - Safety operation 1 Telegram "4" - Safety operation 2 Other values not used.</p>					

Table 5.3 Communication object table for curtain output

5.3 Communication object of fan control

Number ^	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
1	General	In operation			1 bit	C	-	-	T	-	switch	Low
29	Output Fan	Fan speed			1 bit	C	-	W	-	-	switch	Low
33	Output Fan	Status Fan ON/OFF			1 bit	C	R	-	T	-	switch	Low
38	Output Fan	Automatic function			1 bit	C	-	W	-	-	enable	Low
39	Output Fan	Status Automatic			1 bit	C	R	-	T	-	enable	Low
40	Output Fan	Forced operation			1 bit	C	-	W	-	-	enable	Low
41	Output Fan	Control value 1			1 byte	C	-	W	-	-	percentage (0..100%)	Low
42	Output Fan	Control value 2			1 byte	C	-	W	-	-	percentage (0..100%)	Low
43	Output Fan	Switching control value 1/2			1 bit	C	-	W	-	-	switch	Low
44	Output Fan	Control value fault			1 bit	C	R	-	T	-	alarm	Low

Fig. 5.4_1 Communication objects of fan control_One level

Number ^	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
1	General	In operation			1 bit	C	-	-	T	-	switch	Low
29	Output Fan	Fan speed			1 byte	C	-	W	-	-	percentage (0..100%)	Low
30	Output Fan	Fan speed 1			1 bit	C	-	W	-	-	switch	Low
31	Output Fan	Fan speed 2			1 bit	C	-	W	-	-	switch	Low
32	Output Fan	Fan speed 3			1 bit	C	-	W	-	-	switch	Low
33	Output Fan	Status Fan ON/OFF			1 bit	C	R	-	T	-	switch	Low
34	Output Fan	Status Fan speed			1 byte	C	R	-	T	-	percentage (0..100%)	Low
35	Output Fan	Status Fan speed 1			1 bit	C	R	-	T	-	switch	Low
36	Output Fan	Status Fan speed 2			1 bit	C	R	-	T	-	switch	Low
37	Output Fan	Status Fan speed 3			1 bit	C	R	-	T	-	switch	Low
38	Output Fan	Automatic function			1 bit	C	-	W	-	-	enable	Low
39	Output Fan	Status Automatic			1 bit	C	R	-	T	-	enable	Low
40	Output Fan	Forced operation			1 bit	C	-	W	-	-	enable	Low
41	Output Fan	Control value 1			1 byte	C	-	W	-	-	percentage (0..100%)	Low
42	Output Fan	Control value 2			1 byte	C	-	W	-	-	percentage (0..100%)	Low
43	Output Fan	Switching control value 1/2			1 bit	C	-	W	-	-	switch	Low
44	Output Fan	Control value fault			1 bit	C	R	-	T	-	alarm	Low

Fig. 5.4_2 Communication objects of fan control_Multi-level

No.	Name	Object function	Type	Flags	DPT
29	Output Fan	Fan speed	1bit 1byte	C,W	1.001 DPT_Switch 5.001 DPT_Scaling
<p>For one-level fan speed fans, the object is a 1-bit type for switching fans. Telegram value:</p> <p>Telegram "0" —Fan off</p> <p>Telegram "1" —Fan on</p> <p>For multi-level fan speed fans, the object is 1byte type, it is used to switch the fan speed of each fan. At the same time, only one fan speed is open., at the same time, when opening a new fan speed, you need to consider the starting characteristics of the fan speed.. The object value corresponding to each fan speed is defined by a parameter, and the message value is 1..100%, 0 is the Fan off.</p>					
30	Output Fan	Fan speed 1	1bit	C,W	1.001 DPT_Switch
<p>This object is available under multi-level fan speed fans.</p> <p>It is used to turn on the fan speed 1. If the communication object of the fan speed 1~3 receives several ON messages continuously in a short time, the speed of the fan is turned on based on the last received message.</p> <p>In the communication object with fan speed 1~3, as long as one of the messages receives OFF, the fan will be turned off.</p>					

Telegram value: Telegram "0" —Fan off Telegram "1" — Turn on the fan speed 1					
31	Output Fan	Fan speed 2	1Bit	C,W	1.001 DPT_Switch
Refer 30					
32	Output Fan	Fan speed 3	1Bit	C,W	1.001 DPT_Switch
Refer 30					
33	Output Fan	Status Fan ON/OFF	1bit	C,R,T	1.001 DPT_Switch
This object is used to send the switch status of the fan to the bus. As long as the fan speed status is on, the fan is on. Telegram value: Telegram "0" —Fan off Telegram "1" —Fan on					
34	Output Fan	Status Fan speed	1byte	C,R,T	5.010 DPT_Counter pulses
This object is available under multi-level fan speed fans. Used to send the current running fan speed to the bus. The message value corresponding to each level of fan speed is specified by the parameter "Status value for Fan speed 1/2/3 [1..100]%", and the message "0": fan off.					
35	Output Fan	Status Fan speed 1	1bit	C,R,T	1.001 DPT_Switch
This object is available under multi-level fan speed fans. Used to send the operating state of fan speed 1 to the bus. Telegram value: Telegram "0" —off the fan speed 1 Telegram "1" —turn on fan speed 1					
36	Output Fan	Status Fan speed 2	1bit	C,R,T	1.001 DPT_Switch
Refer 35					
37	Output Fan	Status Fan speed 3	1bit	C,R,T	1.001 DPT_Switch
Refer 35					
38	Output Fan	Automatic function	1bit	C,W	1.003 DPT_Enable
This object is used to activate automatic operations. After the bus is reset or programmed, whether the automatic operation is activated depends on the parameters. Normal operation can exit the automatic operation. Under automatic operation, for multi-level fan speed, if the forced operation is activated, the automatic operation is still active, only the state of the fan that is allowed to operate is determined by the forced operation, following the fan speed allowed under the forced operation. For one-level fan speed, the forced operation can exit the automatic operation.					

Parameter option "0=Auto/1=Cancel":

Telegram "0" — activate automatic operation

Telegram "1" — exit automatic operation

Parameter option "1=Auto/0=Cancel":

Telegram "0" — exit automatic operation

Telegram "1" — activate automatic operation

Normal operations are actions that are triggered by the following objects:

Object 29: Fan X--Fan speed

Object 30-32: Fan X-- Fan speed x (x=1, 2, 3,)

39	Output Fan	Status Automatic	1bit	C,R,T	1.003 DPT_Enable
-----------	-------------------	-------------------------	-------------	--------------	-------------------------

This object is used to send the status of automatic operations to the bus.

Telegram "0" - automatic operation is not activated

Telegram "1" - automatic operation is activated

40	Output Fan	Forced Operation	1bit	C,W	1.003 DPT_Enable
-----------	-------------------	-------------------------	-------------	------------	-------------------------

This object is used to activate a forced action. When the forced operation is activated, the fan speed at which the fan can operate is set by the parameter "Limitation on forced operation".

Parameter option "0=Force/1=Cancel":

Telegram "0" — activate forced operation

Telegram "1" — cancel the mandatory operation

Parameter option "1=Force/0=Cancel":

Telegram "1" — activate forced operation

Telegram "0" — cancel the forced operation

41	Output Fan	Control value/ Control value 1	1byte	C,W	5.001 DPT_Scaling
-----------	-------------------	---	--------------	------------	--------------------------

42	Output Fan	Control value 2	1byte	C,W	5.001 DPT_Scaling
-----------	-------------------	------------------------	--------------	------------	--------------------------

Under automatic operation, when the control value of the fan speed is set to 1, the Control value is visible; when the control value is set to 2, the Control value 1/2 is visible.

These three objects are used to receive control values from the bus, and the fan output will output fan speed based on the threshold range in which the control values are located.

43	Output Fan	Switching control value 1/2	1bit	C,W	1.001 DPT_Switch
-----------	-------------------	--	-------------	------------	-------------------------

When the fan speed control value is set to 2, this object is visible and is used to select the control value. Telegram value:

Telegram "0" — Control value 1

Telegram "1" — Control value 2

44	Output Fan	Control value fault	1bit	C,R,T	1.005 DPT_Alarm
<p>During the monitoring time, when the device does not receive the control value from the external controller, this object will report a control value error. Once the control value is received, the error status is released. Telegram value:</p> <p>Telegram "0" —no error</p> <p>Telegram "1" —an error occurred</p>					

Table 5.4 Communication control table of fan control

5.4 Communication object of valve control

Communication object description of valve output takes 4 pipes system as an example:

Number *	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
1	General	In operation			1 bit	C	-	-	T	-	switch	Low
45	Output Valve	Heat/Cool mode status			1 bit	C	R	-	T	-	cooling/heating	Low
46	Output Valve	Control value fault			1 bit	C	R	-	T	-	alarm	Low
47	Output Valve	Disable, Heat			1 bit	C	-	W	-	-	enable	Low
48	Output Valve	Control value, Heat			1 byte	C	-	W	-	-	percentage (0..100%)	Low
49	Output Valve	Valve status, Heat			1 bit	C	R	-	T	-	switch	Low
50	Output Valve	Trigger valve purge, Heat			1 bit	C	-	W	-	-	enable	Low
51	Output Valve	Valve purge status, Heat			1 bit	C	R	-	T	-	enable	Low
52	Output Valve	Disable, Cool			1 bit	C	-	W	-	-	enable	Low
53	Output Valve	Control value, Cool			1 bit	C	-	W	-	-	switch	Low
54	Output Valve	Valve status, Cool			1 bit	C	R	-	T	-	switch	Low
55	Output Valve	Trigger valve purge, Cool			1 bit	C	-	W	-	-	enable	Low
56	Output Valve	Valve purge status, Cool			1 bit	C	R	-	T	-	enable	Low

Fig. 5.5 Communication objects of valve output

No.	Name	Object function	Type	Flags	DPT
45	Output Valve	Heat/Cool mode status	1bit	C,R,T	1.100 DPT_Heat/Cool
<p>This object is used to feed back the heating/cooling status of the current valve output and is sent to the bus when changing. Telegram value:</p> <p>Telegram "0" —cooling</p> <p>Telegram "1" —heating</p>					
46	Output Valve	Control value fault	1bit	C,R,T	1.005 DPT_Alarm
<p>This object will report a control value error when the device cannot receive a control value from the external controller during the monitoring time. Once the control value is received, the error status is released. Telegram value:</p> <p>Telegram "0" —no error</p> <p>Telegram "1" —an error occurred</p>					
47/52	Output Valve	Disable, Heat/Cool	1bit	C,W	1.003 DPT_Enable
<p>Through this communication object, the heating/refrigeration valve can be disabled or enabled. When disabled, the valve position is immediately adjusted back to 0% (off state), and when enabled again, the valve action is controlled based on the current control value.</p>					
48/53	Output Valve	Control value, Heat/Cool	1byte 1bit	C,W	5.001 DPT_Scaling 1.001 DPT_Switch
<p>This communication object is used to receive valve control values from other controllers.</p> <p>Under the 2-pipe system, the heating valve and the cooling valve share an object (48) to receive the valve control value.</p> <p>This control value can be 1 bit or 1 byte, depending on the valve control mode type.</p>					
49/54	Output Valve	Valve status, Heat/Cool	1byte 1bit	C,R,T	5.001 DPT_Scaling 1.001 DPT_Switch
<p>This object is used to indicate the switch status or position status of the valve. The object type is determined by the parameter settings.</p>					

50/55	Output Valve	Trigger valve purge, Heat/Cool	1bit	C,W	1.003 DPT_Enable
<p>This communication object is used to trigger the cleaning function of the valve. When cleaning, the valve is fully opened. Telegram value:</p> <p>Telegram "0" —end purge</p> <p>Telegram "1" —trigger purge</p>					
51/56	Output Valve	Valve purge status, Heat/Cool	1bit	C,R,T	1.003 DPT_Enable
<p>This communication object is used to indicate the cleaning status of the valve. Once the cleaning function is activated, its status is immediately indicated. Telegram value:</p> <p>Telegram "0" —purge function is not activated</p> <p>Telegram "1" —purge function activated</p>					

Table 5.5 Communication object table of valve output

5.5 Communication object of dry contact input

Number ^	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
1	General	In operation			1 bit	C	-	-	T	-	switch	Low
57	Input 1	Switch			1 bit	C	-	W	T	U	switch	Low
Number ^	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
1	General	In operation			1 bit	C	-	-	T	-	switch	Low
57	Input 1	Press, Switch			1 bit	C	-	W	T	U	switch	Low
58	Input 1	Release, Switch			1 bit	C	-	W	T	U	switch	Low
Number ^	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
1	General	In operation			1 bit	C	-	-	T	-	switch	Low
57	Input 1	Short, Switch			1 bit	C	-	W	T	U	switch	Low
58	Input 1	Long, Switch			1 bit	C	-	W	T	U	switch	Low
61	Input 1	Disable			1 bit	C	-	W	-	-	enable	Low

"Switch" Function

Number ^	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
1	General	In operation			1 bit	C	-	-	T	-	switch	Low
57	Input 1	Short, Switch			1 bit	C	-	W	T	U	switch	Low
58	Input 1	Long, Dimming			4 bit	C	-	W	T	-	dimming control	Low
61	Input 1	Disable			1 bit	C	-	W	-	-	enable	Low

"Dimming" Function

Number ^	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
1	General	In operation			1 bit	C	-	-	T	-	switch	Low
57	Input 1	Press, 1bit value			1 bit	C	-	-	T	-	switch	Low
58	Input 1	Release, 2bit value			2 bit	C	-	-	T	-	switch control	Low
61	Input 1	Disable			1 bit	C	-	W	-	-	enable	Low
Number ^	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
1	General	In operation			1 bit	C	-	-	T	-	switch	Low
57	Input 1	Short, 1bit value			1 bit	C	-	-	T	-	switch	Low
58	Input 1	Long, 2bit value			2 bit	C	-	-	T	-	switch control	Low
61	Input 1	Disable			1 bit	C	-	W	-	-	enable	Low

"Value output" Function

Number ^	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
1	General	In operation			1 bit	C	-	-	T	-	switch	Low
57	Input 1	Scene			1 byte	C	-	-	T	-	scene control	Low
61	Input 1	Disable			1 bit	C	-	W	-	-	enable	Low
Number ^	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
1	General	In operation			1 bit	C	-	-	T	-	switch	Low
57	Input 1	Press, Scene			1 byte	C	-	-	T	-	scene control	Low
58	Input 1	Release, Scene			1 byte	C	-	-	T	-	scene control	Low
61	Input 1	Disable			1 bit	C	-	W	-	-	enable	Low
Number ^	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
1	General	In operation			1 bit	C	-	-	T	-	switch	Low
57	Input 1	Short, Scene			1 byte	C	-	-	T	-	scene control	Low
58	Input 1	Long, Scene			1 byte	C	-	-	T	-	scene control	Low
61	Input 1	Disable			1 bit	C	-	W	-	-	enable	Low

"Scene control" Function

Number	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	I	Data Type	Priority
1	General	In operation			1 bit	C	-	-	T	-	-	switch	Low
57	Input 1	Up/Down, Blind			1 bit	C	-	W	T	-	-	up/down	Low
58	Input 1	Stop/Adjust, Blind			1 bit	C	-	W	T	-	-	step	Low
61	Input 1	Disable			1 bit	C	-	W	-	-	-	enable	Low

"Blind" Function

Number ^	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
1	General	In operation			1 bit	C	-	-	T	-	switch	Low
57	Input 1	Register value			1 byte	C	-	W	T	-	counter pulses (0..255)	Low
61	Input 1	Disable			1 bit	C	-	W	-	-	enable	Low

"Shift register" Function

Number ^	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
1	General	In operation			1 bit	C	-	-	T	-	switch	Low
57	Input 1	Object1-On/Off			1 bit	C	-	W	T	-	switch	Low
58	Input 1	Object2-Up/Down			1 bit	C	-	W	T	-	up/down	Low
59	Input 1	Object3-SceneControl			1 byte	C	-	-	T	-	scene control	Low
60	Input 1	Object4-Percentage			1 byte	C	-	-	T	-	percentage (0..100%)	Low
61	Input 1	Disable			1 bit	C	-	W	-	-	enable	Low

"Multiple operation" Function

Number ^	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
1	General	In operation			1 bit	C	-	-	T	-	switch	Low
57	Input 1	Press, Delay mode			1 bit	C	-	-	T	-	switch	Low
61	Input 1	Disable			1 bit	C	-	W	-	-	enable	Low

Number ^	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
1	General	In operation			1 bit	C	-	-	T	-	switch	Low
57	Input 1	Short, Delay mode			1 bit	C	-	-	T	-	switch	Low
58	Input 1	Long, Delay mode			1 bit	C	-	-	T	-	switch	Low
61	Input 1	Disable			1 bit	C	-	W	-	-	enable	Low

"Delay mode" Function

Fig. 5.6 Communication objects of dry contact input

No.	Name	Object function	Type	Flags	DPT
57	Switch	Input x	1bit	C,W, T,U	1.001 DPT_Switch
57	Press, Switch	Input x	1bit	C,W, T,U	1.001 DPT_Switch
57	Short, Switch	Input x	1bit	C,W, T,U	1.001 DPT_Switch
58	Release, Switch	Input x	1bit	C,W, T,U	1.001 DPT_Switch
58	Long, Switch	Input x	1bit	C,W, T,U	1.001 DPT_Switch
<p>The communication object is used to trigger a switching operation.</p> <p>Telegram "0" —off</p> <p>Telegram "1" —on</p>					
59	Long, Dimming	Input x	4bit	C,W,T	3.007 DPT_Dimming control
<p>This communication objects triggers a dimming operation.</p> <p>The telegram 1~7 is to dim down, larger values of this range, smaller amplitude of dimming down , 0 is to stop dimming; while the telegram 9~15 dim up,larger values of this range, smaller amplitude of dimming up. 8 is to stop the dimming.</p>					

57	Press, 1bit/2bit/4bit/1byte/2byte value	Input x	1bit	C,T	1.001 DPT_Switch
57	Short, 1bit/2bit/4bit/1byte/2byte value	Input x	2bit	C,T	2.001 DPT_Switch control
58	Release, 1bit/2bit/4bit/1byte/2byte value	Input x	4bit	C,T	3.007 DPT_Dimming control
58	Long, 1bit/2bit/4bit/1byte/2byte value	Input x	1byte	C,T	5.010 DPT_counter pulses
			2byte	C,T	7.001 DPT_pulses

The communication object is used to send a fixed value, to send a range of values determined by the data type, the data type is determined by the parameter setting.

57	Scene	Input x	1byte	C,T	18.001 DPT_SceneControl
57	Press, Scene	Input x	1byte	C,T	18.001 DPT_SceneControl
57	Short, Scene	Input x	1byte	C,T	18.001 DPT_SceneControl
58	Release, Scene	Input x	1byte	C,T	18.001 DPT_SceneControl
58	Long, Scene	Input x	1byte	C,T	18.001 DPT_SceneControl

Sending a communication object 8bit Instruction calls or store scenes. Detailed 8bit the meaning of the directive.

Set up a 8bit Orders for the (Binary code) : FXNNNNNN

F: '0' recall scene; '1' for storage scene;

X : 0 ;

NNNNNN: Scene number(0... 63).

Parameter setting Options are 1~64 Actually communication object "Scene" Corresponds to the telegram received is 0~63 . Such as parameter settings is the scene 1, Communication object "Scene" sends the scene for 0. As follows:

Object message value	Description
0	Recall scene 1
1	Recall scene 2
2	Recall scene 3
...	...
63	Recall scene 64
128	Store scene 1
129	Store scene 2
130	Store scene 3
...	...
191	Store scene 64

57	Up/Down, Blind	Input x	1bit	C,W,T	1.008 DPT_up/down
This object is used to move up/down the curtain. Telegram: 0 -- Move up the curtains / blinds 1 -- Move down the curtains / blinds					
58	Stop/Adjust,Blind	Input x	1bit	C,W,T	1.007 DPT_Step
This object is used to stop the curtain moving or adjusting the shutter angle.					
57	Register value	Input x	1bit	C,T	5.010 DPT_counter pulses
This address is used to send shift register value.					
57/ 58/ 59/ 60	Object x-On/Off Object x-Up/Down Object x-SceneControl Object x-Percentage Object x-Unsigned value	Input x	1bit 1bit 1byte 1byte 1byte	C,W,T C,W,T C,T C,T C,T	1.001DPT_Switch 1.008DPT_up/down 18.001DPT_SceneControl 5.001DPT_Scaling 5.010DPT_counter pulses
These objects for multiple object up and activate 4 (x=1,2,3,4), Through these objects, once, can be sent simultaneously 4 different type of object values to the bus.					
57	Press, Delay mode	Input x	1bit	C,T	1.001 DPT_Switch
57	Short, Delay mode	Input x	4bit	C,T	3.007 DPT_Dimming control
58	Long, Delay mode	Input x	1byte	C,T	5.010 DPT_counter pulses
The value of this object is used to send time-delay mode of communication, there are three types of values to choose from.					
61	Disable	Input x	1bit	C,W	1.003 DPT_enable
This object is used to disable/ enable the input function.					

Table 5.6 Communication object table of dry contact input

5.6 Communication object of LED output

序号	名称	对象功能	描述	群组地址	长度	C	R	W	T	U	数据类型	优先级
101	LED 5-...	Status			1 bit	C	-	W	T	U	switch	低

Fig. 5.7 Communication objects of LED output

No.	Name	Object function	Type	Flags	DPT
101	Status	LED X- {{...}}	1bit 1byte	C,W,T,U	1.1 DPT_Switch 1.2 5.010 DPT_counter pulses
<p>This object is visible when selecting “Control by external object” in Led function.,only LED5-8,starting from the object of LED5.</p> <p>This communication object is used to receive telegrams of 1bit / 1byte type, LED indicates the state according to the received telegram value and parameter settings.</p>					

Table 5.7 Communication object table of LED output