

User Manual

Indoor Monitor



**H Series IP System Indoor Monitor Manual_V1.0
H-IS19**

Attentions

1、Please keep devices away from strong magnetic field , high temperature , wet environment ;



2、Please do not fall the devices to the ground or make them get hard impact ;



3、Please do not use wet cloth or volatile reagent to wipe the devices ;



4、Please do not disassemble the devices.

Content

Chapter 1 Functions Review.....	1
Chapter 2 Product Introduction.....	2
2.1 Product Appearance.....	2
2.2 Product Dimension.....	2
2.3 Interface Introduction.....	3
2.4 Parameter.....	3
Chapter 3 Basic Function.....	4
3.1 Standby Interface.....	4
3.2 Video Intercom.....	6
Chapter 4 Smart Community.....	11
Chapter 5 Settings.....	13
5.1 System Setting.....	13
Language setting.....	13
5.2 Defense Zone Setting.....	16
5.3 Mini Outdoor Station Setting.....	18
5.4 Engineering Settings.....	19
Chapter 6 Installation Instruction.....	22
6.1 Installation Height.....	22
6.2 Installation Instruction.....	23
Chapter 7 Defense Area Wiring.....	25
7.1 Defense Area Wiring Diagram.....	25
7.2 Defense Zone Instruction.....	26
7.3 Doorbell Function.....	26


Chapter 1 Functions Review

This product, based on TCP/IP transmission protocol, is the main device for the IP video door phone system, it supports video phone, defense area setting and picture pushing.


- 10.1" IPS screen
- New design of metal frame, surface glass cover plate
- Support standard 48V PoE switch or DC24V power supply
- Support connection to doorbell and mini outdoor station
- Support extendable elevator-reserve service
- Support call diverting
- Support real time surveillance to outdoor/mini outdoor station, IP camera
- Support message receiving and sending from management center
- Support multi-indoor-monitor in apartment, synchronizing arm/disarm
- Support video phone between residents and visitors/guard unit
- Support intercom function between residents in the same community
- Support standard 8 defense areas alarm function

Chapter 2 Product Introduction


2.1 Product Appearance

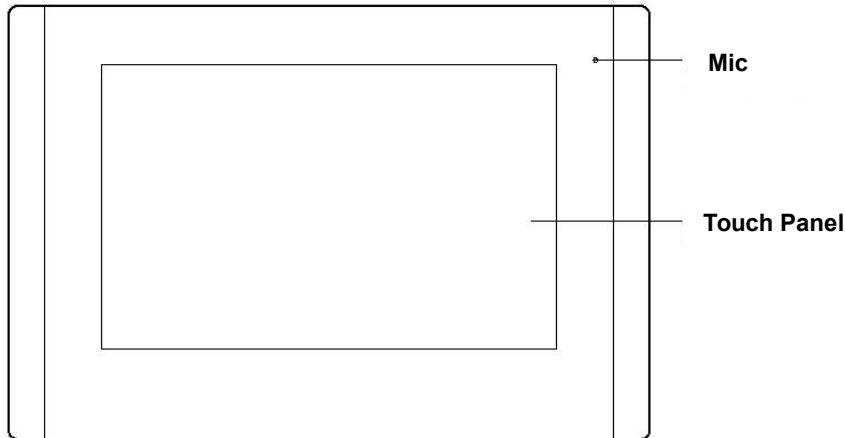

2.2 Product Dimension

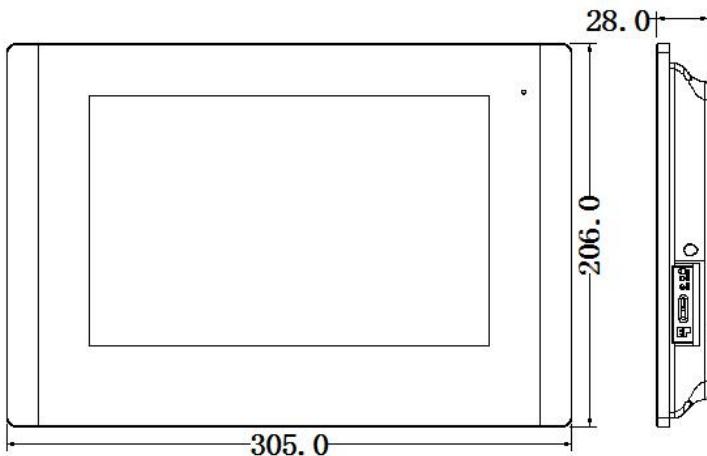

2.3 Interface Introduction

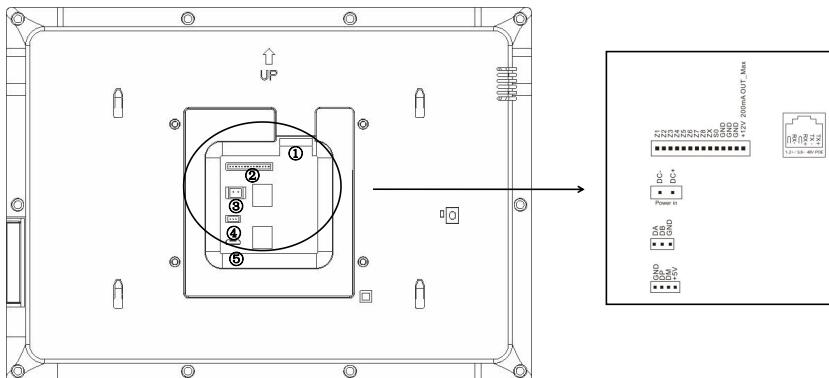

Number①

Internet interface RJ45(Support standard 48V PoE Switch)

Number②

+12V GND: defense area detector power terminal (current $\leq 200\text{mA}$);

Alarm: alarm output interface (reserved);

ZX: extension interface for defense zone;

Z8 to Z1: standard defense area interface, support normally open/close security module;

Z8: default setting as doorbell function (can be configurated for defense zone);

Number③

Power input terminals: DC 24~30 V;

Number④

DA/DB: RS485 terminal(can be connected with smart home scene controlling)

Number⑤

USD terminal

2.4 Parameter

Working Voltage: DC 24V

Device Quiescent Current: $\leq 200\text{ mA}$

Device Working Current: $\leq 300\text{ mA}$

Defense Area Output Current: $\leq 200\text{ mA}$ ((Individual power supply only, defense area output voltage 12V)

Screen Size: 10.1inch

Resolution: 1280 × 800

Appearance Dimension (L × W × D): 305 × 206 × 28mm

Environment Temp.: -10°C ~ +55°C

Call Waiting: 30s

Call Duration: 120s

Surveillance Duration: 30s

Chapter 3 Basic Function

3.1 Standby Interface



Property Message

Press  to check the property message.

Call Log

Press  to check, read, delete call history of all types.

Alarm Record, Arm/Disarm Mode

Press  to check out alarm history and set in arm/disarm Mode.

Mute

Press  for disturbance free setting.

SOS Message

Long press  for 2 seconds so that an SOS message will be sent to guard unit.

Call Forwarding

Press  to authorize the transfer of calls to the guard unit or other indoor monitors.

Network Status

 is the icon of network status, highlighted icon indicates that the network is good, and gray icon indicates that the network is not connected.

 is the icon under mini outdoor station.

Elevator Reserve

Press  to reserve an elevator to the floor one lives.

Video Intercom

Press  to enter the video intercom interface for monitoring, calling, viewing call logs and alarm logs, and setting the mute mode, etc.

Smart Home

Press  enter the smart home interface to set up lights, curtains, air conditioning and background music, etc.

Smart Community

Press  the smart community interface to monitor the IP cameras, view the property management message, licenses, Store, and Repairs, etc.

Setting


Press  to enter Setting page.

Scene Mode



Support KNX module for scene control, press the icon to set the corresponding scene.

3.2 Video Intercom

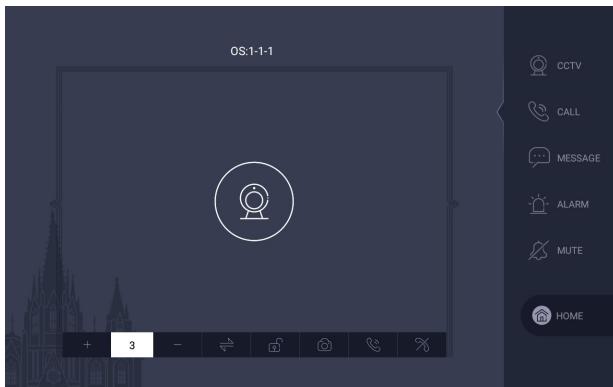

Monitoring Page

It can monitor the outdoor station, mini outdoor station and gate station.

Monitor&Unlock

Basic workflow: choose the device to be monitored⇒monitor⇒unlock⇒call ended

- 1) Press  on the main interface to enter the monitor interface to monitor the gate station/outdoor station/mini outdoor station.
- 2) During the surveillance, residents can unlock the door for visitors by pressing .
- 3) Press  to end the surveillance.

Image Capture

During the surveillance, press  to capture image manually.

NOTE: Images captured will be saved in the Call Log.

Visitor call

Basic workflow: monitor⇒talk⇒call ended

During the surveillance process(mini outdoor station/outdoor station/gate station), resident can press  to talk with the visitor.

Initiative Calling

Press  on the main interface to enter the calling interface.




Calling Page with Dial Pads

Call indoor Monitor


Basic workflow: call→ring bell→talk→call ended

1) Call

Press  to pop up the list of indoor monitors, call other indoor monitors of this household, or broadcast to other indoor monitors.

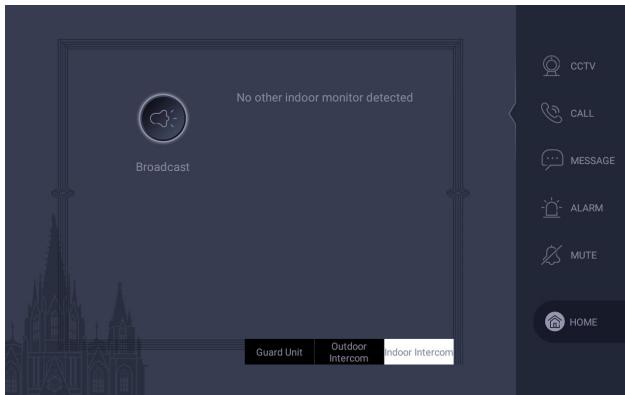

Call Guard Unit

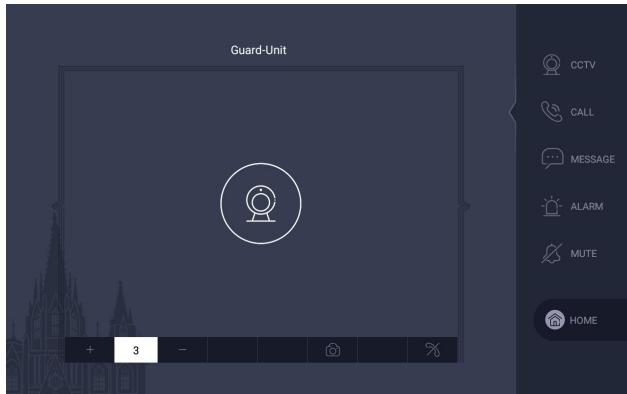


Ringing Page

Basic workflow: call==>talk==>call ended

- 1) Press **Guard Unit** to start a call to guard unit.
- 2) Guard unit bell rings.
- 3) Talk with guard unit.
- 4) Press  to end call.

Pick up the call

Basic workflow: ring bell==>talk==>unlock==>call ended

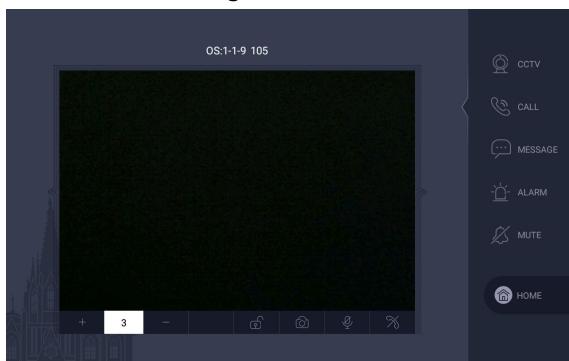

Ringing Page

Incoming Call:

- 1) Visitor can call indoor station through outdoor station, the bell of indoor station rings.

- 2) Resident can press  to answer the call.
- 3) During the call, resident can press  to unlock the gate/door, 5s after unlocking the call will be ended automatically.
- 4) Resident press  to end call.

Image Capture:

- 1) During the call, resident can Press  to capture images.
- 2) Images captured will be saved in Call Log in stand-by page.


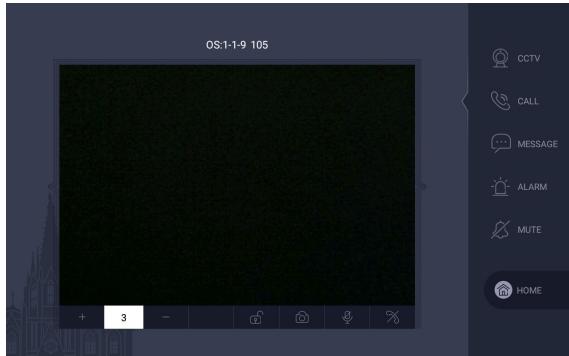


Image Captured

Message

Press  to enter information page to check messages received from management center.

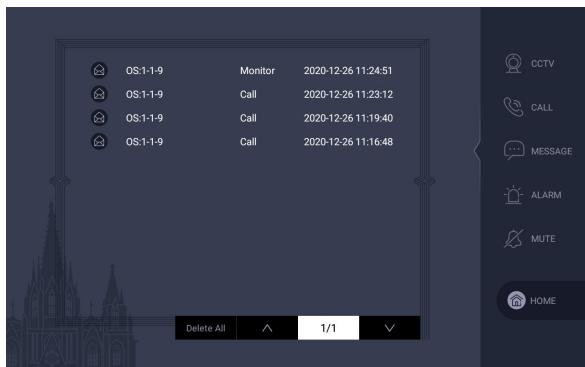

Message Page


Alarm Record, Arm/Disarm Mode

Press  to enter the alarm record interface to view the alarm information record.



Alarm Information Record

Press  to arm/disarm home.

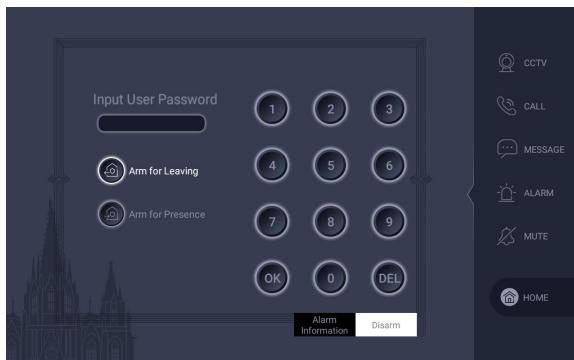

Password Input Page

Under arming, the user can:


Disarm: input the password to disarm.

Under disarming, the user can:

Arm: input the password and enter arming delay, leave the area before the delay time's up.


Mute

Press  to turn on/off the disturbance free function.

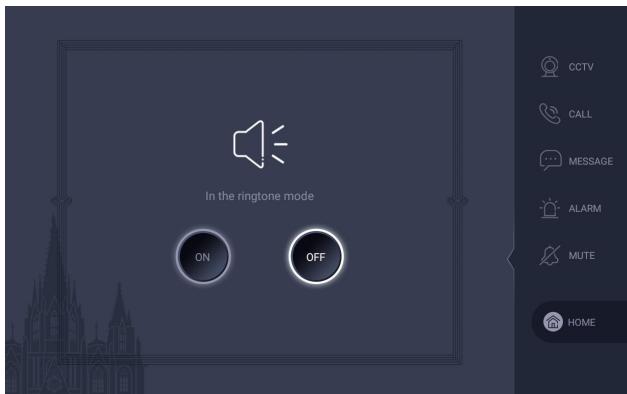

Mute Setting Page


Chapter 4 Smart Community Surveillance IP camera

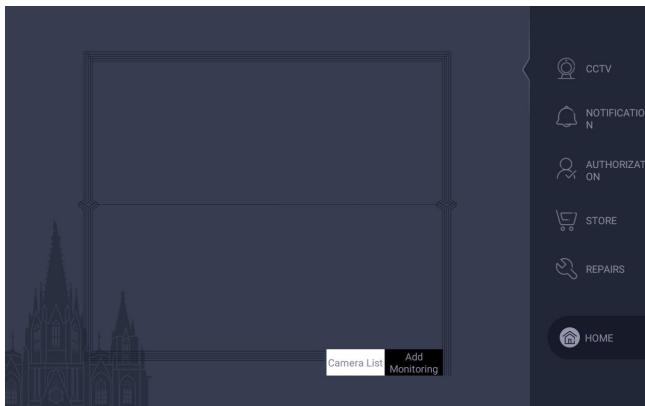

Information from Property Management



Authorization

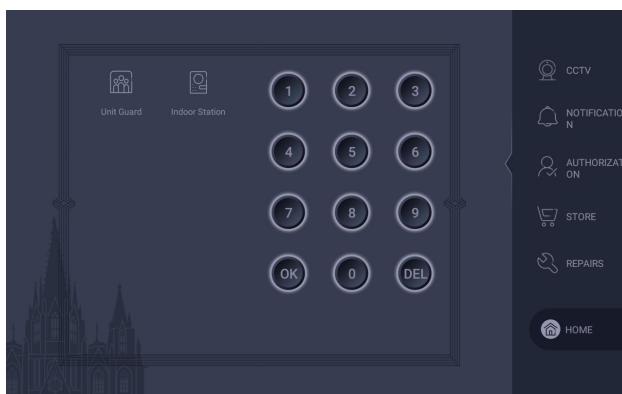

Store



Repairs



Chapter 5 Settings

5.1 System Setting


Language setting



Language Setting page

Press **Language** in setting page to change the current language.

Ringtone Setting

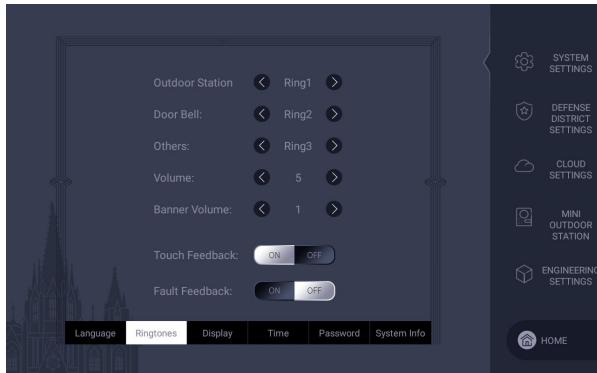


Ringtone Setting page

Press **Ringtones** in setting page to enter ringtone setting page:

- 1) Adjust ringtone and volume of incoming call from different device;
- 2) Touch tone and fault tone setting.

Display Setting

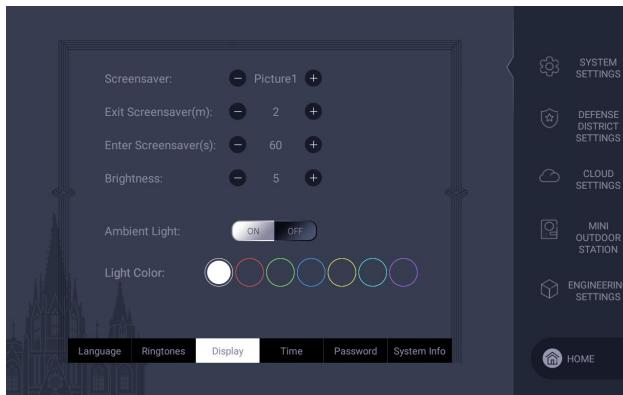

Display Setting page

Press **Display** in setting page to enter display setting page:

- 1) Set screen saver image;
- 2) Set screen saver starting and ending time;

- 3) Adjust screen brightness;
- 4) Turn ON/OFF atmosphere lamp;
- 5) Change color of atmosphere lamp;

Time Setting



Time Setting page

Press **Time** in setting page to set the date and time of the indoor monitor.

Time synchronization: this function allows the indoor monitor keeping in the same time with PC.

Password Setting



Password Setting page

Press **Password** in setting page to enter password setting:

User Password

Input current user password \Rightarrow Input new user password \Rightarrow confirm new password (default user password: 66666)

Hijack Password

Input (current hijack password \Rightarrow new hijack password \Rightarrow confirm new password)

System Information




System Information page

Press **System Info** in setting page to check information such as software version and IP address etc.

- 1) Press **REBOOT** and confirm to reboot system;
- 2) Press **CLEAN SCREEN** and confirm to start screen cleaning, a pop up window will show with 60s countdown, during this countdown the touch function will be disable.

5.2 Defense Zone Setting

Alarm Setting

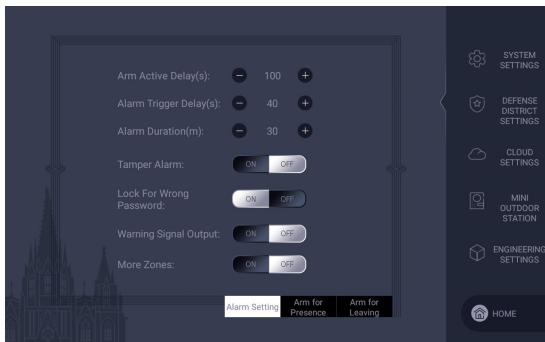


Alarm Setting page

Press  in setting page, user can enter alarm setting with the correct user password(default user password: 666666).

- 1) Arm Active Delay(s): After arming, the device will first enter arm active delay, if delay alarm is triggered during this time, the system will not sound the alarm.
- 2) Alarm Trigger Delay(s): Under arming, when the delay alarm is triggered, if user can disarm within this countdown, the system will not sound the alarm.
- 3) Alarm Duration(m): The alarm duration time when the defense zone is triggered.
- 4) Tamper Alarm: Turn on this option, and the device will send alarm signal to Guard Unit when it is being dismantle illegally. Tamper alarm will turn on as default.
- 5) Lock For Wrong Password: With this function turned on, when user is disarming, if wrong password is inputted 3 times within 1 minute, the device will lock for 60s and user can not operate during this time.
- 6) Warning Signal Output: With this function turned on, the alarm signal interface will output a high level signal when the alarm zone is triggered.
- 7) More Zones: Turn on this option when alarm zone extension is needed, and alarm extension module is required for this feature(Instruction of alarm zone extension can refer to P3).


Arm for Presence

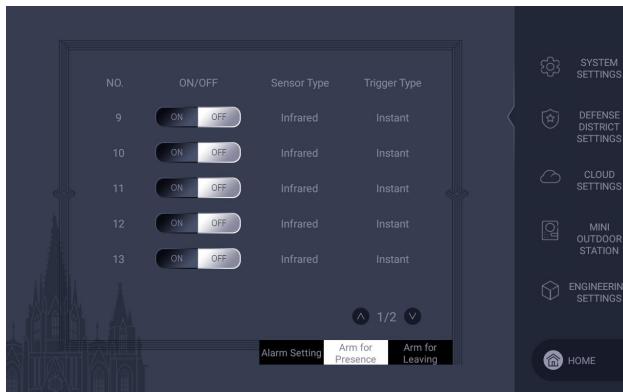

Arm for presence 1

Press  in defense zone setting page to configure detailed setting of each zone:


- 1) Turn ON/OFF sensor;
- 2) Select sensor type;
- 3) Select trigger type, detailed defense zone instruction refer to Chapter7.2.

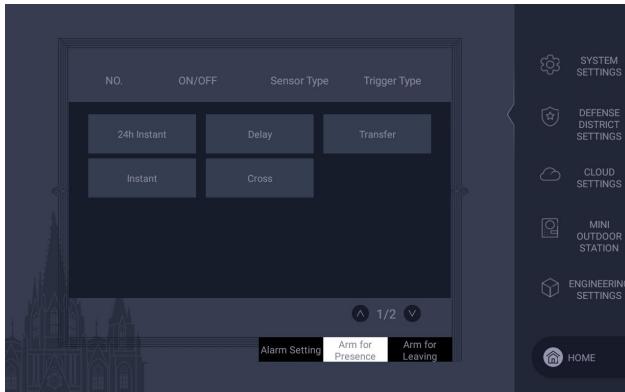

Arm for presence 2

5.3 Mini Outdoor Station Setting

Mini Outdoor Station setting

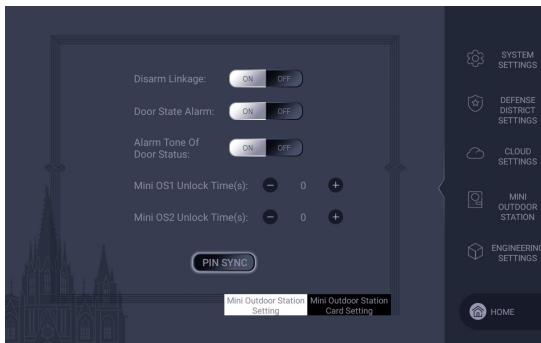


Mini Outdoor Station Setting page

Press  and input the correct user password to enter mini outdoor station setting(default user password: 666666)

- 1) Disarm Linkage: With this function turned on, while under arm for leaving, user can disarm the device by swiping registered card to Mini Outdoor Station.
- 2) Door Status Alarm: With this function turned on, when the door is opened over 120s, an alarm alert will be reported to Guard Unit and PC Manager Center.
- 3) Alarm Tone of Door Status: With this function turned on, Mini Outdoor Station will sound the alarm when the door is opened timeout.
- 4) Mini Outdoor Station Unlock Time(s): Set the unlock time of Mini Outdoor Station.

5) PIN SYNC: Press PIN SYNC so that the rest Indoor Monitors in the same apartment can operate the Mini Outdoor Station.

Mini Outdoor Station Card Setting

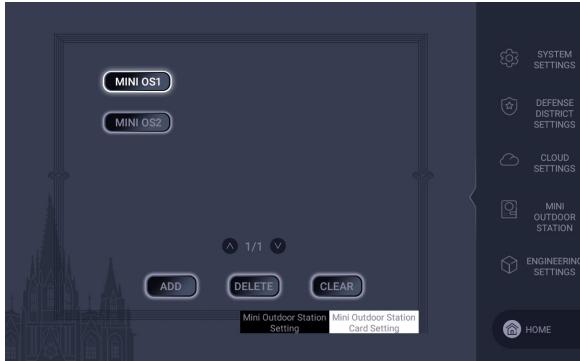

Mini Outdoor Station Card Setting page

Card Management: User can register or delete IC cards.

5.4 Engineering Settings

Room NO. Setting



Room No. Setting page

Press  in setting page, and input the correct engineering password to enter engineering password, user can set the room number of the device.

Engineering Password: For setting the Indoor Monitor Room No., Mini Outdoor Station and Restoring.

Default Password: 801801

Add Mini Outdoor Station





Add Mini Outdoor Station page

Within 3 minutes after powering the Mini Outdoor Station, long press call button for 2s until you hear 3 times short beeps(short press it will enter standby mode), then short press call button again, Mini Outdoor Station will restore factory setting and enter configuration mode with a long beep. Then enter Setting > Engineering Settings > Add NO.1/2 Mini Outdoor Station.

All the Mini Outdoor Station in configuration mode will be listed in setting page, user can confirm which is the target Mini Outdoor Station by checking their video surveillance.

Factory Reset

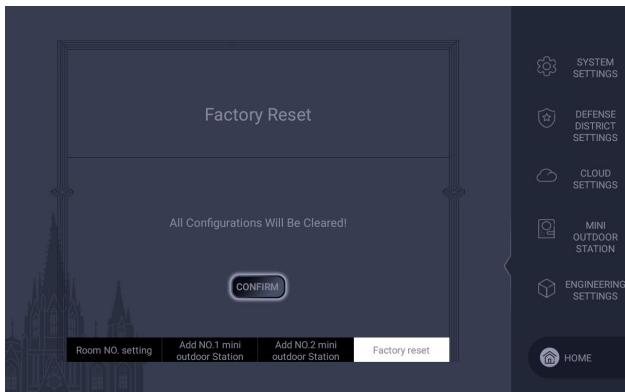

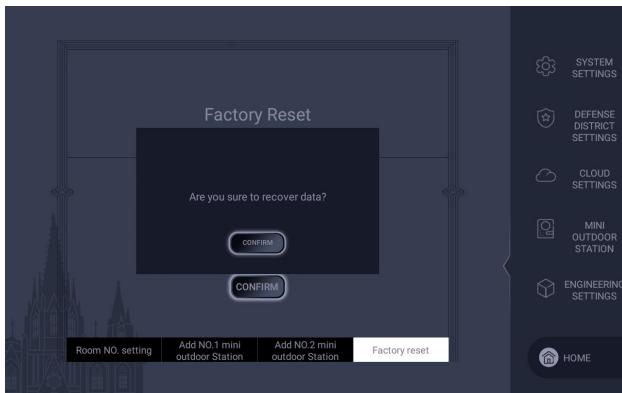


Factor Reset page

Press **Factory reset** and confirm, then the device will restore factory settings.

Note: Restore factory settings will clear all the records.

Chapter 6 Installation Instruction

6.1 Installation Height

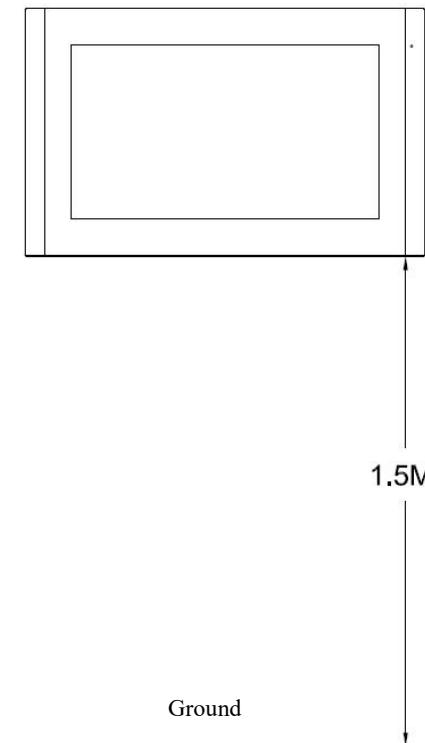


Suggestion Installation Height: 1.5m

6.2 Installation Instruction


Wall-mounted installation

①

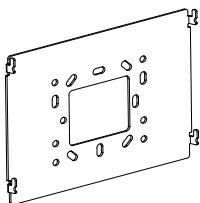


Step 1: Aim the bracket screws to the holes on the 86*86 installation box and fasten the bracket.

②

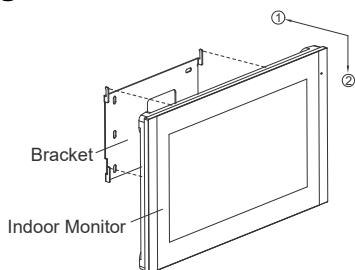


Step 2: Wire the indoor station, then aim the bracket at the bracket holes on the back of the indoor station (as of ②), when all four holes are aimed, lightly push down the monitor vertically (as of ③), thereupon you will hear a slight crack sound, the device is then properly installed (as of ④).

③

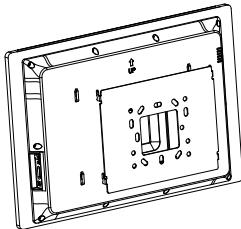





Aiming the bracket to the holes.

④

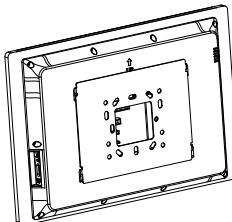

When it's properly installed.

Wall-mounted Installation

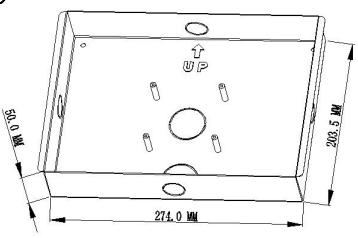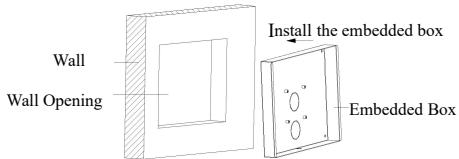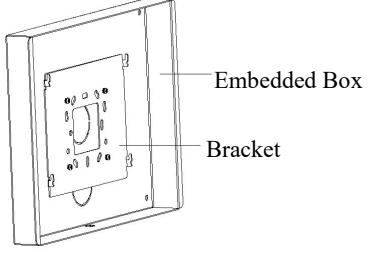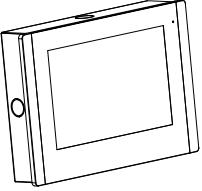
<p>①</p> 	<p>Embedded Box dimension 274*203.50*50mm</p>
<p>②</p> 	<p>Step 1: Insert the embedded box into the wall. Aim at the holes of embedded box, Install 4pcs anchorings to the wall , and then use 4pcs screws to fix the embedded box.</p>
<p>③</p> 	<p>Step 2: Take out the bracket, and aim it at the holes of the embedded box holes to put in, use 4pcs M2 screws to fasten the bracket in the embedded box.</p>
	<p>Step 3: Take out the indoor monitor, and aim it at the bracket holes to put in, lightly push down the indoor monitor vertically, thereupon you will hear a slight crack sound, the device is then successfully installed.</p>

Chapter 7 Defense Area Wiring

7.1 Defense Area Wiring Diagram

7.1.1 Single Security Detector Wiring

Indoor Station Z1 to Z7 wiring:



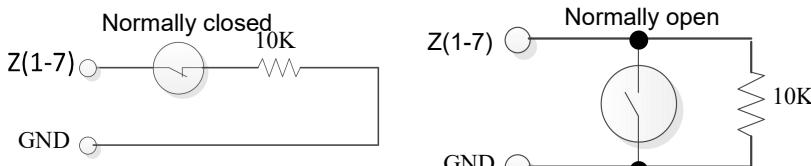


Indoor Station Z8 wiring:




7.1.2 Multi-Security Detectors Wiring

Indoor Monitor Z1 to Z7 wiring:

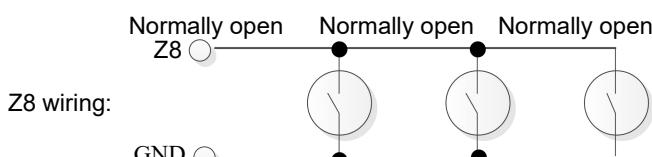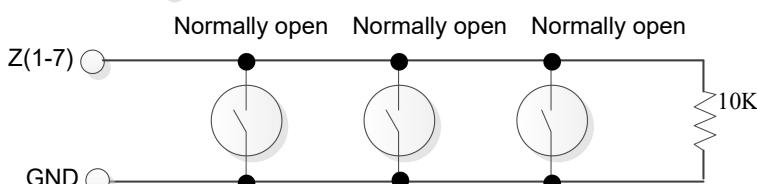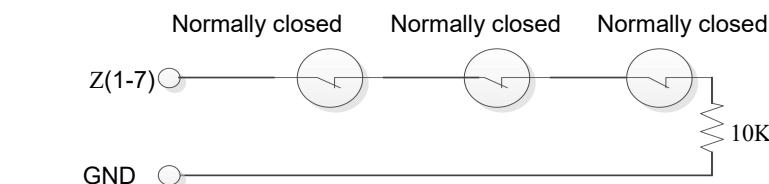

NOTE: Unused defense area interfaces could be closed in the Alarm System Setting, or it can be blocked by 10K resistance.

7.2 Defense Zone Instruction

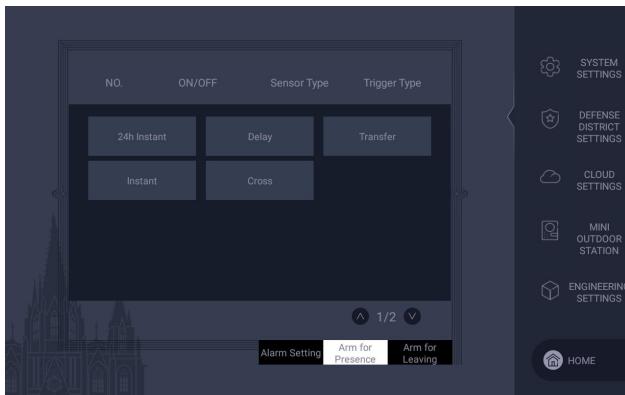

Defense Trigger Type Page

Instant alarm: After this defense area is armed, once it triggers, the alarm warning will be sent out immediately.

Delay alarm: After this defense area is armed, once it triggers, then enter the counting down of alarm delay. Users can disarm the defense during the counting down. Otherwise it will send out alarm warning when time is up.

Transferring delay: This defense area is linked to the operation of delay defense area. After arming, once this defense area triggers before the delay defense area, it will alarm immediately. If the delay defense area triggers firstly, then enter the counting down of alarm. Users can disarm during the counting down. Otherwise it will alarm immediately when time is up.

24 hours Instant: This defense area will detect as soon as the system is power on, and it will not be influenced by arming/disarming. Once this defense area is triggered, the alarm warning will be sent out immediately.

Cross warning: Two defense areas need to be matched up to trigger this function. After arming, once one of the cross defense areas is triggered, within 5 seconds another cross defense area is triggered, alarm warning will be sent out immediately. Otherwise alarm warning reserved.

7.3 Doorbell Function

Doorbell function can be set by Alarm Setting \Rightarrow Defense Area Setting \Rightarrow Detector Type. After the setting, when the defense area detects doorbell input, the doorbell rings immediately.