


# User Manual

## **K-BUS Universal Interfaces, 4 fold\_V1.3**

**KI/U 0401.1**

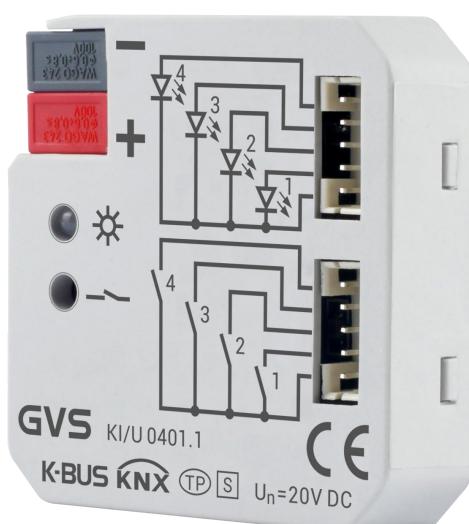

**KNX/EIB Home and Building Control System**

# Attentions

- 1. Please keep devices away from strong magnetic field, high temperature, wet environment;**



- 2. Do not fall the device to the ground or make them get hard impact;**



- 3. Do not use wet cloth or volatile reagent to wipe the device;**



- 4. Do not disassemble the devices.**

# Contents

<b>Chapter 1 General -----</b>	<b>1</b>
1.1. Product and functional overview -----	1
<b>Chapter 2 Technical data -----</b>	<b>2</b>
<b>Chapter 3 Dimension and Connection diagram -----</b>	<b>3</b>
3.1. Dimension diagram -----	3
3.2. Connection diagram -----	3
<b>Chapter 4 Project design and programming -----</b>	<b>4</b>
4.1. Overview of the functions -----	4
<b>Chapter 5 Parameter setting description in the ETS -----</b>	<b>5</b>
5.1. Description of setting parameter in part of device channel -----	5
5.1.1. Parameter window "General Setting" -----	5
5.1.2. Parameter window "Switch" -----	7
5.1.3. Parameter window "Switch/dimming" -----	13
5.1.4. Parameter window "Value/force output" -----	16
5.1.5. Parameter window "Scene control" -----	19
5.1.6. Parameter window "Switching sequence" -----	24
5.1.7. Parameter window "Counter" -----	26
5.1.8. Parameter window "Multiple operation" -----	31
5.1.9. Parameter window "Shutter control" -----	34
5.2. Description of setting parameter in part of LED channel -----	38
5.2.1. Parameter window "Flashing" -----	38
5.2.2. Parameter window "Switch" -----	39
5.2.3. Parameter window "Control by Input" -----	41
5.2.4. Parameter window "Indicate Object In" -----	42
5.2.5. Parameter window "Indicate Object Out" -----	43
5.2.6. Parameter window "Indicate object In and Out" -----	44
<b>Chapter 6 Communication object description -----</b>	<b>45</b>
6.1. Communication object "Switch" -----	45
6.2. Communication object "Switch/dimming" -----	46
6.3. Communication object "Value/Force output" -----	47
6.4. Communication object "Scene control" -----	48
6.5. Communication object "Switch sequence" -----	50
6.6. Communication object "Counter" -----	51
6.7. Communication object "Multiple operation" -----	52
6.8. Communication object "Shutter control" -----	53
6.9. Communication object "LED X-flashing" -----	54
6.10. Communication object "LED X-Switch" -----	55

## Chapter 1 General

The Universal Interfaces can install to be system with KNX bus and other device, which are mainly use in building control system. The functions are both simple to operate and intuitive, users can program it according to the requirement to implement the function systematically.

This manual provides technical information about the Universal Interfaces in detail for users as well as assembly and programming, and explains how to use the Universal Interfaces by the application examples.

### 1.1. Product and functional overview

The Universal Interfaces achieve the functional applications via conventional push buttons/switches, communicate by technical binary, which are used to control the devices such as the Dimmer Actuator/the Switch Actuator, to control domestic appliance indirectly. At the same time, they also enable the control of LEDs. The extremely compact design enables the device to be inserted in a conventional 80mm or 86mm wiring box.

The Universal Interfaces connect to the bus though the KNX connection terminals and have no use for additional supply voltage. It is available to assign the physical address and set the parameters by Engineering design tools ETS with VD4 (higher than edition ETS3).

The Universal Interfaces have many functions that can be used in a wide variety of application areas. The following list provides an overview:

- **Switching and dimming function.**
- **Control of blinds and shutters.**
- **Sending of values e.g. temperature values, water line.**
- **Recalling and storing of scenes.**
- **Trigger an LED for reporting an operation.**
- **Operation of various loads by multiple push button actions.**
- **Operation of several loads in a fixed switching sequence.**
- **Standard counting and differential counting.**


Each channel of a device can adopt any of the functions described above.

## Chapter 2 Technical data


<b>Power supply</b>	Operation voltage	21~30V DC, via the KNX bus
<b>Input/output</b>	4 fold inputs	Can be individually configured per input
	4 fold LED	Can be individually configured per LED
	Input scanning voltage	20 V DC
	Input current	0.5mA
	LED output voltage	5V DC
	LED output current	max.2.5mA, limited via series resistor of 2KΩ
<b>Operating and display</b>	Programming LED and button	For assignment of the physical address
	Green LED flashing	Indicate the application layer running normally
<b>Connections</b>	Input/output	2*5-pin cables, approx. 30 cm long, can be extended to max. 10 m
	KNX	via bus connecting terminal
<b>Temperature</b>	Operation	-5°C...45°C
	Storage	-25°C...55°C
	Transport	-25°C...70°C
<b>CE mark</b>	In accordance with the EMC guideline and the low voltage guideline	
<b>Approvals</b>	KNX certificate	
<b>Installation</b>	86 type wall-mounted box or European 80 type wall-mounted box	
<b>Size</b>	46×46×11.7mm	
<b>Weight</b>	0.05 KG	

## Chapter 3 Dimension and Connection diagram

### 3.1. Dimension diagram

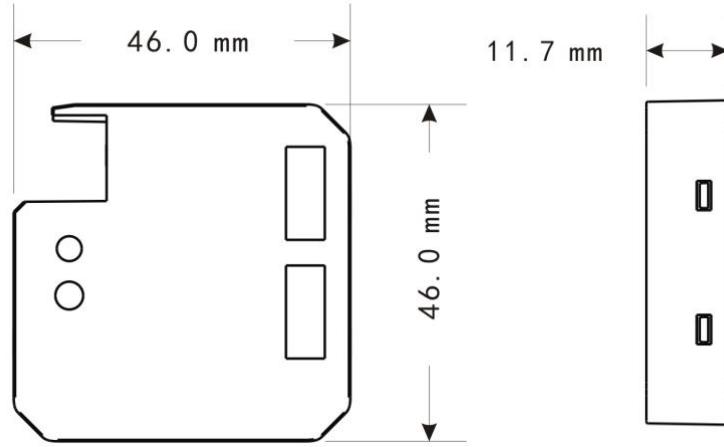

### 3.2. Connection diagram

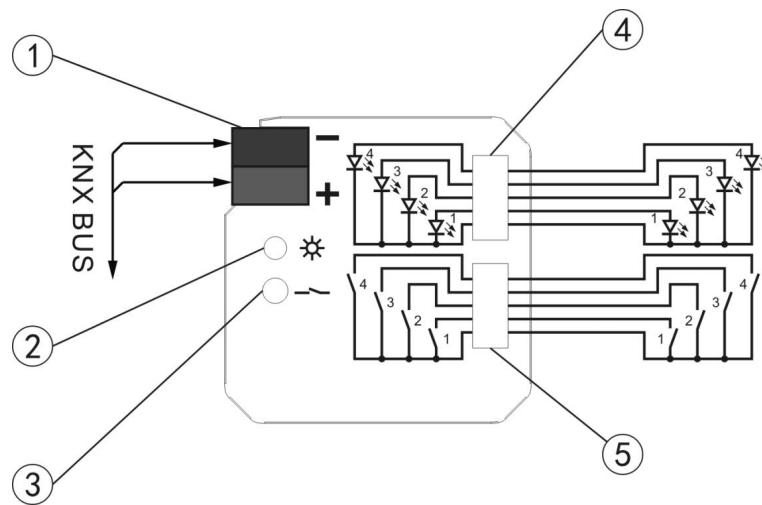

1 KNX bus connection terminal

4 LED terminal

2 Programming LED

5 KEY terminal

3 Programming button

## Chapter 4 Project design and programming

### 4.1. Overview of the functions

Application program	Number of communication objects	Max. number of group address	Max. number of associations
Universal Interfaces, 4 fold	40	80	80

The following functions can be set separately for each input:

**Switch sensor:** For switching the lighting or scanning a floating contact; Distinction between short/long operation and cyclical sending of the contact state are possible.

**Switch/dimming sensor:** For switching/dimming the lighting; There are start/stop dimming and stepwise dimming, as well as dimming via a single push button are possible.

**Value/Forced operation:** For sending the valued of different data types(e.g. temperature values). It is possible to send different values or data types for short/long operation, possible to activate/deactivate the forced operation of actuators.

**Control scene:** For recalling and storing the states of several actuator groups. The actuator groups can either be controlled via max. 5 individual objects or via an 8 bit scene object.

**Switching sequence:** For the operation of several actuator groups in a preselected sequence, e.g. the latching relay.

**Counter:** For counting input pulses. Various data types of the counter can be set. It is able to set the counting rate, whether to sending the current counting values cyclically and the differential counter when enables an additional counter. The differential counter can be reset and run out in report, thereby, it is convenient to count the daily consumption.

**Push button with multiple operations:** For triggering various functions depending on the frequency of the operation. A long operation can also be detected and a function can be triggered.

**Shutter sensor:** For movement and adjustment of a shutter or blind. Eight present operation modes are possible in total.

**Control LED:** For controlling a light-emitting diode, switching and flashing. As the switch, it is with time limit that turns off automatically after a preset time; as the flash, it is able to set the flashing rates.

## Chapter 5 Parameter setting description in the ETS

Parameters and objects in the device application are outlined in this section. Parameters and objects which are assigned to each channel, are equivalent and described in the following sections using output A as an example.

### 5.1. Description of setting parameter in part of device channel

#### 5.1.1. Parameter window “General Setting”

Parameters for the functions which affect the complete device can be set via the Fig.1.

1.1.1 Universal Interfaces, 4 fold > General Setting

General Setting	Limit number of Tele.	
Channel A	Period	<input type="radio"/> No <input checked="" type="radio"/> Yes
Channel B	Max. Number Tele. within a period [1..255]	5s
Channel C		20
Channel D		
LED A		
LED B		
LED C		
LED D		

Fig.1 parameter window “General Setting”

#### Parameter “Limit number of Tele.”

It is use to limit the number of sending telegrams to decrease the burthen of bus. It is possible to set how many telegrams can be sent within an adjustment period. Options:

**No**

**Yes**

**Parameter "Period"**

It is able to set the limit time of sending telegrams.Options:

**100ms**

**500ms**

**1s**

.....

**1min**

**10min**

**Parameter "Max. Number Tele. Within a period [1..255]"**

It is able to set the Max. number of sending telegrams within a setting period.Options: **1..255**

### 5.1.2. Parameter window “Switch”

Parameter window “Switch X” can be shown in Fig.2 and Fig.4. Fig.2 do not distinguish between long and short operation while Fig.4 opposite.

1.1.1 Universal Interfaces, 4 fold > Channel A	
General Setting	Function of the channel
Channel A	<p>Distinction between long and short operation</p> <p><input checked="" type="radio"/> No <input type="radio"/> Yes</p>
Channel B	Cyclic send Tele.Tele.switch"
Channel C	Reaction on closing the contact (Rising edge)
Channel D	Reaction on opening the contact (Falling edge)
LED A	Interval of Tele.cyclic send: Base
LED B	Factor[1..255]
LED C	Send object value after voltage recovery( if YES not equal TOGGLE)
LED D	LED function set
	Debounce time/Min Time

Fig.2 Parameter window “Switch X”(do not distinguish between long and short operation)

#### Parameter “function of the channel”


The parameter determines the function option in the channel; the current option is “switch”. If “No function” is selected, it means the channel is disabled. Options:

- No function**
- Switch**
- Switch/Dimming**
- Value/Forced output**
- Scene control**
- Switching sequence**
- Counter**
- Multiple operations**
- Shutter Control**

#### Parameter “Distinction between long and short operation”

This parameter sets whether the input distinguishes between a short and long operation. If “yes” is

selected, there is a waiting period after the opening/closing of the contact to determine whether the operation is long or short. Only then is a possible reaction triggered. The following drawing clarifies the function:

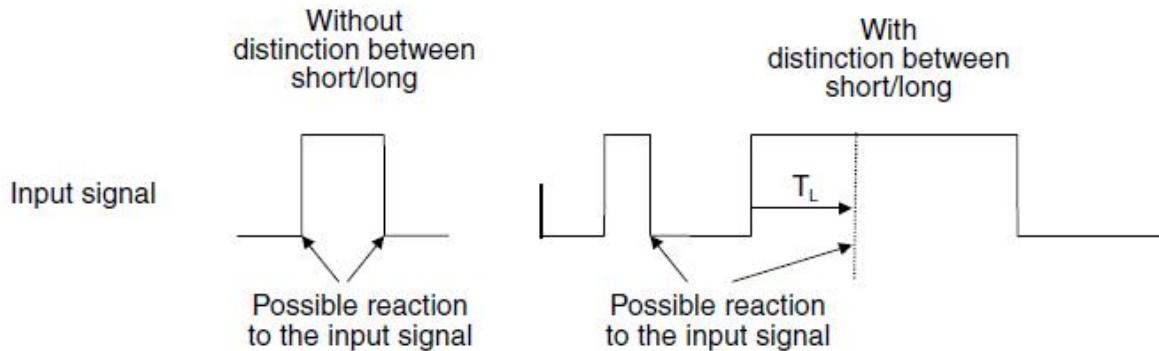

Options:

**No**

**Yes**

**Note: The long operation in the below chapters are the same with here.**

#### Parameter "Cyclic send Tele. "Tele. Switch""

This parameter is visible if there is no distinction between a short and long operation. It is able to set whether to send the current value of object "Tele. Switch, X" cyclically on the bus. Options:

**No**

**If switch off**

**If switch on**

**Always**

If the parameter value "always" is selected, the object sends cyclically on the bus, regardless of its value is 0 or 1. If the parameter value "if switch off" or "if switch on" is set, only the corresponding object value is sent cyclically.

#### Parameter "Reaction on closing the contact (Rising edge)"

#### Parameter "Reaction on opening the contact (Falling edge)"

This parameter is visible if there is no distinction between a short and long operation. It can be set the operation to open and close the contact. Options:

**No action**

**Off**

**On**

**Toggle****Stop cyclic send**

If the parameter "Toggle" is selected, negate the operation, that means negate the current value. For example, if "On" is selected, when negate it will carry out "Off" operation. If the parameter "Stop cyclic send" is selected, it will stop the cyclical sending telegram till there is a new object value to be sent. If the parameter "No action" is selected, it will not implement any operation.

**Parameter "Interval of Tele. Cyclic send: Base× Factor"**

This parameter is used to set the interval time between two telegrams that are sent cyclically, it is visible if cyclical sending has been set. Transmission cycle time =Base× Factor.

Base options: **1s**

**10s**

...

**1h**

Factor options: **1..255**

**Parameter "Send object value after voltage recovery (if yes not equal toggle)"**

It can be set whether to send the value of the object "Tele. Switch, X" on the bus after voltage recovery, this parameter is visible if there is no distinction between a short and long operation.Options:

**No**

**Yes**

If the parameter "Yes" is selected, it will send the current value of the object "Tele. Switch, X" on the bus. Only when the value "Toggle" has not been set in either of the two parameters "Reaction on opening/closing the contact", the value of the object "Tele. Switch, X" can be send on the bus. If one of the two parameters has the value "TOGGLE", no values are sent in general on the bus after bus voltage recovery. If "No reaction" or "Stop cyclic send" is selected, there is no values are sent on the bus either.

**Parameter "LED function set"**

This parameter set the LED direction to indicate the status according to the object "Tele. Switch, X". There are A, B, C, D 4 LEDs to choose, each LED has 2 options. If the parameter "LED X accord to switch value" is selected, LED indicate status is the same with the current value of the object "Tele. Switch, X"; if the parameter "LED X toggle by switch value" is selected, LED indicate status is negate to the current value of the object "Tele. Switch, X".Options:

**LED A accord to switch value**

**LED A toggle by switch value**

.....

**LED D accord to switch value**

**LED D toggle by switch value**

**No action**

**Note: If the four channels invoke the same option, the priority of channel A is the highest, it will indicate the status according to the value of the object “Tele. Switch, X” in channel A. Then the priority of channel B is higher, then it's C, the last is D. The priority of LED X in function channel in the device is higher than the LED X channel, the LED X can not be implement any operation in channel LED X which is used in the function channel in the device. If the parameter “LED function” is set “LED A accord to switch value” or “LED A toggle by switch value” options, the operation had been set in LED A can not be carry out.**

**Parameter “Debounce time”**

**Parameter “Debounce time/Min time”**

It can set the vibration time to prevent unwanted multiple operation by bouncing of contacts in vibration time, which means the effective time of the contact operation.Options:

**10ms**

**20ms**

.....

**150ms**

**Min. operation**

The “minimum operation” time can only be set when there is no distinction between a short and a long operation. This parameter is different from others, the effective time of the contact operation is not only means the effective time when contact close, but also the contact open. The parameter window can be shown in Fig. 3:

## 1.1.1 Universal Interfaces, 4 fold &gt; A-MiniTime

General Setting	Minimum operation time:base	1s
Channel A	Minimum operation time:Factor [1..255]	10
<b>A-MiniTime</b>		
Channel B		
Channel C		
Channel D		
LED A		
LED B		

Fig. 3 Parameter window "X-Mini Time"

**Parameter "Minimum operation time: Base × Factor"**

The effective time of the contact operation is: Base × Factor

Base options: **100ms**

.....

**1min**

Factor options: **1..255**

**Note: The parameter window and the explanation of parameter "Min. operation/Min time" in the "Debounce time" in the below chapters are the same with here.**

## 1.1.1 Universal Interfaces, 4 fold &gt; Channel A

General Setting	Function of the channel	Switch
Channel A	Distinction between long and short operation	<input type="radio"/> No <input checked="" type="radio"/> Yes
Channel B	Connect contact type	<input type="radio"/> normally closed <input checked="" type="radio"/> normally open
Channel C	Reaction on short operation	OFF
Channel D	Reaction on long operation	no action
LED A	Long operation after: Base	1s
LED B	Factor[2..255]	20
LED C	Number of objects for short/long object operation	<input checked="" type="radio"/> 1object <input type="radio"/> 2objects
LED D	LED function set	LED A accord to switch value
	Debounce time	50ms

Fig. 4 Parameter window "Switch X" (distinguish between a short and long operation)

**Parameter "Connect contact type"**

This parameter is visible when there is a distinction between a short and long operation, it is used to define whether the contact is a normally open contact or a normally close contact in general.

Options:

**Normally closed**

**Normally open**

The parameter introduced in this chapter is use "Normally open" as the example; the normally close is just opposite.

**Parameter "Reaction on short operation" or "Reaction on long operation"**

This parameter is visible when there is a distinction between a short and long operation. It is able to set the operation when preset a short and long operation. When the button operation is confirm to a short or a long operation, the object value will be update immediately. Options:

**No action**

**Off**

**On**

**Toggle**

**Parameter "Long operation after: Base x Factor"**

This parameter is visible if there is a distinction between a short and long operation. The period TL is defined here, after which an operation is interpreted as "long". TL = Base x Factor

Base options: **100s**

**1s**

.....

**1h**

Factor options: **2.255**

**Parameter "Number of objects for short/long object operation"**

This parameter is visible if there is a distinction between a short and long operation. It is able to set one or two communication objects, when one communication object is set, long and short operation share one communication object; when two communication objects are set, long and short operation use one communication object separately. Options:

**1 object**

**2 objects**

### 5.1.3. Parameter window “Switch/dimming”

Parameter window “Switch/dimming, X” will be shown in Fig. 5, it is visible when Function of the channel “Switch/Dimming” is selected. The function enables the operation of dimmable lighting. 1 button operation is also possible.

1.1.1 Universal Interfaces, 4 fold > Channel A		
General Setting	Function of the channel	Switch/Dimming
Channel A	Connect contact type	<input type="radio"/> normally closed <input checked="" type="radio"/> normally open
Channel B	Dimming functionality	<input checked="" type="radio"/> Dimming and switching <input type="radio"/> Only dimming
Channel C	Reaction on short operation	ON
Channel D	Reaction on long operation	Dim BRIGHTER/DARKER with start BRIGHTER
LED A	Long operation after	0.5s
LED B	Dimming mode	<input type="radio"/> Start-stop-Dimming <input checked="" type="radio"/> Steps dimming
LED C	Brightness change on every sent	1.56%
LED D	Interval of Tele.cyclic send	0.5s
	Debounce time	50ms

Fig. 5 Parameter window “Switch/Dimming”

#### Parameter “Connect contact type”

This parameter defines whether the contact at the input is a normally open contact or a normally closed contact. Options:

**Normally closed**

**Normally open**

The parameter introduced in this chapter is use “Normally open” as the example, the normally close is just opposite.

#### Parameter “Dimming functionality”

This parameter determines whether the lighting is only dimmed or whether it should also be switched. Options:

**Dimming and switching**

**Only dimming**

If the parameter “Only dimming” is selected, there is no distinction between a short and long operation. The dimming command is therefore carried out immediately after the push button action; there is no delay to determine whether the operation is long or short. If the parameter “Dimming and switching” is selected, the push button action need to delay to determine whether the operation is long

or short. In this case, the lighting is dimmed via a long operation and switched via a short operation.

**Parameter "Reaction on short operation"**

This parameter is visible if the value "Dimming and switching" has been set in the parameter "Dimming functionality". It is able to set the operation after triggered the object "Switch, X", that's a short operation.Options:

**No action****Off****On****Toggle****Parameter "Reaction on long operation"**

This parameter is visible if the value "Dimming and switching" has been set in the parameter "Dimming functionality". It is able to set a dim brighter or a dim darker after a long operation.Options:

**Dimming brighter****Dimming darker****Dim brighter/darker with start brighter****Dim brighter/darker with start darker**

The parameter "Dim brighter/darker with start darker" is selected, it can be dim brighter or dim darker after a long operation, it is just dim darker first and the latter operation negate.

**Note: The long and short operation is individual; they are not operation on one object.**

**Parameter "Long operation after"**

This parameter is visible if the value "Dimming and switching" has been set in the parameter "Dimming functionality". The period TL is defined here, after which an operation is interpreted as "long".Options:

**0.3s****0.5s****.....****10s****Parameter "Reaction on operation"**

This parameter is visible if the value "Only dimming" has been set in the parameter "Dimming functionality". There is no distinction between a short and long operation. The operation and the option of the parameter "Reaction on long operation" are the same. It is able to set a dim brighter or a dim

darker after a long operation.Options:

**Dimming brighter**

**Dimming darker**

**Dim brighter/darker with start brighter**

**Dim brighter/darker with start darker**

#### Parameter "Dimming mode"

This parameter defines the dimming mode is start-stop dimming or steps dimming.Options:

**Start-stop dimming**

**Steps dimming**

If "Start-stop dimming" is selected, the dimming mode is start-stop dimming; it begins the dimming process with a dim darker or brighter telegram and ends the dimming process with a stop telegram. Cyclical sending of the dimming telegram is not required in this case.

If "Step dimming" is selected, the dimming mode is step dimming, the dimming telegram is sent cyclically during a long operation. Once the operation has finished, a stop telegram ends the dimming process.

#### Parameter "Brightness change on every sent"

This parameter is only visible for "Dimming steps". It can be set, which change in brightness (percentage value) causes a dimming telegram to be sent cyclically.Options:

**100%**

**50%**

.....

**1.56%**

#### Parameter "Interval of Tele. Cyclic send"

This parameter is only visible for "Dimming steps". It is able to set the interval of telegram cyclic sending after a long operation.Options:

**0.3s**

**0.5s**

.....

**10s**

#### Parameter "Debounce time"

#### Parameter "Debounce time/Min time"

It can set the vibration time to prevent unwanted multiple operation by bouncing of contacts in vibration time, that means the effective time of the contact operation.Options:

**10ms**

**20ms**

.....

**150ms**

**Min. operation**

A minimum operation time can only be set if the value "Only dimming" has been set in the parameter "Dimming functionality". The parameter window will be shown in Fig. 3.

#### 5.1.4. Parameter window "Value/force output"

Parameter window "Value/force output , X" will be shown in Fig. 6 and Fig. 7, in Fig. 6 there is a distinction between a short and long operation while in Fig.7 is just opposite.

1.1.1 Universal Interfaces, 4 fold > Channel A		
General Setting	Function of the channel	Value/Forced output
Channel A	Connect contact type	<input type="radio"/> normally closed <input checked="" type="radio"/> normally open
Channel B	Distinction between long and short operation	<input type="radio"/> No <input checked="" type="radio"/> Yes
Channel C	Reaction on short operation	1byte value[0..255]
Channel D	Output value[0..255]	127
LED A	Reaction on long operation	1byte value[0..255]
LED B	Output value[0..255]	127
LED C	Long operation after base	1s
LED D	Factor[2..255]	2
	Debounce time	50ms

Fig. 6 Parameter window "Value/force output, X" (distinguish with a short and long operation)

## 1.1.1 Universal Interfaces, 4 fold &gt; Channel A

General Setting	Function of the channel	Value/Forced output
Channel A	Connect contact type	<input type="radio"/> normally closed <input checked="" type="radio"/> normally open
Channel B	Distinction between long and short operation	<input checked="" type="radio"/> No <input type="radio"/> Yes
Channel C	Reaction on operation	1byte value[0..255]
Channel D	Output value[0..255]	127
LED A	Send object value after voltage recovery	<input checked="" type="radio"/> No <input type="radio"/> Yes
LED B	Debounce time/Min Time	50ms

Fig. 7 Parameter window "Value/force output, X" (do not distinguish with a short and long operation)

## Parameter "Connect contact type"

This parameter defines whether the contact at the input is a normally open contact or a normally closed contact. Options:

**Normally closed**

**Normally open**

The parameter introduced in this chapter is use "Normally open" as the example; the normally close is just opposite.

## Parameter "Distinction between long and short operation"

This parameter sets whether the input distinguishes between a short and long operation. If "yes" is selected, there is a waiting period after the opening/closing of the contact to determine whether the operation is long or short. Options:

**No**

**Yes**

## Parameter "Reaction on operation"

This parameter is visible if there is no distinction between a short and a long operation. It defines the data type that is sent when the contact is pressed. Options:

**No reaction**

**1 bit value [0, 1]**

.....

**4 byte value [0...4294967295]**

## Parameter "Reaction on short operation"

## Parameter "Reaction on long operation"

This parameter is visible if there is no distinction between a short and long operation. It defines the data type that is sent after a short or long operation.Options:

**No reaction**

**1 bit value [0, 1]**

.....

**4 byte value [0..4294967295]**

#### Parameter "Output value [...]"

This parameter defines the value which is sent on operation. The value range is dependent on the selected data type. Two values can be set here when there is a distinction between a short and long operation.

#### Parameter "Long operation after Base x Factor [0..255]"

This parameter is visible if there is a distinction between a short and long operation. The period TL is defined here, after which an operation is interpreted as "long". TL = Base x Factor.

Base options: **100s**

**1s**

.....

**1h**

Factor options: **2.255**

#### Parameter "Send object value after voltage recovery"

This parameter defines whether to send object value of "Tele. Value, X" on the bus after the voltage recovery. This parameter is visible if there is no distinction between a short and long operation. If "yes" is selected, the device sends the object "Tele. Value, X" on the bus after bus voltage recovery.Options:

**No**

**Yes**

#### Parameter "Debounce time"

#### Parameter "Debounce time/Min time"

It can set the vibration time to prevent unwanted multiple operation by bouncing of contacts in vibration time, which means the effective time of the contact operation.Options:

**10ms**

.....

**150ms**

**Min. operation**

A minimum operation time can only be set if there is no distinction between a short and long operation. The parameter window will be shown in Fig. 3.

### 5.1.5. Parameter window “Scene control”

Parameter window “Scene control, X” will be shown in Fig. 8, it will be visible when the function channel “Scene control” is selected. This function enables the states of several actuator groups to be recalled and stored.

1.1.1 Universal Interfaces, 4 fold > Channel A

General Setting	Function of the channel	Scene control
<b>Channel A</b> <ul style="list-style-type: none"> <li>Scene A</li> <li>Channel B</li> <li>Channel C</li> <li>Channel D</li> <li>LED A</li> <li>LED B</li> <li>LED C</li> <li>LED D</li> </ul>	Connect contact type	<input type="radio"/> normally closed <input checked="" type="radio"/> normally open
	Control the scene by	<input checked="" type="radio"/> 5 separate objects <input type="radio"/> 8bit scene
	Reaction on short operation	<input type="radio"/> No reaction <input checked="" type="radio"/> Recall Scene
	Store Scene	On long operation
	long operation after	2s
	Debounce time	50ms

Fig. 8 Parameter window “Scene control, X”

1.1.1 Universal Interfaces, 4 fold > Channel A

General Setting	Function of the channel	Scene control
<b>Channel A</b> <ul style="list-style-type: none"> <li>Scene A</li> <li>Channel B</li> <li>Channel C</li> <li>Channel D</li> <li>LED A</li> <li>LED B</li> <li>LED C</li> <li>LED D</li> </ul>	Connect contact type	<input type="radio"/> normally closed <input checked="" type="radio"/> normally open
	Control the scene by	<input checked="" type="radio"/> 5 separate objects <input type="radio"/> 8bit scene
	Reaction on short operation	<input checked="" type="radio"/> No reaction <input type="radio"/> Recall Scene
	Store Scene	On long operation
	long operation after	2s
	Debounce time	50ms

Fig. 9 Parameter window “8 bit scene”

**Parameter "Connect contact type"**

This parameter defines whether the contact at the input is a normally open contact or a normally closed contact.Options:

**Normally closed**

**Normally open**

The parameter introduced in this chapter is use "Normally open" as the example, the normally close is just opposite.

**Parameter "Control the scene by"**

It is possible to select whether the scene control is carried out via "5 separate objects" or whether values that are stored in the actuators are recalled and saved via an "8 bit scene".Options:

**5 separate objects**

**8 bit scene**

If the parameter "5separate objects" is selected, it will activate the control of the groups of the actuator, these 5 objects' parameter window will be shown in Fig. 10; If the parameter "8 bit scene" is selected, it can control the scene such as the scene function in dimming actuator、switch actuator, the parameter window will be shown in Fig. 9.

**Parameter "No. of scene [0..63]"**

This parameter will be visible when the scene control is "8 bit scene", it can be set the No. of scene. The No. range is 0..63.

**Parameter "Reaction on short operation"**

This parameter defines whether a short operation of the input causes a light scene to be recalled or no reaction takes place.Options:

**No reaction**

**Recall scene**

**Parameter "Store scene"**

This parameter defines how the saving of the current scene.Options:

**No**

**On long operation**

**With object value= '1'**

**On long operation and object value= '1'**

Different type of scene control makes the saving of the current scene different. The following table provides an overview:

Control the scene via "5 separate objects":

Parameter value	Behaviour
On long operation	<p>As soon as a long operation is detected, the object "Store scene, X" sends the value "1" on the bus and the object "Output 1bit/8bit, group A...E" send read out telegram. The objects "Output 1bit/8bit, group A...E" can be modified via the bus for the duration of the long operation.</p> <p>Once the long operation has finished, the object "Store scene, X" sends the value "0" on the bus and the current object values can't be modified</p> <p>On the long operation, If the object "Store scene, X" receives the value "0" on the bus, even the long operation has not finished ,the current object value also can't be modified</p>
If object value= '1'	<p>If the object "Store scene, X" receives the value "1", the object values "Output 1bit/8bit, group A...E" are read out via the bus. While the object value is "1", the objects "Output 1bit/8bit, group A...E" can be modified via the bus.</p> <p>On receipt of the object value "0", the current object values can't be modified</p>
On long operation and object value= '1'	<p>If the object "Store scene, X" receives the value "1" on the bus, on the next long operation, the object "Output 1bit/8bit, group A...E" read out the telegram. The objects "Output 1bit/8bit, group A...E" can be modified via the bus for the duration of the long operation. After the end of the long operation, the object values can't be modified , the object "store scene, X" will send value '0'</p> <p>On the long operation, If the object "Store scene, X" receives the value "0" on the bus, even the long operation has not finished ,the current object value also can't be modified</p> <p>Provided that a "1" has not been received at the object "Store scene, X", a long operation is interpreted in the same way as a short operation.</p>

Control the scene via "8 bit scene":

Parameter value	Behaviour
On long operation	After a long operation, the object "8 bit scene" sends a save command on the bus and thereby triggers the storing of the current scene in the actuators e.g. dimming actuator, switch actuator.
If object value= '1'	If the object "Store scene, X" receives the value "1", the object "8 bit scene" sends a save command on the bus and save the current scene.
On long operation and object value= '1'	If the object "Store scene, X" receives the value "1" on the bus, the next long push button action triggers the sending of a save command via the object "8 bit scene", the current scene will be saved. When the object "store scene, X" receives the value "0", end up the saving the value of current scene. Provided that a "1" has not been received at the object "Store scene" since the last save, a long operation is interpreted in the same way as a short operation.

#### Parameter "Long operation after"

This parameter is visible when the parameter "Store scene" is "On long operation" or "On long operation and object value= '1'", it is defines the period here, after which an operation is interpreted as "long". Options:

**0.3s**

**0.5s**

.....

**10s**

#### Parameter "Debounce time"

It can set the vibration time to prevent unwanted multiple operation by bouncing of contacts in vibration time, that means the effective time of the contact operation. Options:

**10ms**

**20ms**

.....

**150ms**

## 1.1.1 Universal Interfaces, 4 fold &gt; Scene A

General Setting	Control of actuator group A by	<input checked="" type="radio"/> 1bit object <input type="radio"/> 8bit object
Channel A	Preset value actuator group A [0=OFF,1=ON]	<input type="radio"/> OFF <input checked="" type="radio"/> ON
Scene A	Control of actuator group B by	<input checked="" type="radio"/> 1bit object <input type="radio"/> 8bit object
Channel B	Preset value actuator group B [0=OFF,1=ON]	<input type="radio"/> OFF <input checked="" type="radio"/> ON
Channel C	Control of actuator group C by	<input checked="" type="radio"/> 1bit object <input type="radio"/> 8bit object
Channel D	Preset value actuator group C [0=OFF,1=ON]	<input type="radio"/> OFF <input checked="" type="radio"/> ON
LED A	Control of actuator group D by	<input checked="" type="radio"/> 1bit object <input type="radio"/> 8bit object
LED B	Preset value actuator group D [0=OFF,1=ON]	<input type="radio"/> OFF <input checked="" type="radio"/> ON
LED C	Control of actuator group E by	<input checked="" type="radio"/> 1bit object <input type="radio"/> 8bit object
LED D	Preset value actuator group E [0=OFF,1=ON]	<input type="radio"/> OFF <input checked="" type="radio"/> ON

Fig. 10 Parameter window "Scene X"

## Parameter window "Scene X"

The parameter window "Scene X" will be shown in Fig. 10, it is visible if the control of the light scenes is carried out via "5 separate objects".

## Parameter "Control of actuator group A...E"

It can be set for each actuator group whether the control is carried out via a "1 bit object" or an "8 bit object". Options:

**1 bit object**

**8 bit object**

## Parameter "Preset value actuator group A...E"

This parameter set the preset value of the actuator group. This value can be modified via the bus when save the scene. If the bus voltage recovery this value will be modified as preset value.

### 5.1.6. Parameter window “Switching sequence”

The parameter window “Switching sequence” will be shown in Fig. 11. It is visible if the input is operated with the function “Switching sequence”. A switching sequence enables the stepwise modification of several values via a single operation.

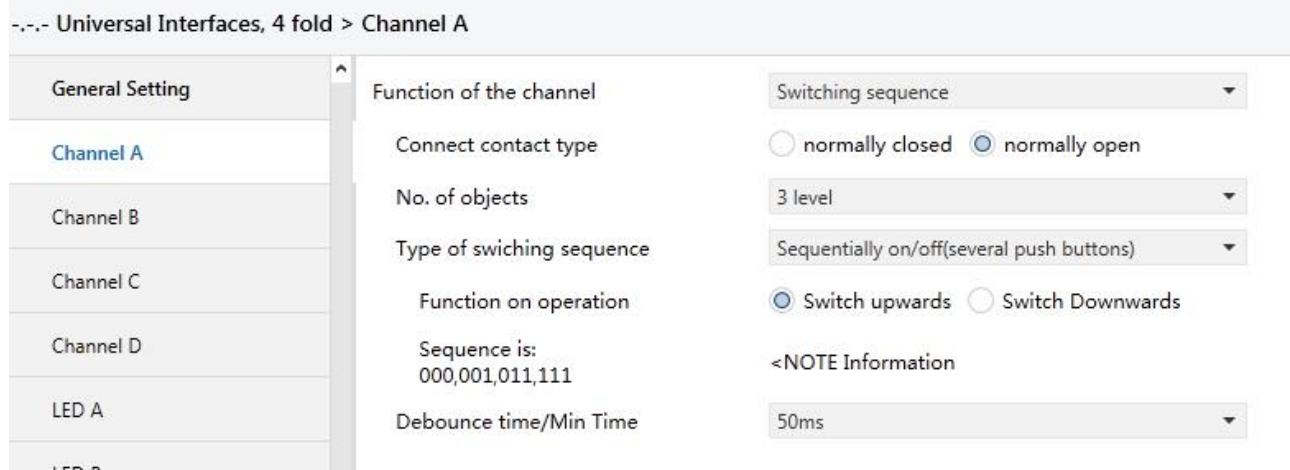


Fig.11 Parameter window “switching sequence, X”

#### Parameter “Connect contact type”

This parameter defines whether the contact at the input is a normally open contact or a normally closed contact. Options:

**Normally closed**

**Normally open**

The parameter introduced in this chapter is use “Normally open” as the example, the normally close is just opposite.

#### Parameter “No. of objects”

This parameter defines the number of objects, which is the number of levels, it is identical to the number of communication objects. Options:

**2level**

**3level**

**4level**

**5level**

For example, parameter “3level” means there are 3 communication objects: “level-1”, “level-2”, “level-3”. The first operation modified the value of “level-1”, the second operation modified the value of “level-2”, the third operation modified the value of “level-3”, the fourth from modified the value of “level-3”....., the switch sequence is: 000,001,011,111,011.....The data send on the bus is the value of the communication object that after modified, which is the alterative data. The communication object “level

increment/decrement, X" is used to increase or decrease the switch level, '1' means increase 1 level and '0' means decrease.

Different options have different communication objects and different switch levels, but their management are similar in the case of the same switch sequence type.

#### Parameter "Type of switching sequence"

The switching sequence can be selected here. Each sequence has other object values for each switching level.Options:

**Sequentially on/off (one push button)**

**Sequentially on/off (several push buttons)**

**All combinations**

Take "3level" as the example to explain the difference between them (send the modified data on the bus, data "0"= OFF, "1"=ON):

Type of switching sequence	Example
Sequentially on/off (one push button)	...000-001-011-111-011-001-...
Sequentially on/off (several push buttons)	000-001-011-111 or 111-011-001-000
All combinations	...000-001-011-010-110-111-101-100-... (Gray code)

#### Parameter "Function on operation"

Only visible in the switching sequence "Sequentially on/off (several push buttons)". It can be set whether an operation of the push button switches up or down a level.Options:

**Switch upwards**

**Switch downwards**

The implement direction of the parameter "Switch upwards" is "000-001-011-111", the implement direction of the parameter "Switch downwards" is "111-011-001-000".After the bus voltage recovery, the current value is 000, if the parameter "Switch downwards" is selected, the effect will be invisible when operation, then it is possible to operation after switch up a few levels by the object "level increment/decrement, X".

#### Parameter "Sequence is ..."

This parameter indicate the manage process when there are different type of switching sequence.

#### Parameter "Debounce time/Min. time"

It can set the vibration time to prevent unwanted multiple operation by bouncing of contacts in vibration time, which means the effective time of the contact operation.Options:

**10ms**

20ms

.....

150ms

**Min. operation**

The parameter window “Min. operation” will be shown in Fig. 3.

### 5.1.7. Parameter window “Counter”

The parameter window “Counter, X” will be shown in Fig. 12. It is visible when the input is operated with the function “Counter”.

Using the “Counter” function, the device is able to count the number of pulse edges at the input. A “differential counter” is therefore available if required in addition to the standard counter. Both counters are triggered by counting pulses but otherwise operate independently of each other. The counter always has the same data width as the differential counter.

The function is similar with the differential counter and the standard counter. The difference is the differential counter can reset the counter value (count from 0) and overflow by the bus counter report.

Attention: When disable the function, both key scanning and object in/out are disabled. Any key status change will be ignored.

1.1.1 Universal Interfaces, 4 fold > Channel A		
General Setting	Function of the channel	Counter
Channel A	Pulse detection on	<input checked="" type="radio"/> Closing contact(rising edge) <input type="radio"/> Opening contact(falling edge)
Counter-A	LED status on pulse detection	LED A ON
Channel B	Data width of counter	16 bit[-32768-32767]
Channel C	Counter starts at [-32768..32767]	0
Channel D	Debounce time/Min Time	50ms
LED A	Send object value after voltage recovery	<input checked="" type="radio"/> No <input type="radio"/> Yes
LED B	Enable additional options (factor/divider/cyclical send)	<input type="radio"/> No <input checked="" type="radio"/> Yes
LED C		
LED D		

Fig.12 Parameter window “Counter, X”

**Parameter "Pulse detection on"**

The type of input signal is defined in this parameter. It can be set whether the contact is a normally open contact (pulse trailing edge) or a normally closed contact (pulse rising edge). Options:

**Closing contact (rising edge)**

**Opening contact (falling edge)**

The parameter introduced in this chapter is use "Closing contact (rising edge)" as the example, the operation of opening contact is just opposite.

**Parameter "LED status on pulse detection"**

This parameter defines the indication of LED, whether to be on, off or no action when detect there is pulse input. Options:

**LED A ON**

**LED A OFF**

.....

**LED D OFF**

**No action**

**Note: If the four channels invoke the same option, the priority of channel A is the highest, it will carry out the preset operation when detected pulse input. Then the priority of channel B is higher, then it's C, the last is D. The priority of LED X in function channel in the device is higher than the LED X channel, the LED X can not be implement any operation in channel LED X which is used in the function channel in the device. If the parameter "LED status on pulse detection" is set "LED A ON" or "LED A OFF" options, the operation had been set in LED A can not be carry out.**

**Parameter "Data width of counter"**

The data type of the counter (absolute counter and differential counter) is defined in this parameter. The data type specifies the counting range for the counter.

The type of the objects "Output counter value....." and "Differential counter ..." is adapted to the data type of the parameter setting. Options:

**8bit [0..255]**

**16bit [-32768..32767]**

**16bit [0..65535]**

**32bit [-2147483648..2147483647]**

**Parameter "Counter starts at"**

The starting value of the absolute counter is defined in this parameter. When the bus power on, it will calculate the new counter value from this preset starting value.

**Parameter "Debounce time/Min time"**

It can set the vibration time to prevent unwanted multiple operation by bouncing of contacts in vibration time, which means the effective time of the contact operation.Options:

**10ms****20ms**

.....

**150ms****Min. operation**

The parameter window "Min. operation" will be shown in Fig. 3.

**Parameter "Send object value after voltage recovery"**

This parameter defines whether to send the current value when the bus voltage recovery. If the differential counter has been enabled, it is also sent on the bus and it is reset to zero. If the bus voltage failure, the standard counter and the differential counter are reset to the starting value, the standard counter will calculate from the preset starting value.Options:

**No****Yes****Parameter "Enable additional options (factor/divider, CyclicalSend)"**

Additional functions are possible here. If this parameter is set to "Yes", the parameter window Fig.13 is displayed.Options:

**No****Yes**

## 1.1.1 Universal Interfaces, 4 fold &gt; Counter-A

General Setting	Divider:number of input pulse for one counter step[1..32767]	<input type="text" value="1"/>
Channel A	Factor:one counter step changes counter value by [-32768..32767]	<input type="text" value="1"/>
Counter-A	Send counter value cyclically	<input type="radio"/> No <input checked="" type="radio"/> Yes
Channel B	Base:	<input type="text" value="1s"/>
Channel C	Factor[1..255]:	<input type="text" value="30"/>
Channel D	Enable differential counter	<input type="radio"/> No <input checked="" type="radio"/> Yes
LED A		
LED B		

Fig.13 Parameter window "Counter-X"

## Parameter "Divider: number of input pulse for one counter step[1..32767]"

It can be set via this parameter how many pulses are necessary to generate a counting pulse. The range of pulse import-ability: **1..32767**.

## Parameter "Factor: one counter step changes counter value by [-32768..32767]"

This parameter defines how much the counter and differential counter should be increased by in the event of a counting pulse. Range:**-32768..32767**

## Parameter "Send counter value cyclically"

This parameter defines whether to send the current value cyclically. If this parameter has the value "Yes", the values of the counter and the differential counter are sent cyclically on the bus.Options:

**No****Yes**

## Parameter "Base" / "Factor [1..255]"

It is visible if the parameter "Send counter value cyclically" is "Yes". This parameter is used to set the interval time between two telegrams that are sent cyclically, Transmission cycle time =Basex Factor.

Base options: **1s****10s****...****1h**Factor options: **1..255**

**Parameter "Enable differential counter"**

This parameter defines whether to enable the differential counter function, if "Yes" is selected, it will enable.Options:

**No****Yes****Parameter "Over-/under-run of differential counter"**

This parameter is visible if the parameter "Enable differential counter" is set to "yes".

It can be set in this parameter which value generates an overflow of the differential counter. The overflow object will send an overflow value "1" on the bus when in the event of an overflow.

**Additional, the over run value must be greater than the factor.**

**Note:**

**Counting rule (take 16bit [-32768~32767] for example, the standard counter starts at 2500):**

**When the "factor" is negative, then counting in reverse, the count direction for the standard counter is from 2500 to -32768, the count direction for the differential counter is from 0 to -32768; when the "factor" is positive, counting forward, the count direction for the standard counter is from 2500 to 32767, the count direction for the differential counter is from 0 to 32767.**

**The counting rule is similar between the differential counter and the standard counter. The difference is that the differential counter can set the overflow value. When the differential counter overflow occurs, then the current count value = the count value - the overflow value.**

### 5.1.8. Parameter window “Multiple operation”

The parameter window “Multiple operation, X” will be shown in Fig.14. It is visible if the input is operated with the function “Multiple operation”. Enable the function, if the input is operated several times within a certain period, a specified object value can be modified depending on the number of operations. This enables e.g. different light scenes to be implemented with multiple push button actions.

1.1.1 Universal Interfaces, 4 fold > Channel A

General Setting	Function of the channel	Multiple operation
Channel A	Connect contact type	<input type="radio"/> normally closed <input checked="" type="radio"/> normally open
Channel B	Max. number of operations (=Num. of objects)	2-fold operation
Channel C	Value send (object tele. operation ..-fold)	ON
Channel D	Value on every operation send	<input checked="" type="radio"/> No <input type="radio"/> Yes
LED A	Max. time between two operation	1s
LED B	Additional object for long operation	<input type="radio"/> No <input checked="" type="radio"/> Yes
LED C	Long operation after	1s
LED D	Value send (objectTele. long operation)	TOGGLE
	Debounce time	50ms

Fig.14 Parameter window “Multiple operation”

#### Parameter “Connect contact type”

This parameter defines whether the contact at the input is a normally open contact or a normally closed contact. Options:

**Normally closed**

**Normally open**

The parameter introduced in this chapter is use “Normally open” as the example, the normally close is just opposite.

#### Parameter “Max. number of operations [=Num. of objects]”

This parameter specifies the maximum permitted number of operations. This number is identical to the number of communication objects “Output X-fold”. Options:

**Single operation**

**2-fold operation**

**3-fold operation**

**4-fold operation**

**Parameter "Value send (object "Tele\_Operation...-fold")"**

It can be set here which object value should be sent.Options:

**Off****On****Toggle**

The current object value is inverted in the "Toggle" setting.

**Parameter "Value on every operation send"**

This parameter defines whether to send the operation value.Options:

**No****Yes**

If "yes" is entered in this parameter, the associated object value is updated and sent after each operation in the case of multiple push button actions. Example: For three-fold operations, the objects "output 1-fold" (after the first operation), "output 2-fold" (after the second operation) and "output 3-fold" (after the third operation) are sent. If "No" is selected, the current value will be send on the bus until the last operation delay (the delay time is the interval time between two operations).

**Parameter "Max. time between two operation"**

This parameter sets the interval between two operations. If there are no further operations within this period, the object "output 1-fold" is sent again.Options:

**0.3s****0.5s****...****10s****Parameter "Additional object for long operation"**

This parameter defines whether to activate the long operation. If a long operation is carried out after one or several short operations within the maximum period, the short operations are ignored.Options:

**No****Yes****Parameter "Long operation after"**

This parameter is visible if long operation activate. The period is defined here, after which an

operation is interpreted as "long". Options:

**0.3s**

**0.5s**

...

**10s**

#### Parameter "Value send (object "Tele. Long Operation")"

This parameter is visible if long operation activate. This parameter defines the value sent by the object "output long-fold" on the bus when it is set long operation. Options:

**Off**

**On**

**Toggle**

The current object value is inverted in the "Toggle" setting.

#### Parameter "Debounce time"

It can set the vibration time to prevent unwanted multiple operation by bouncing of contacts in vibration time, which means the effective time of the contact operation. Options:

**10ms**

**20ms**

.....

**150ms**

### 5.1.9. Parameter window “Shutter control”

The parameter window “Shutter control, X” will be shown in Fig.15. It is visible if the channel function “Shutter control” is selected. When enable this function, it is possible to control the shutter by one button/switch or two button/switch operation.

1.1.1 Universal Interfaces, 4 fold > Channel A		
General Setting	Function of the channel	Shutter Control
Channel A	Connect contact type	<input type="radio"/> normally closed <input checked="" type="radio"/> normally open
Channel B	Operation functionality type	2-push-button,standard
Channel C	Short:Stop/lamella UP/MOVE Long :Move UP/MOVE	Note about fuctionality
Channel D	Reaction on short operation	<input type="radio"/> STOP/lamella UP <input type="radio"/> STOP/lamella DOWN
LED A	Reaction on long operation	<input type="radio"/> MOVE UP <input type="radio"/> MOVE DOWN
LED B	Long operation after	0.5s
	Debounce time	50ms

Fig.15 Parameter window “Shutter control, X”

#### Parameter “Connect contact type”

This parameter defines whether the contact at the input is a normally open contact or a normally closed contact. Options:

**Normally closed**

**Normally open**

The parameter introduced in this chapter is use “Normally open” as the example, the normally close is just opposite.

#### Parameter “Operation functionality type”

This parameter defines the types of the shutters operation, detailed description of the type and function as the following table:

**1-push-button,short=stepping, long=moving**

Short operation	Alternate implement "Stop/Adjust upward" or "Stop/Adjust downward" operation (alternate send the value of the object "0"and"1")
Long operation	Alternate implement "Move up" or "Move down" operation (alternate send the value of the object "0"and"1")

**1-push-button, short=moving, long=stepping**

Short operation	Alternate implement "Move up" or "Move down" operation (alternate send the value of the object "0"and"1")
Long operation	Alternate implement "Stop/Adjust upward" or "Stop/Adjust downward" operation (alternate send the value of the object "0"and"1")

**1-push-button-operation, moving**

Operation	When operation, send the command in sequence: ..... → Move up → Stop/Adjust upward → Move down → Stop/Adjust downward → .....
-----------	--

**1-switch-operation, moving**

Operation start (press the button)	Alternate implement "Move up" or "Move down" operation (alternate send the value of the object "0"and"1")
Operation end (Release the button)	Stop/Adjust

**2-push-button, standard**

Short operation	"Stop/Adjust upward" or "Stop/Adjust downward" (set by parameter)
Long operation	"Move up" or "Move down" (set by parameter)

**2-push-button, moving[shutter]**

Operation	When operation, send the command in sequence: .....->Move up->Stop/Adjust upward->.....or .....->Move down->Stop/Adjust downward->..... (Move up/down set by parameter)
-----------	--

**2-push-button, stepping**

Operation	"Stop/ Adjust upward" or "Stop/ Adjust downward" (set by parameter) (keep pressing the button can send cyclic)
-----------	---

**2-switch-operation, moving[shutter]**

Operation start	"Move up" or "Move down" (set by parameter)
Operation end	"Stop / Adjust upward" or "Stop / Adjust downward" ( the sending value is identical to the value that the operation starting)

**Parameter "Tele STOP/adjust adj." Cyclical send"**

It is visible if the shutter control type is "1-push-button,short=moving,long=stepping" and "2-push-button, stepping". It is able to set the interval time of sending the object "stop/adjust adj." cyclical. Options:

**0.3s****0.5s**

...

**10s****Parameter "Reaction on short operation"**

It is visible if the shutter control type is "2-push-button, standard". This parameter defines the operation with short operation.Options:

**Stop/lamella up****Stop/lamella down**

**Parameter "Reaction on long operation"**

It is visible if the shutter control type is "2-push-button, standard". This parameter defines the operation with long operation.Options:

**Move up****Move down****Parameter "Reaction on operation"**

It is visible if the shutter control type is "2-push-button, moving[shutter]"、"2-switch-operation, moving[shutter]"and "2-push-button, stepping". It is defines the action when operation. Different control type makes different operate action. The former two control type is move up and down; the last control type is stop reaction.

Options: **Move up****Move down**Options: **Stop/lamella up****Stop/lamella down****Parameter "Long operation after"**

This parameter is visible if long operation activate. The period is defined here, after which an operation is interpreted as "long".Options:

**0.3s****0.5s**

...

**10s****Parameter "Debounce time"**

It can set the vibration time to prevent unwanted multiple operation by bouncing of contacts in vibration time, which means the effective time of the contact operation.Options:

**10ms****20ms**

.....

**150ms**

## 5.2. Description of setting parameter in part of LED channel

The LED priority in the channel LED part is lower than the LED in device channel. When enable the LED setting in device channel, the LED in LED channel will not action.

### 5.2.1. Parameter window “Flashing”

The parameter window will be shown in Fig.16. It is able to set the LED flash function and turn on the LED for long time simultaneously.

1.1.1 Universal Interfaces, 4 fold > LED A		
General Setting	if LED function is enable in input this must chose Control by input"	
Channel A	Function of the LED Channel	
Channel B	LED flashes,if	
Channel C	Time limit of LED control	
Channel D	Time limit:base	
LED A	Time limit:factor [1..255]	
LED B	Send status by object Tele.Status"	
LED C	State of LED on bus voltage recovery	
LED D	LED is switched ON for	
	LED is switched OFF for	

Fig.16 Parameter window “Flashing, X”

#### Parameter “Function of the LED channel”

This parameter defines the function of the LED channel. The default parameter is “Flashing” function. If “No action” is selected, it means this channel disable. Options:

**No action**

**Flashing**

**Switch**

**Control by input**

**Indicate object in**

**Indicate object out**

**Indicate object in and out**

**Parameter "LED Flashing, if"**

This parameter defines the mode of opening the LED flashing.Options:

**Object "LED flashing"=0**

**Object "LED flashing"=1**

**Parameter "Time limit of LED control"**

This parameter defines whether to enable the function to restrict the flashing of the LED.Options:

**No**

**Yes**

**Parameter "Time limit Basex Factor"**

This parameter is visible if the time limit is active. It is defines the time of LED flashing: Basex Factor.

Base options: **1s**

**10s**

...

**1h**

Factor options: **1..255**

**Parameter "Send status by object "Tele\_Status"**

This parameter defines whether to send the LED status report on the bus.Options:

**No**

**Yes**

If "Yes" is selected, the object "Send its status, X" will send value "1" when LED flashing; it will send value "0" when LED stop flashing.

**Parameter "State of LED on bus voltage recovery"**

It is defines the state of LED when the bus voltage recovery.Options:

**Off**

**On**

**Parameter "LED is switched ON/OFF for"**

It is defines the time of the LED switched on/off when LED flashing.Options:

**100ms**

**200ms**

.....

**60s**

### 5.2.2. Parameter window "Switch"

The parameter window "Switch, X" will be shown in Fig.17 to defines the switch function of LED.

The LED will switch off automatic and it can keep switching on after the LED is switch on for a while.

1.1.1 Universal Interfaces, 4 fold > LED A		
General Setting	if LED function is enable in input this must chose Control by input"	<NOTE Information
Channel A	Function of the LED Channel	Switch
Channel B	LED is Switch ON,if	<input checked="" type="radio"/> ObjectTele.Switch=0 <input type="radio"/> ObjectTele.Switch=1
Channel C	Time limit of LED control	<input type="radio"/> No <input checked="" type="radio"/> Yes
Channel D	Time limit:base	1s
LED A	Time limit:factor [1..255]	10
LED B	Send status by object Tele.Status"	<input checked="" type="radio"/> No <input type="radio"/> Yes
LED C	State of LED on bus voltage recovery	<input checked="" type="radio"/> OFF <input type="radio"/> ON
LED D		

Fig.17 Parameter window "Switch, X"

#### Parameter "LED is switch ON, If"

This parameter defines the mode to switch on the LED.Options:

**Object "Tele. Switch"=0**

**Object "Tele. Switch"=1**

#### Parameter "Time limit of LED control"

This parameter defines whether to enable the function to restrict the time to switch on the LED.Options:

**No**

**Yes**

#### Parameter Time limit Base× Factor

This parameter is visible if the time limit is active. It is defines the time of LED flashing: Base× Factor. After this period, the LED switches off automatically.

Base options: **1s**

**10s**

...

**1h**

Factor options: **1...255**

#### Parameter "Send status by object "Tele.Status"

This parameter defines whether to send the LED status report on the bus. Options:

**No**

**Yes**

If "Yes" is selected, the object "Send its status, X" will send value "1" when LED switch on; it will send value "0" when LED switch off.

#### Parameter "State of LED on bus voltage recovery"

It defines the state of LED when the bus voltage recovery. Options:

**Off**

**On**

### 5.2.3. Parameter window "Control by Input"

The parameter window "Control by input, X" will be shown in Fig.18, the LED is used to indicate the button input.

1.1.1 Universal Interfaces, 4 fold > LED A		
General Setting	if LED function is enable in input this must chose Control by input"	
Channel A	Function of the LED Channel	<NOTE Information Control by Input
Channel B		
Channel C		
Channel D		
<b>LED A</b>		
LED B		
LED C		
LED D		

Fig.18 Parameter window "Control by input, X"

### 5.2.4. Parameter window “Indicate Object In”

The parameter window “Indicate object in, X” will be shown in Fig.19, the LED is used to indicate the input of the communication object.

#### 1.1.1 Universal Interfaces, 4 fold > LED A

General Setting	if LED function is enable in input this must chose Control by input"	
Channel A	Function of the LED Channel	<NOTE Information
Channel B	LED on time	Indicate Object In
Channel C		100ms
Channel D		
<b>LED A</b>		
LED B		
LED C		
LED D		

Fig.19 Parameter window “Indicate object, X”

#### Parameter “LED.on time”

This parameter defines the indicative time of LED when there is input of communication object, which means the switch on time.Options:

**100ms**

**200ms**

.....

**60s**

### 5.2.5. Parameter window “Indicate Object Out”

The parameter window “Indicate object out, X” will be shown in Fig.20, the LED is used to indicate the output of the communication object.

#### 1.1.1 Universal Interfaces, 4 fold > LED A

General Setting	if LED function is enable in input this must chose Control by input*				
Channel A	Function of the LED Channel	Indicate Object Out			
Channel B	LED on time	100ms			
Channel C					
Channel D					
<b>LED A</b> <table border="1"> <tr><td>LED B</td></tr> <tr><td>LED C</td></tr> <tr><td>LED D</td></tr> </table>			LED B	LED C	LED D
LED B					
LED C					
LED D					

Fig.20 Parameter window “Indicate object out, X”

#### Parameter “LED on time”

This parameter defines the indicative time of LED when there is output of communication object, which means the switch on time.Options:

**100ms**

**200ms**

.....

**60s**

### 5.2.6. Parameter window “Indicate object In and Out”

The parameter window “Indicate object in and out, X” will be shown in Fig. 21, the LED is used to indicate the input and output of the communication object.

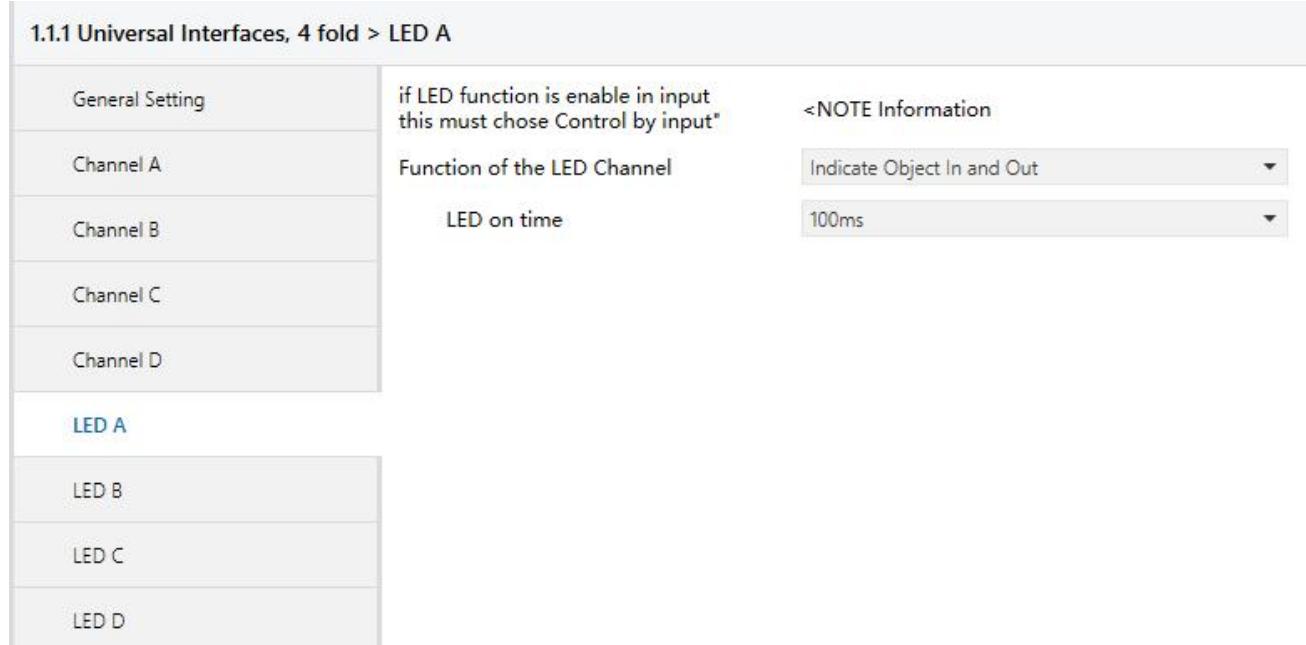


Fig.21 Parameter window “Indicate object in and out, X”

#### Parameter “LED on time”

This parameter defines the indicative time of LED when there is input or output of communication object, which means the switch on time.Options:

**100ms**

**200ms**

.....

**60s**

## Chapter 6 Communication object description

The communication object is the medium to communicate other device on the bus, which means only the communication object can communicate with bus. The communication object and the object in each channel are the same, then use channel A as the example to introduce the function of each communication object.

### 6.1. Communication object “Switch”

Number	Name	Object Function	Des	Group	Addr	Length	C	R	W	T	U	Data Type	Priority
0	Disable , A	CH A Disable				1 bit	C	-	W	-	-	enable	Low
1	Switch , A	CH A Switch				1 bit	C	-	W	T	-	switch	Low
2	Switch-long , A	CH A switch-long				1 bit	C	-	-	T	-	switch	Low

Fig.6.1 Communication object “Switch”

**Note: “C” in “Flag” column in the below table means that the object has a normal link to the bus; “W” means the object value can be modified via the bus; “R” means the value of the object can be read via the bus; “T” means that a telegram is transmitted when the object value has been modified; “U” means that value response telegrams are interpreted as a write command, the value of the object is updated.**

No.	Function	Object name	Data	Flags	DPT
0	<b>CH X Disable</b>	<b>Disable, X</b>	<b>1Bit</b>	<b>C,W</b>	<b>1.003 enable</b>
When enable the channel function, this communication object will be active to disable/enable the channel function. The communication object will disable this function if receive a telegram with logic value “0” while it will enable the channel function if receive a telegram “1”. The control telegram sent by all objects are ineffectiveness when the channel function disable. The channel function default to enable when the bus voltage recovery.(All communication object “Disable” in channel function operate equally.)					
1	<b>CH X Switch</b>	<b>Switch, X</b>	<b>1Bit</b>	<b>C,W,T</b>	<b>1.001 switch</b>
This communication object is visible if the channel function “Switch” is enable. It is visible no matter to distinguish short/long operation or not. Operate with button input(or a short operation) the object value to carry out the relevant action, such as ON、OFF、TOGGLE.					
2	<b>CH X Switch-long</b>	<b>Switch-long, X</b>	<b>1Bit</b>	<b>C,T</b>	<b>1.001 switch</b>
This communication object is visible if parameter “Number of objects for short/long object operation” is “2 objects” and it is distinguish with long and short operation. Operate with a long operation to input the object value to carry out the relevant action, such as ON、OFF、TOGGLE.					

Form 1 Communication object “Switch”

## 6.2. Communication object “Switch/dimming”

Number	Name	Object Function	Des	Group	Adc	Length	C	R	W	T	U	Data Type	Priority
0	Disable , A	CH A Disable				1 bit	C	-	W	-	-	enable	Low
1	Switch , A	CH A Switch				1 bit	C	-	W	T	-	switch	Low
2	Dimming , A	CH A Dimming				4 bit	C	-	W	T	-	dimming control	Low

Fig.6.2 Communication object “Switch/dimming”

No.	Function	Object name	Data	Flags	DPT
1	<b>CH X Switch</b>	<b>Switch, X</b>	<b>1bit</b>	<b>C,W,T</b>	<b>1.001 switch</b>
It is visible if parameter “Dimming functionality” selected “Dimming and switching”. Operate with a short operation to input the object value to carry out the relevant action, such as ON、OFF、TOGGLE.					
2	<b>CH X Dimming</b>	<b>Dimming, X</b>	<b>4bit</b>	<b>C,W,T</b>	<b>3.007 dimming control</b>
This communication object input by a long operation to send the command to dim up or dim down. It can control the dimming device on bus to carry out relative dimming. It will send a stop command to stop dimming when the long operation is end.					

Form 2 Communication object “Switch/dimming”

### 6.3. Communication object “Value/Force output”

There are many data types and communication objects, it will not list in Fig.6.3. This different data types communication object have the same operation that are transmit the input object value, which the range of transmit object value are different. It is possible to distinguish a long/short operation or not, the two objects enable when distinguished.

Number	Name	Object Function	Des	Group	Address	Length	C	R	W	T	U	Data Type	Priority
0	Disable , A	CH A Disable				1 bit	C	-	W	-	-	enable	Low
1	Output 1byte , A	CH A Value 1byte				1 byte	C	-	-	T	-	counter pulses (0..255)	Low
2	Output 1byte-long , A	CH A Value 1byte-long				1 byte	C	-	-	T	-	counter pulses (0..255)	Low

Fig. 6.3 Communication object “Value/Forced output”

No.	Function	Object name	Data type	Flags	DPT
1	<b>CH X Value 1bit (1bit/2bit/4bit/ 1byte/2byte/4byte)</b>	<b>Output 1bit, X (1bit/2bit/4bit/ 1byte/2byte/4byte)</b>	<b>1bit (1bit/2bit/.../4byte)</b>	<b>C,T</b>	<b>1.001 switch 2.001 switch control 3.007 dimming control 5.010 counter pulses(0..255) 8.001 pulses difference 7.001 pulses 12.001counter pulses(unsigned)</b>

This communication object is used to transmit the input value. It is only transmit the object value in short operation if distinguish a long and short operation. The value range is depend on the data type, if the data type of the communication object is different, the import-ability range of the object value is different. The data type depend on parameter “Reaction on (short) operation”.

2	<b>CH X Value 1bit-long (1bit/2bit/.../4byte)</b>	<b>Output 1bit-long, X (1bit/2bit/.../4byte)</b>	<b>1bit (1bit/2bit/.../4byte)</b>	<b>C,T</b>	<b>1.001 switch 2.001 switch control 3.007 dimming control 5.010 counter pulses(0..255) 8.001 pulses difference 7.001 pulses 12.001counter pulses(unsigned)</b>
This communication object is visible if there is a distinction between long and short operation, it is used to transmit the object input value in long operation. The value range is depending on the data type, if the data type of the communication object is different, the import-ability range of the object value is different. The data type depends on parameter “Reaction on long operation”.					

Form 3 Communication object “Value/Forced output”

## 6.4. Communication object “Scene control”

The communication object “Scene control” will be shown in Fig.6.4; it is including the actuator group and the communication object in the scene control mode. The control mode of actuator group control by 5 independent communication object, it is control by 1bit and 8bit data. The scene control mode control by a 8 bit data.

Number	Name	Object Function	Des	Group	Adc	Length	C	R	W	T	U	Data Type	Priority
0	Disable , A	CH A Disable				1 bit	C	-	W	-	-	enable	Low
1	Output 1bit,Group-A , A	CH A 1bit,Group-A				1 bit	C	-	W	T	U	switch	Low
2	Output 1bit,Group-B , A	CH A 1bit,Group-B				1 bit	C	-	W	T	U	switch	Low
3	Output 1bit,Group-C , A	CH A 1bit,Group-C				1 bit	C	-	W	T	U	switch	Low
4	Output 1bit,Group-D , A	CH A 1bit,Group-D				1 bit	C	-	W	T	U	switch	Low
5	Output 1bit,Group-E , A	CH A 1bit,Group-E				1 bit	C	-	W	T	U	switch	Low
6	Store scene , A	CH A Store scene				1 bit	C	-	W	T	-	boolean	Low

Number	Name	Object Function	Des	Group	Adc	Length	C	R	W	T	U	Data Type	Priority
0	Disable , A	CH A Disable				1 bit	C	-	W	-	-	enable	Low
1	Output 8bit,Group-A , A	CH A 8bit,Group-A				1 byte	C	-	W	T	U	counter pulses (0..255)	Low
2	Output 8bit,Group-B , A	CH A 8bit,Group-B				1 byte	C	-	W	T	U	counter pulses (0..255)	Low
3	Output 8bit,Group-C , A	CH A 8bit,Group-C				1 byte	C	-	W	T	U	counter pulses (0..255)	Low
4	Output 8bit,Group-D , A	CH A 8bit,Group-D				1 byte	C	-	W	T	U	counter pulses (0..255)	Low
5	Output 8bit,Group-E , A	CH A 8bit,Group-E				1 byte	C	-	W	T	U	counter pulses (0..255)	Low
1	Output 8bit scene , A	CH A 8bit Scene				1 byte	C	-	-	T	-	scene control	Low

Fig. 6.4 Communication object “Scene control”

No.	Function	Object name	Data type	Flags	DPT
1~5	<b>CH X 1bit/8bit, Group-A...E</b>	<b>Output 1bit/8bit, Group-A...E, X</b>	<b>1bit/1byte</b>	<b>C,W,T,U</b>	<b>1.001 switch 5.010 counter pulses(0..255)</b>
It is visible if parameter "Control the scene" selected "5 separate". It is used to control the actuator group, it can control by a 1 bit or 8 bit data (set by parameter). When saving the scene, the value of object "output 1bit/8bit, group A...E" will be read and storage by bus. When the bus voltage recovery, the value of the object resume to the default value and the new storage value will be lost.					
1	<b>CH X 8bit Scene</b>	<b>Output 8bit scene, X</b>	<b>1 byte</b>	<b>C,T</b>	<b>18.001 SceneControl</b>
<p>This communication object is visible if parameter "Control the scene" selected "8bit scene", it is used to control the scene. It is possible to invoke or save the scene by a 8 bit command sent by this object. The definition of the 8-bit command will be described below (This object is only to communicate "C" and transmit "T", do not have the function modify "W" and update "U"):</p> <p>Assuming an 8-bit command (binary coding) as: FXNNNNNN</p> <p>F: invoke the scene with "0"; save the scene with "1"</p> <p>X: 0</p> <p>NNNNNN: scene number (0...63)</p>					
6	<b>CH X Store scene</b>	<b>Store scene, X</b>	<b>1bit</b>	<b>C,W,T</b>	<b>1.002 boolean</b>
This parameter trigger the scene storage or indicate the accomplish of the scene by bus, decided by the mode of the scene storage. The detail storage process will be described in the scene storage parameter chapter.					

Form 4 Communication object "Scene control"

## 6.5. Communication object “Switch sequence”

The communication object “Switching sequence” will be shown in Fig.6.5. It can modify the object value with an operation step by step. Each object corresponding to one switch level.

Number	Name	Object Function	Des	Group	Adc	Length	C	R	W	T	U	Data Type	Priority
0	Disable , A	CH A Disable				1 bit	C	-	W	-	-	enable	Low
1	Output level-1 , A	CH A level-1				1 bit	C	-	-	T	-	switch	Low
2	Output level-2 , A	CH A level-2				1 bit	C	-	-	T	-	switch	Low
3	Output level-3 , A	CH A level-3				1 bit	C	-	-	T	-	switch	Low
4	Output level-4 , A	CH A level-4				1 bit	C	-	-	T	-	switch	Low
5	Output level-5 , A	CH A level-5				1 bit	C	-	-	T	-	switch	Low
6	Leve increment/decrement , A	CH A Leve increment/decrement				1 bit	C	-	W	-	-		Low

Fig.6.5 Communication object “Switching sequence”

No.	Function	Object name	Data type	Flags	DPT
1~5	<b>CH X level-1(1~5)</b>	<b>Output level-1(1~5), X</b>	<b>1bit</b>	<b>C,T</b>	<b>1.001 switch</b>
The number of the communication object (maximum 5) which the levels of switch set by parameter “No. of object”. The communication object sent on bus is the object which is modified, which the value of the communication object had been changed. The detail process will be described in the switching sequence parameter chapter.					
6	<b>CH X level increment/ decrement</b>	<b>level increment/ decrement, X</b>	<b>1bit</b>	<b>C,W</b>	<b>1.007 step</b>
The communication object “level increment/decrement, X” is used to increase/decrease the level of the switch. It will increase one level when sending “1” and decrease a level when sending “0”. The detail process will be describe in the switching sequence parameter chapter.					

Form 5 Communication object “Switching sequence”

## 6.6. Communication object “Counter”

The communication object “Counter” will be shown in Fig.6.6. Including standard counter and differential counter communication object, both these communication objects are initiated counter by one operation and the counter range are the same, but the counting are independent of each other.

Number	Name	Object Function	Des	Group	Address	Length	C	R	W	T	U	Data Type	Priority
0	Disable , A	CH A Disable				1 bit	C	-	W	-	-	enable	Low
1	Output counter value 1byte , A	CH A Counter value				1 byte	C	-	W	T	-	counter pulses (0..255)	Low
2	Differential Count 1byte , A	CH A Differential Counter				1 byte	C	-	W	T	-	counter pulses (0..255)	Low
3	Request counter value , A	CH A Request counter value				1 bit	C	-	W	-	-	enable	Low
4	Differential counter overflow , A	CH A Differential overflow				1 bit	C	-	-	T	-		Low
5	Reset differential counter , A	CH A Rst differential counter				1 bit	C	-	W	-	-		Low

Fig.6.6 Communication object “Counter”

No.	Function	Object name	Data type	Flags	DPT
1	CH X Counter value	<b>Output counter value</b>  <b>1byte, X</b>  <b>(1byte/2byte/4byte)</b>	<b>1byte</b>  <b>2byte</b>  <b>4byte</b>	<b>C,W,T</b>	<b>5.010 counter pulses(0..255)</b>  <b>8.001 pulses difference</b>  <b>7.001 pulses</b>  <b>13.001 counter pulses(signed)</b>
This communication object is used to transmit the current counting value of the standard counter, and it can modify the counting value simultaneously. Different data type makes the different counting range, it is defines by parameter “Date width of counter”.					
2	CH X Differential Counter	<b>Differential Counter</b>  <b>1byte, X</b>  <b>(1byte/2byte/4byte)</b>	<b>1byte</b>  <b>2byte</b>  <b>4byte</b>	<b>C,W,T</b>	<b>5.010 counter pulses(0..255)</b>  <b>8.001 pulses difference</b>  <b>7.001 pulses</b>  <b>13.001 counter pulses(signed)</b>
It is visible if enable the parameter “Enable differential counter”. This communication object is used to transmit the current counting value of the differential counter, and it can modify the counting value simultaneously. Different data type makes the different counting range, it is defines by parameter “Date width of counter”.					
3	CH X Request Counter value	<b>Request Counter value, X</b>	<b>1Bit</b>	<b>C,W</b>	<b>1.003 enable</b>
This communication object is used to ask for the current counting value of the standard counter and the differential counter. The communication object “CH X Counter value” and “CH X Differential Counter” will transmit the current counting value if receive a logic value “1”, it will no reaction if receive a logic value “0” telegram.					
4	CH X Differential overflow	<b>Differential counter overflow, X</b>	<b>1Bit</b>	<b>C,T</b>	<b>1.005 alarm</b>
It is visible if enable the parameter “Enable differential counter”. Once the counting of the differential counter exceed the overflow value preset by parameter “Over-/under run of differential at [0...255]”, it will send telegram “1” on bus to report the overflow.					
5	CH X Rst Differential Counter	<b>Reset Differential Counter, X</b>	<b>1Bit</b>	<b>C,W</b>	<b>1.015 reset</b>

It is visible if enable the parameter "Enable differential counter". It is used to reset the counting value of the differential counter, which counting from 0. It will reset the counting value if receive a logic value "1" telegram, and it will no reaction if receive a "0".

Form 6 Communication object "Counter"

## 6.7. Communication object "Multiple operation"

The communication object "Multiple Operation" will be shown in Fig.6.7. The value of the designate operation object will be modify if detect multiple operation in period.

Number	Name	Object Function	Des	Group	Adv	Length	C	R	W	T	U	Data Type	Priority
0	Disable , A	CH A Disable				1 bit	C	-	W	-	-	enable	Low
1	Output 1-fold , A	CH A 1-fold				1 bit	C	-	-	T	-	switch	Low
2	Output 2-fold , A	CH A 2-fold				1 bit	C	-	-	T	-	switch	Low
3	Output 3-fold , A	CH A 3-fold				1 bit	C	-	-	T	-	switch	Low
4	Output 4-fold , A	CH A 4-fold				1 bit	C	-	-	T	-	switch	Low
5	Output Long-fold , A	CH A Long-fold				1 bit	C	-	-	T	-	switch	Low

Fig.6.7 Communication object "Multiple operation"

No.	Function	Object name	Data type	Flags	DPT
1~4	<b>CH X 1-fold(1~4)</b>	<b>Output 1-fold, X(1~4)</b>	<b>1Bit</b>	<b>C,T</b>	<b>1.001 switch</b>
The number of the communication object (maximum 4) is set by parameter "Max. number of operations(=Num. of objects)". If there are multiple operation, multiple objects will send the relevant telegram on bus, which the telegram set by parameter "value send (object "Tele. Operation...-fold")". The detail operation process will be describe in the multiple operation parameter chapter.					
5	<b>CH X Long-fold</b>	<b>Output Long-fold, X</b>	<b>1Bit</b>	<b>C,T</b>	<b>1.001 switch</b>
It is visible if parameter "Additional object for long operation" selected "yes". Once detected a long operation the object will send telegram on bus, the telegram is set by parameter "value send (object "Tele. Long operation")".					

Form 7 Communication object "Multiple operation"

## 6.8. Communication object “Shutter control”

The communication object “Shutter Control” will be shown in Fig.6.8

Number	Name	Object Function	Des	Group	Adc	Length	C	R	W	T	U	Data Type	Priority
0	Disable , A	CH A Disable				1 bit	C	-	W	-	-	enable	Low
1	Output shutter UP/DOWN , A	CH A shutter UP/DOWN				1 bit	C	-	-	T	-	up/down	Low
2	Output Stop/lamella adj , A	CH A Stop/lamella adj				1 bit	C	-	-	T	-		Low
3	Upper limit position , A	CH A Upper limit position				1 bit	C	-	W	-	-	enable	Low
4	Lower limit position , A	CH A Lower limit position				1 bit	C	-	W	-	-	enable	Low

Fig.6.8 Communication object “Shutter control”

No.	Function	Object name	Data type	Flags	DPT
1	<b>CH X shutter UP/DOWN</b>	<b>Output shutter UP/DOWN, X</b>	<b>1Bit</b>	<b>C,T</b>	<b>1.008 up/down</b>
This communication object move up/down the shutter by sending command by bus. It will move down if the communication object send a “1” telegram, it will move up if sending a “0”.					
2	<b>CH X Stop/adjust adj</b>	<b>Output Stop/adjust adj, X</b>	<b>1Bit</b>	<b>C,T</b>	<b>1.007 step</b>
It will stop/adjust the shutter by sending command by bus. It will stop/ adjust down if sending a “1” telegram, and it will stop/adjust up if sending “0”.					
3	<b>CH X Upper limit position</b>	<b>Upper limit position, X</b>	<b>1Bit</b>	<b>C,W</b>	<b>1.003 enable</b>
It is used to limit the upper moving. It is limit the upper moving if the object receive a logic value “1”, and negate it if receive “0”.					
4	<b>CH X Lower limit position</b>	<b>Lower limit position, X</b>	<b>1Bit</b>	<b>C,W</b>	<b>1.003 enable</b>
It is used to limit the lower moving. It is limit the lower moving if the object receive a logic value “1”, and negate it if receive “0”.					

Form 8 Communication object “Shutter control”

## 6.9. Communication object “LED X-flashing”

The communication object “LED X–Flashing” will be shown in Fig.6.9.

Number	Name	Object Function	Des	Group	Adr	Length	C	R	W	T	U	Data Type	Priority
28	LED.flashing , A	LED A Flashing				1 bit	C	-	W	-	-	switch	Low
29	LED permanent on , A	LED A Permanent on				1 bit	C	-	W	-	-	switch	Low
30	Send its status , A	LED A Send its status				1 bit	C	-	-	T	-	switch	Low

Fig.6.9 Communication object “LED X-Flashing”

No.	Function	Object name	Data type	Flags	DPT
28	<b>LED X Flashing</b>	<b>LED. Flashing, X</b>	<b>1Bit</b>	<b>C,W</b>	<b>1.001 switch</b>
It is used to control the LED flashing. It will start flashing if receive “1” or “0” telegram (defines by “LED flashing, if”), the flashing time set by parameter. And it will stop LED if receive “0” or “1”.					
29	<b>LED X Permanent on</b>	<b>LED permanent on, X</b>	<b>1Bit</b>	<b>C,W</b>	<b>1.001 switch</b>
It is used to open LED for a long period and its priority is higher than the communication object “LED. Flashing, X”. It will open LED if receive telegram “1”, negate priority and the LED resume the foregoing operation if receive “0”.					
30	<b>LED X Send its status</b>	<b>Send its status, X</b>	<b>1Bit</b>	<b>C,T</b>	<b>1.001 switch</b>
It is visible if “Send status by object “Tele. Status”” selected “Yes”, it is used to send the status of LED. Sending “1” means LED open or flashing, and sending “0” means the LED is stop. The object LED. Flashing, X” will send telegram “1” if sending open flashing requirement every time.					

Form 9 Communication object “LED X-Flashing”

## 6.10. Communication object “LED X-Switch”

The communication object “LED X-Switch” will be shown in Fig.6.10

Number	Name	Object Function	Des	Group	Adc	Length	C	R	W	T	U	Data Type	Priority
28	LED.flashing , A	LED A Flashing				1 bit	C	-	W	-	-	switch	Low
29	LED permanent on , A	LED A Permanent on				1 bit	C	-	W	-	-	switch	Low
30	Send its status , A	LED A Send its status				1 bit	C	-	-	T	-	switch	Low

Fig.6.10 Communication object “LED X-Switch”

No.	Function	Object name	Date type	Flags	DPT
28	<b>LED X Switch</b>	<b>LED. switch, X</b>	<b>1Bit</b>	<b>C,W</b>	<b>1.001 switch</b>
This communication object is used to open LED. It will open LED if the object receive a “1” or “0” telegram (defines by “LED is Switch ON, if”), the open time can be set by parameter; it will stop LED if receive “0” or “1”.					
It is used to open LED for a long period and its priority is higher than the communication object “LED. switch, X”. It will open LED if receive telegram “1”, negate priority and the LED resume the foregoing operation if receive “0”.					
29	<b>LED X Permanent on</b>	<b>LED permanent on, X</b>	<b>1Bit</b>	<b>C,W</b>	<b>1.001 switch</b>
It is visible if “Send status by object “Tele. Status”” selected “Yes”, it is used to send the status of LED. Sending “1” means LED open, and sending “0” means the LED is stop. The object LED. switch, X” will send telegram “1” if sending open requirement every time.					

Form 10 Communication object “LED X-Switch”