

# User manual

## K-BUS KNX Universal Dimming Actuator,

### 1/2/4-Fold\_V1.3

**ADUD-01/02.3**

**ADUD-02/02.3**


**ADUD-04/02.3**



**KNX/EIB Home and Building Control System**

# Attentions

**1. Please keep devices away from strong magnetic field, high temperature, wet environment;**

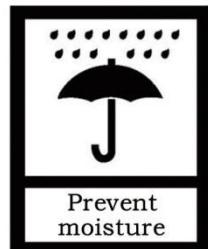

**2. Do not fall the device to the ground or make them get hard impact;**



**3. Do not use wet cloth or volatile reagent to wipe the device;**



**4. Do not disassemble the devices.**

**⚠️ When using this product, please pay attention to analysis of the following troubleshooting.**

NO.	Exception	Possible cause	Solution	Remark
1	Lamp flickers in the low brightness	Lamp driver works unstably at low voltage	Increase the min. brightness appropriately to debounce	
			Use the user defined curve, and set the output value when 1% as the min. brightness that can be stable	
2	There is no obvious differences for LED in the high brightness	The LED has reached the highest brightness after a certain voltage	Decrease the max. brightness appropriately to avoid the invalid control	
			Use the user defined curve, and set the output value when 100% as the control value of LED highest brightness	
3	Flicker or unstable when LED startup	Lamp driver needs an extra startup voltage for stable output	Enable the additional startup characteristic and set its parameter, to avoid the flicker when startup	
4	The min. control value when lamp off is higher than the value when lamp on	Lamp driver needs an extra startup voltage for lamp on normally	Enable the additional startup characteristic and set its parameter, to improved dimming effect	
5	Lamp flickers in dimming	Lamp dose not support dimming	Check the lamp characteristic supports dimming or not	If there is no improvement, it is suggested to replace the lamp or driver
		Incompatible between lamp and driver power supply	Check the lamp is matched to the driver or not	
		Incompatible of load type or dimming curve	Adjust the ETS parameter and check again	
		Brightness changed in dimming is too fast	Extend the dimming time and change the dimming curve	
		Incompatible of dimming curve if only flicker in a partial curve in the middle	Use the user defined curve to adjust the flickering curve	
		If only flicker in the high brightness	Decrease the max. brightness value	

NO.	Exception	Possible cause	Solution	Remark
5	Lamp flickers in dimming	Lamp driver is not good enough, unstable voltage, compatibility issue	Test with an additional incandescent lamp or electronic dummy load in parallel	If there is no improvement, it is suggested to replace the lamp or driver
6	The dimmable range is not 0-100%, not a good experience with user operation	It is the limitation of the operation voltage range and effect of lamp driver	Use the user defined curve, and set the output value when 1% as the min. brightness, set the output value when 100% as the control value of lamp highest brightness	
7	Lamp is still brighter at lower brightness, and have a small dimmable range	Incompatible of dimming curve	Change the curve to one with a lower change value, such as quadratic, cubic, exponential, logarithmic, even use the user defined curve	
		Possible the min. brightness is high	Check and decrease the min. brightness	
8	Switch off abnormally or can not turn on	Operation voltage failure	Check and reconnect	Configure the monitoring the group addresses of abnormal status objects, re-check to confirm there is an alarm telegram or not, if still exist alarm and improve again according the alarm telegram
		The connected lamp has been overloaded and caused the protection of over-temperature	Reduce the load power	
		Output terminal is short-circuit and trigger the protection	Reconnect the wiring and test that there are no problems before power up again	
		The inrush current of lamp driver is too big and trigger the protection of over-load	Reduce the load power	
			Change to trailing edge	
			Change a better lamp or driver	
		Bus voltage failure	Bus diagnostics and confirm to connect normally	
9	LED can not turn off	Incompatible between lamp driver and dimmer	Test with an additional incandescent lamp or electronic dummy load in parallel	If there is no improvement, it is suggested to replace the LED or driver
			Connect an external switch actuator channel with output in series, linking the switch object together to work simultaneously	
			Change a better LED or driver	

## Contents

<b>Chapter 1 Summary -----</b>	<b>1</b>
<b>Chapter 2 Technical Data -----</b>	<b>3</b>
2.1. Load type -----	5
2.2. Operation mode -----	8
<b>Chapter 3 Dimension and Connection Diagram -----</b>	<b>9</b>
3.1. Dimension drawing -----	9
3.2. Connection Diagram -----	10
<b>Chapter 4 Project Design and Programming -----</b>	<b>11</b>
<b>Chapter 5 Parameter setting description in the ETS -----</b>	<b>13</b>
5.1. KNX Secure -----	13
5.2. Parameter window "General" -----	17
5.3. Parameter window "Output setting" -----	20
5.3.1. Parameter window "Channel" -----	22
5.3.2. Parameter window "User defined dimming curve" -----	32
5.3.3. Parameter window "Extension function" -----	35
5.4. Parameter window "Logic" -----	49
5.4.1. Parameter window "AND/OR/XOR" -----	50
5.4.2. Parameter window "Gate forwarding" -----	52
5.4.3. Parameter window "Threshold comparator" -----	54
5.4.4. Parameter window "Format convert" -----	56
5.4.5. Parameter window "Gate function" -----	57
5.4.6. Parameter window "Delay function" -----	59
5.4.7. Parameter window "Staircase lighting" -----	60
<b>Chapter 6 Description of Communication Object -----</b>	<b>62</b>
6.1. "General" Communication Object -----	62
6.2. "Output setting" Communication Object -----	63
6.3. "Logic" Communication Object -----	68
6.3.1. "AND/OR/XOR" Communication Object -----	68
6.3.2. "Gate forwarding" Communication Object -----	69
6.3.3. "Threshold comparator" Communication Object -----	70
6.3.4. "Format convert" Communication Object -----	71
6.3.5. "Gate function" Communication Object -----	73
6.3.6. "Delay function" Communication Object -----	74
6.3.7. "Staircase lighting" Communication Object -----	75

## Chapter 1 Summary

KNX Universal Dimming Actuator,1/2/4-Fold (hereinafter referred to as Dimmer) has 1/2/ 4 output channels, and it can connect with dimmable lamps (such as incandescent lamps, halogen lamps, energy-saving lamps, LED, etc.), and you can dim, preset scene, switch these lamps or other operations via the bus. In addition, as well as KNX Data Secure.

This dimmer is a modular installation device for fast installation in the distribution board on 35 mm mounting rails to DIN EN 60 715, the output adopts screw terminal to realize electrical connection. Bus connection is directly connected via KNX terminal, the additional power supply is not required except KNX bus.

You can build the various scenes with the dimmer, such as watch movie, entertainment, dinner and rest, and so on; its brightness value can be set as any value (1-100%); it is able to set the duration time to dim up or down to the target brightness and the gradual speed to extend the luminaries life and save energy.

The physical address assignment and parameter settings can be used with the engineering tool software ETS (version ETS5 or above) with the .knxprod file.

In use you need to note **the type of connected electrical load, thus reasonable select them and note their technical performance. If the technical performance of the selected load is not consistent with the technical performance of the dimmer, it is possible to affect the dimming effect.**

The manual provides detailed technical information about the dimmer, including installation and programming details, and explains how to use the dimmer in conjunction with examples in actual use.

---

The functions are summarized as followed:





- Switch, Relative dimming/Absolute dimming
- Status feedback of switch, brightness, as well as abnormal status (short-circuit, over-voltage, over- temperature and operating voltage failure)
- Reset behaviour after download/bus failure/bus recovery
- 6 dimming curves, including Linear, Exponential, Cubic, Quadratic, Logarithmic, Root and User defined curves
- Leading edge/Trailing edge phase cut dimming
- Manual operation and Output indication function
- Central control function (Only apply for 2/4-fold)
- Individual or parallel output (Parallel can expand the load capacity, only apply for 2/4-fold)
- Staircase lighting, Flashing switch and Delay switch, as well as Scene, Threshold, Forced operation, Safety operation and Operation hours counter
- Logic function, with AND, OR, XOR, Gate forwarding, Threshold comparator, Format convert, Gate function, Delay function and Staircase lighting
- Support the KNX Data Secure

## Chapter 2 Technical Data

<b>Power Supply</b>	Bus voltage	21-30V DC, via the KNX bus
	Bus current	<6mA/24V, <5.5mA/30V (1 fold)  <7mA/24V, <6mA/30V (2 fold)  <7.5mA/24V, <6.5mA/30V (4 fold)
	Bus consumption	<165mW (1 fold)  <180mW (2 fold)  <195mW (4 fold)
<b>Output</b>	Dimming channel	1/2/4 folds, separate phase connection
	Max. output capacity	300W (per channel, Incandescent/ Halogen/ LED, trailing edge)  Parallel: 2 channels 500W /3 channels 750W/ 4 channel 1000W
	U <sub>n</sub> rated voltage	110~230 V AC (50/60HZ)
	Protection	Short-circuit, Over-voltage, Over-temperature
	Standby loss	Approx. 0.7W
	Power loss	≤2W / per channel
<b>Connection</b>	KNX	Bus connection terminals
	Outputs	Screw terminals
	Wire Range	0.2–2.5mm <sup>2</sup> (1 fold)  0.2–6.0mm <sup>2</sup> (2/4 fold)
<b>Operation and display</b>	Programming button and Red LED	For assigning the physical address

	Green LED flashing	For displaying application layer running normally
	Channel button	For manual switching or dimming
	Channel indication LED	Indicates channel status of the load
	Man./Auto. button	Change the Man./Auto. mode
	Man./Auto. LED	Indicate the Man./Auto. mode status
<b>Temperature</b>	Operation	–5 °C ... + 45 °C
	Storage	–25 °C ... + 55 °C
	Transport	– 25 °C ... + 70 °C
<b>Environment</b>	Humidity	<93%, except dewing
<b>Mounting</b>	On 35mm mounting rail	
<b>Dimension</b>	36 x 90 x 64 mm (1 fold) 72 x 90 x 64 mm (2 fold) 144 x 90 x 64 mm (4 fold)	
<b>Weight</b>	0.2kg (1 fold) 0.3kg (2 fold) 0.5kg (4 fold)	

## 2.1. Load type

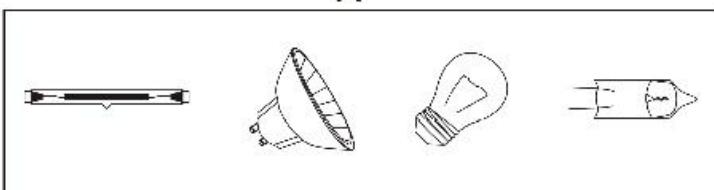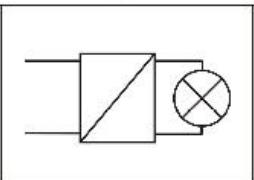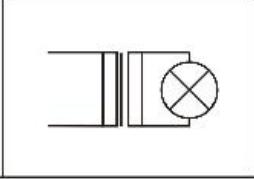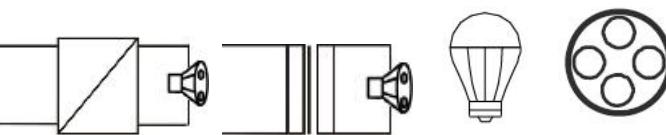Load type	Max. Load capacity (110V)		Max. Load capacity (230V)	
	Leading edge	Trailing edge	Leading edge	Trailing edge
Incandescent lamp	10...150W	10...150W	10...300W	10...300W
HV Halogen lamp	10...150W	10...150W	10...300W	10...300W
LV Halogen lamp with Electronic transformer	10...150W	10...150W	10...300W	10...300W
HV LED	2...30W	2...150W	2...60W	2...300W
LV LED with Electronic transformer	2...40W	2...150W	2...80W	2...300W
LV LED with Constant current driver (Down light, Spotlight)	2...40W	2...150W	2...80W	2...300W
LV LED with Constant voltage driver	2...40W	2...150W	2...80W	2...300W
<b>Resistive load</b>	<b>R</b>			
				
<b>Capacitive load</b>	<b>C</b>			
				
<b>Inductive load</b>	<b>L</b>			
				
<b>LED load</b>				

Individual or parallel outputs can be selected for 2/4-fold dimmer, and the parallel can expand the load capacity. Load type as following:

Load type	Max. Load capacity (110V)					
	Parallel with 2 channels		Parallel with 3 channels		Parallel with 4 channels	
	Leading edge	Trailing edge	Leading edge	Trailing edge	Leading edge	Trailing edge
Incandescent lamp	300W	300W	400W	400W	500W	500W
HV Halogen lamp	300W	300W	400W	400W	500W	500W
LV Halogen lamp with Electronic transformer	300W	300W	400W	400W	500W	500W
HV LED	-	300W	-	400W	-	500W
LV LED with Electronic transformer	-	300W	-	400W	-	500W
LV LED with Constant current driver (Down light Spotlight)	-	300W	-	400W	-	500W
LV LED with Constant voltage driver	-	300W	-	400W	-	500W

Load type	Max. Load capacity (230V)					
	Parallel with 2 channels		Parallel with 3 channels		Parallel with 4 channels	
	Leading edge	Trailing edge	Leading edge	Trailing edge	Leading edge	Trailing edge
Incandescent lamp	500W	500W	750W	750W	1000W	1000W
HV Halogen lamp	500W	500W	750W	750W	1000W	1000W
LV Halogen lamp with Electronic transformer	500W	500W	750W	750W	1000W	1000W
HV LED	-	500W	-	750W	-	1000W
LV LED with Electronic transformer	-	500W	-	750W	-	1000W
LV LED with Constant current driver (Down light,Spotlight)	-	500W	-	750W	-	1000W
LV LED with Constant voltage driver	-	500W	-	750W	-	1000W

**Note:**

**It is not permitted to connect inductive and capacitive loads together at the same output.**

**However, mixing of loads such as capacitive + resistive loads or inductive + resistive loads is allowed to connect, but power reduction needs to be considered. It is more advisable to connect the same type of loads for an output.**


**The max. load capacity depends on the surge current and power loss of the lamp, these types of lamp will cause large heating and high surge current in leading edge mode, especially LED lamp, so it is not recommended to drive LED in leading edge mode, make sure the connected lamp do not trigger over-load or over-heating protection.**

## 2.2. Operation mode

Dimmer system is dimming in leading or trailing edge.


### 1. Dimming in leading edge:

Explanation of the dimming system: turn off dimmer in leading edge and turn on in trailing edge. As shown in the following figure, no voltage input from zero point until dimmer is turned on. It is suitable for inductive loads.

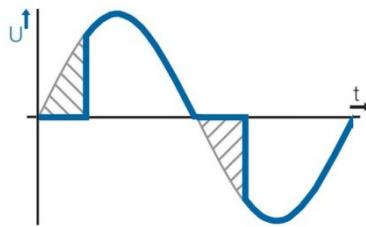


### 2. Dimming in trailing edge:

Explanation of the dimming system: turn on dimmer in leading edge and turn off in trailing edge. As shown in the following figure, dimmer will be turned on at the zero-crossing point, during this moment, the voltage is very low and there is no inrush current to the load. In this way, there is no minimum load requirement, so that allows for better performance of a single lighting or a very small load and extends the life of the lamp, as well as reduce the interference to the power grid. It is suitable for resistive or capacitive loads.

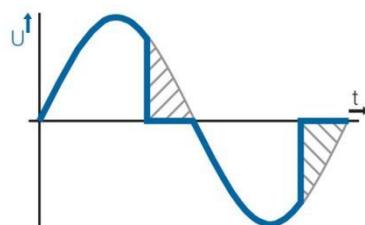


## Chapter 3 Dimension and Connection Diagram


### 3.1. Dimension drawing

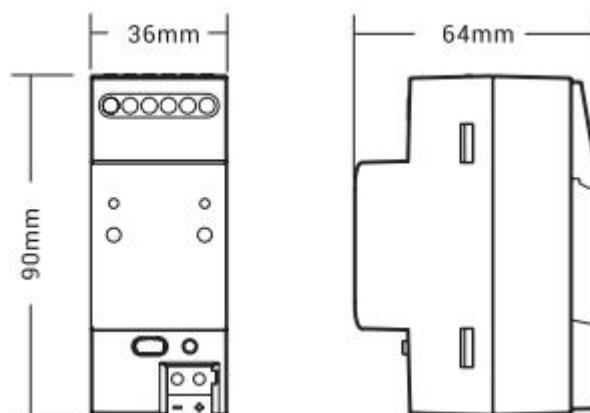

1-Fold

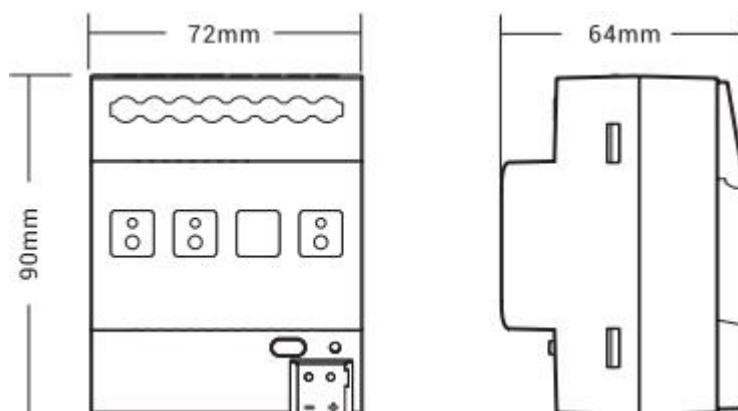


2-Fold

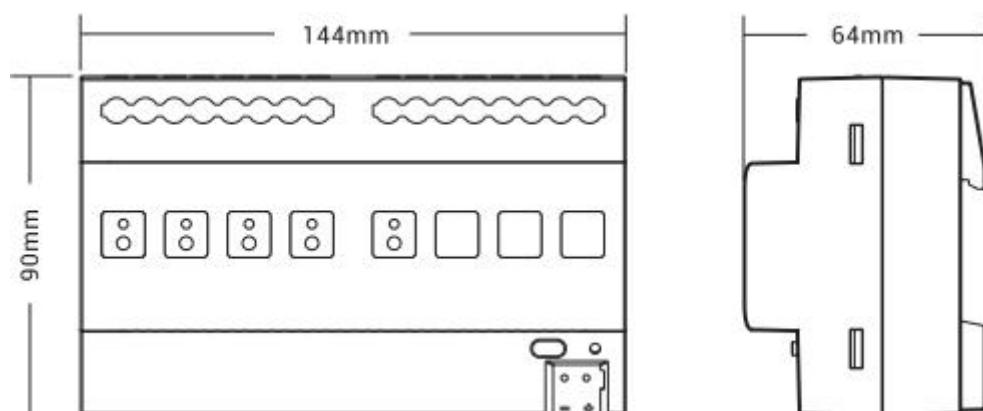

4-Fold

### 3.2. Connection Diagram

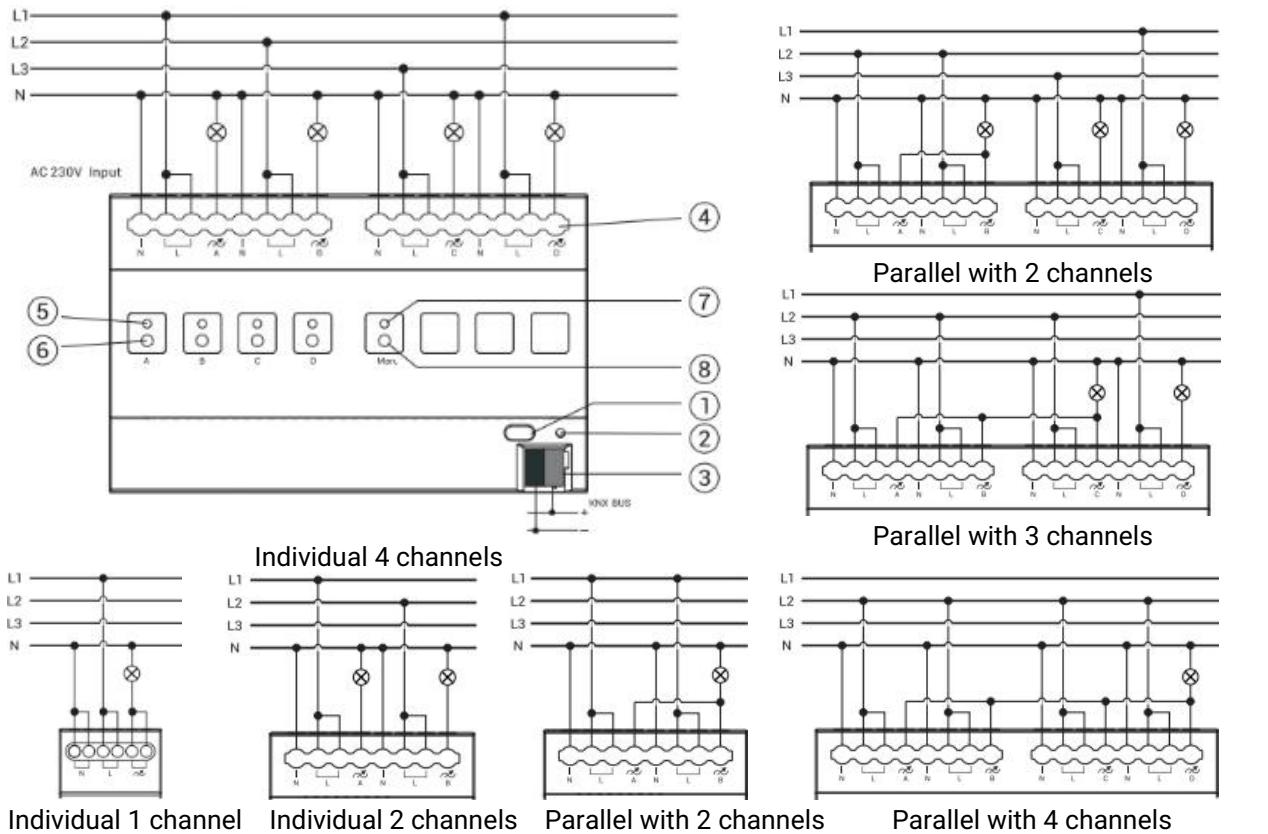

① Programming button

② Programming LED

③ KNX bus connection terminal

④ Input, Output, load terminal

⑤ Channel indication LED: in normal mode, LED off is the lamp off, LED on is the lamp on; in manual mode, flashing slowly is dimming manually. Flashing fast is channel abnormality (Short-circuit, Over-voltage, Over-temperature, Operating voltage failure)

⑥ Channel button: when no ETS configuration, press to switch on/off; in manual mode, short press to switch on/off, long press for dimming up/down, long press then release to stop dimming

⑦⑧ Man./Auto. operation switch button and status indicating LED:

Long press to switch over Man. and Auto. mode, LED on is Man. mode and off is Auto. mode.

**Reset the device to the factory configuration: press the programming button and hold for 4 seconds then release, repeat the operation for 4 times, and the interval between each operation is less than 3 seconds**

## Chapter 4 Project Design and Programming

Application	Maximum of communication objects	Maximum number of group addresses	Maximum number of associations	Secure group addresses
<b>KNX Universal Dimming Actuator, 1-Fold/1.0</b>	<b>237</b>	<b>280</b>	<b>280</b>	<b>160</b>
<b>KNX Universal Dimming Actuator, 2-Fold/1.0</b>	<b>237</b>	<b>280</b>	<b>280</b>	<b>200</b>
<b>KNX Universal Dimming Actuator, 4-Fold/1.0</b>	<b>237</b>	<b>280</b>	<b>280</b>	<b>280</b>

### General function

General function includes device In operation setting, central control (Switch, Dimming), safety function, as well as manual operation and output indication function.

In addition, central control function only applies for 2/4-Fold Dimmers, and it is not supported by 1-Fold Dimmer.

### Output channel

There are 1/2/4 output channels according the product type, support to switch, relative dimming/absolute dimming, feed back the status of switch, brightness and the abnormal status (short-circuit, over-voltage, over- temperature and operating voltage failure), as well as reset behaviour after download/bus failure/bus recovery. Individual or parallel outputs can be selected, and the parallel can expand the load capacity, which only applies for 2/4-fold.

Load types and dimming curves can be independently configured, as well as extension functions including Staircase lighting, Flashing switch, Delay switch, Scene, Threshold, Forced operation, Safety operation and Operation hours counter.

For output function, the definition of function priority: Manual > Forced > Safety > other functions, after exiting higher priority, the next priority action needs to be executed.

---

**Logic function**

Up to support 8 channels of logic, each channel up to support 8 inputs and 1 logic result.

Logic function support functions, including AND, OR, XOR, Gate forwarding, Threshold comparator, Format convert, Gate function, Delay function and Staircase lighting.

## Chapter 5 Parameter setting description in the ETS

### 5.1.KNX Secure

Dimmer is a KNX device that complies with the KNX secure standard. That is, you can run the device in data secure mode.



Fig.5.1 (1) "KNX Secure" parameter window

The device with KNX secure will be displayed notes on ETS, as shown as Fig.5.1(1).

If secure commissioning is activated in ETS project, the following information must be considered during device debugging:



❖ It is essential to assign a project password as soon as a KNX Secure device is imported into a project. This will protect the project against unauthorized access.

**The password must be kept in a safe place – access to the project is not possible without it (not even the KNX Association or device manufacturer will be able to access it)!**

**Without the project password, the commissioning key will not be able to be imported.**

❖ A commissioning key is required when commissioning a KNX Secure device (first download). This key (FDSK = Factory Default Setup Key) is included on a sticker on the side of the device, and it must be imported into the ETS prior to the first download:

❖ On the first download of the device, a window pops up in the ETS to prompt the user to enter the key, as shown in Fig.5.1 (2) below.

The certificate can also be read from the device using a QR scanner (recommended).

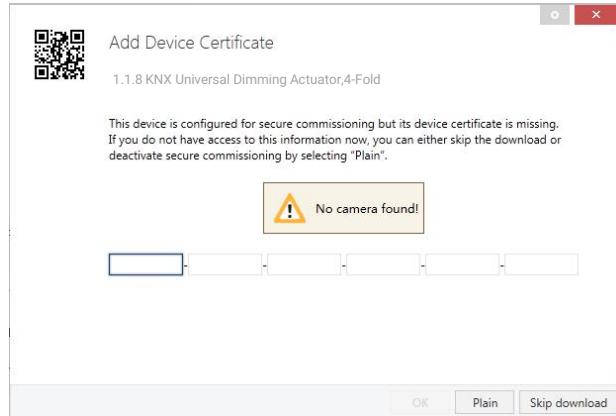


Fig.5.1(2) Add Device Certificate window

✧ Alternatively, the certificates of all Secure devices can be entered in the ETS beforehand.

This is done on the "Security" tab on the project overview page, as shown in Fig.5.1(3) below.

The certificates can be also added to the selected device in the project, as shown in Fig.5.1(4).

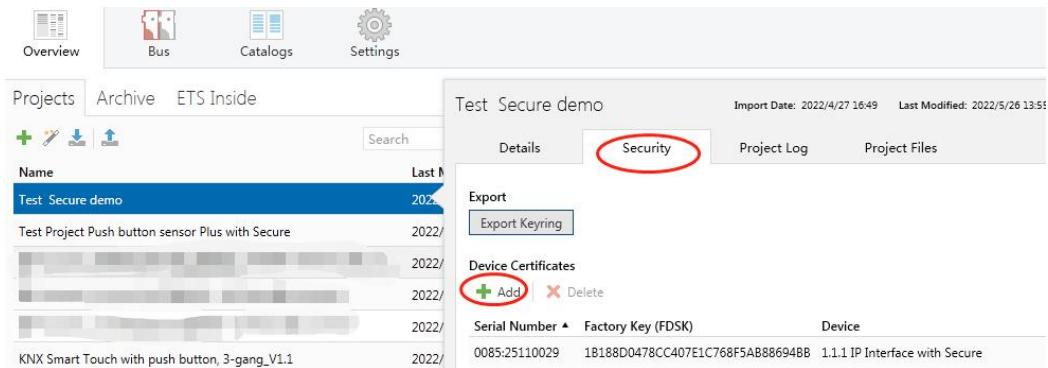


Fig.5.1(3) Add Device Certificate

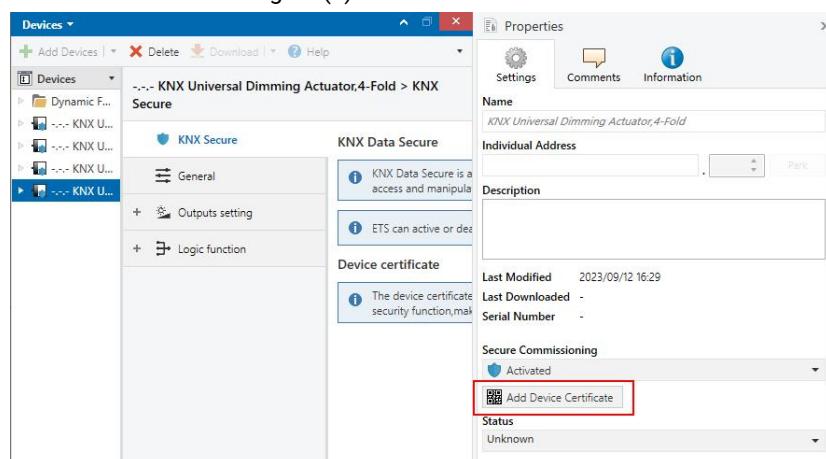


Fig.5.1(4) Add Device Certificate

✧ There is a FDSK sticker on the device, which is used for viewing FDSK number.

**Without the FDSK, it will no longer be possible to operate the device in KNX Secure mode after a reset.**

The FDSK is required only for initial commissioning. After entering the initial FDSK, the ETS will

assign a new key, as shown in Fig.5.1(5) below.

The FDSK will be required again only if the device was reset to its factory settings (e.g. If the device is to be used in a different ETS project).

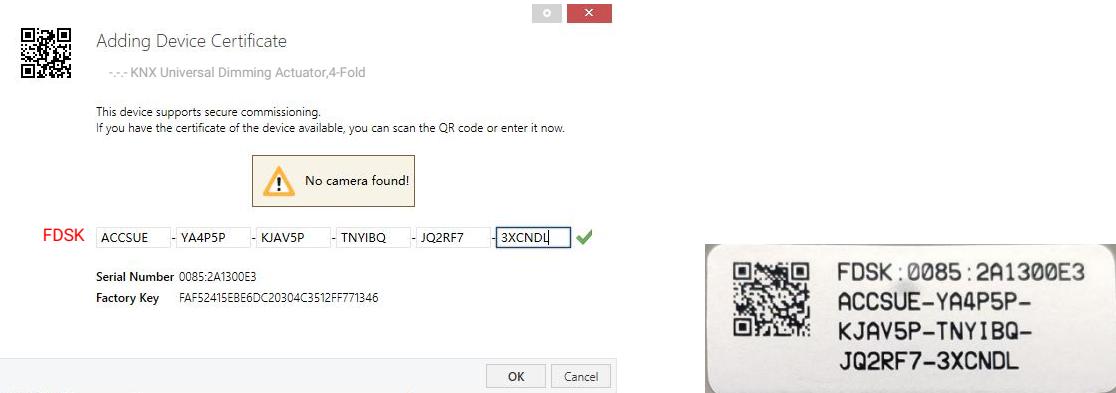


Fig.5.1(5)

Example:

If this application in the project needs to be tried with another device, it is no longer the original device. When the application is downloaded to a new device, the following prompt will appear on the left of Fig.5.1(6), click yes, the Add Device Certificate window will appear, then enter the initial FDSK of the new device, and you need to reset the device to the factory settings (it is not required if the device is still factory default; If it has been used, it will be required to reset, otherwise the following error message will appear on the right of Fig.5.1(6)), and then the device can be successfully downloaded again.

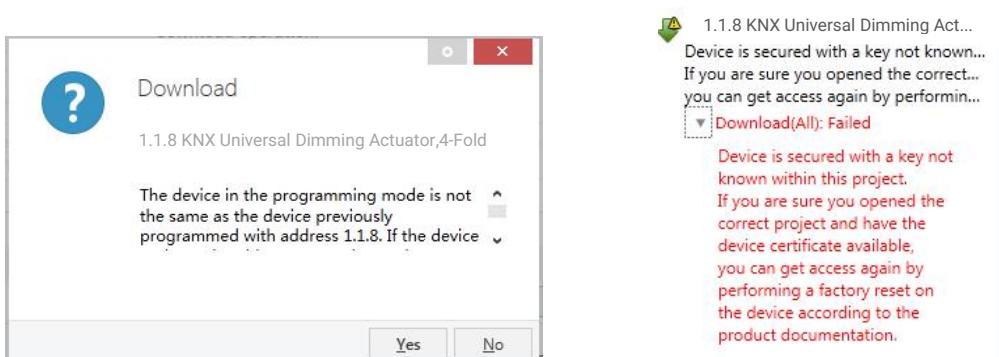


Fig.5.1(6) Example

Whether the device is replaced in the same project, or the device is replaced in a different project, the processing is similar: **Reset the device to the factory settings, then reassign the FDSK.**

After the device is downloaded successfully, the label Add Device Certificate turns gray, indicating that the key for this device has been assigned successfully, as shown in Fig.5.1(7) below.

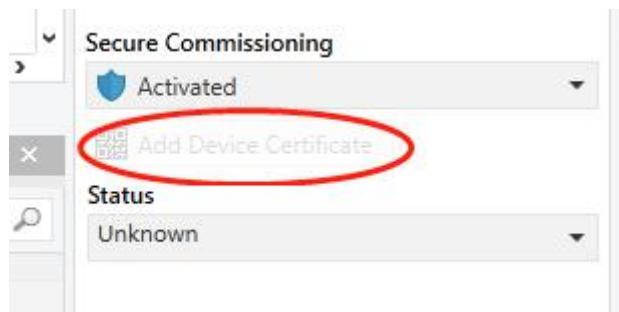


Fig.5.1(7)

ETS generates and manages keys:

Keys and passwords can be exported as needed to the use of security keys outside of the associated ETS projects. As shown in Fig.5.1(8) below, the file extension is .knxkeys.

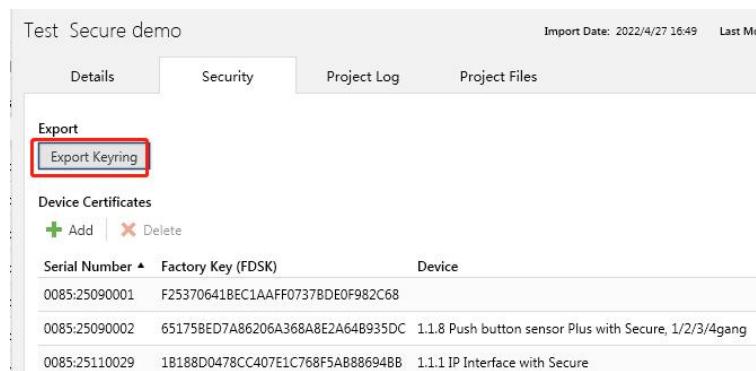


Fig.5.1(8)

**Note: Any USB interface used for programming a KNX Secure device must support "long frames".**

**Otherwise ETS will report a download failure information, as shown below.**

## 5.2.Parameter window "General"

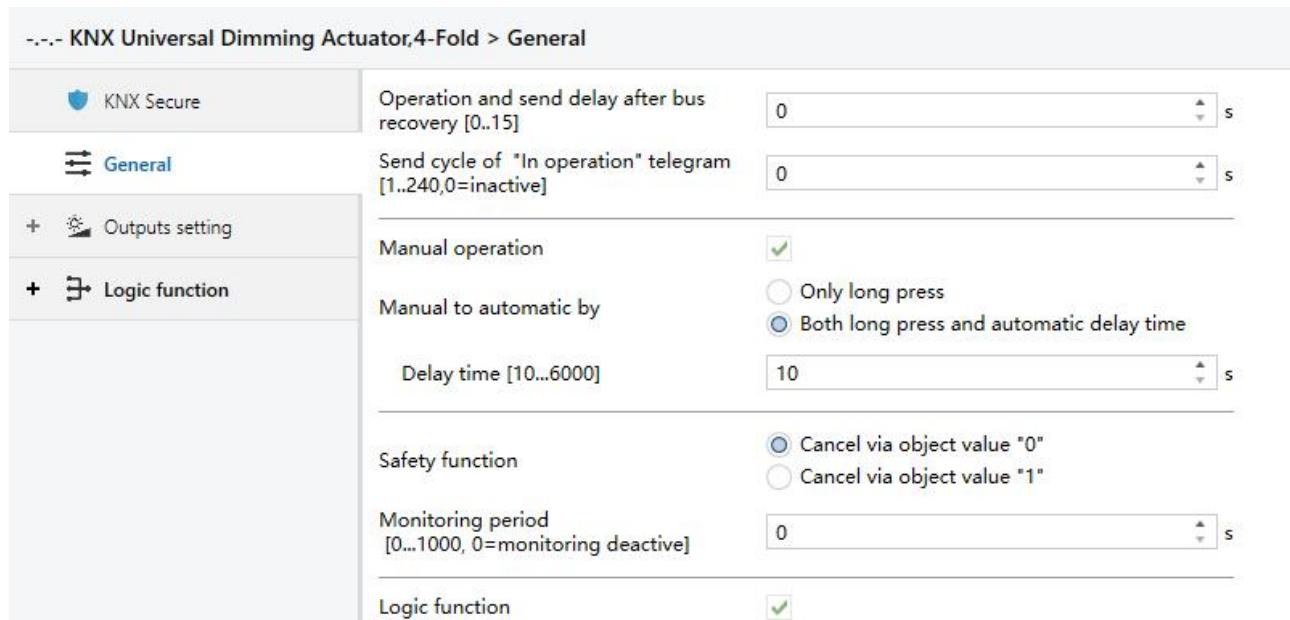


Fig.5.2 "General setting" parameter window

### Parameter "Operation and Send delay after bus recovery [0..15]"

This parameter is for setting the delay time to send to bus after the device bus recovery.

Options: **0..15 s**

The setting dose not contain the device initialization time, and bus telegrams received during delay time will be recorded.

### Parameter "Send cycle of "In operation" telegram [1..240,0=inactive]"

This parameter is for setting the time interval when cyclically send telegrams through the bus to indicate this device in normal operation. When set to "0", the object "In operation" will not send a telegram. If the setting is not "0", the object "In operation" will send a telegram according to the setting period time with logic "1" to the bus. Options: **0...240 s, 0=inactive**

As to reduce the bus load as much as possible, the maximum time interval should be selected according to actual application requirement.

### Parameter "Manual operation"

This parameter is for setting whether to enable manual operation, which is mainly convenient for engineers to debug or check the lamps, when enabled, you can manually switch and dim each output channel.

---

The definition of function priority: Manual > Forced > Safety > other functions, after exiting higher priority, the next priority action needs to be executed. When during manual operation, the telegrams from bus will be ignored and not executed, but the statuses of low priority (Forced/Safety) will be recorded in the background, and they will be executed after exiting manual operation.

Manual operation is enabled by default in case of no database; after download, enable manual or not depends on the parameter.

Theses two parameters as follow are visible when enabled:

**Parameter "Manual to automatic by"**

This parameter is for setting the behaviour when exit manual operation. Options:

**Only long press**

**Both long press and automatic delay time**

**Parameter "Delay time [10...6000]"**

This parameter is visible when "Both long press and automatic delay time" is selected by previous parameter. Set the delay time for exiting manual operation automatically, and timing from the last button operation. Options: **10....6000 s**

**Parameter "Safety function"**

This parameter is for setting the object value of safety status cancellation for whole device, while receiving the reversed value is to enter safety status. Options:

**Cancel via object value "0"**

**Cancel via object value "1"**

When enter safety status, execute the configured behaviour of the channel if its safety function is enabled, more details are defined in the channel.

**Parameter "Monitoring period [0...1000, 0=monitoring deactive]"**

This parameter is for setting the period to monitor the telegram of safety object.

Options: **0...1000 s**

If the period is greater than 0, the telegram to cancel safety status was not received during the monitoring period, enter the safety status. Exit this status and reset the monitoring period when a cancellation telegram is received. It is also possible to enter the safety status directly by receiving the

---

reversed value defined by the previous parameter.

If the period is set as 0, enter the safety status directly by receiving the reversed value defined by the previous parameter, and receiving cancellation value is to exit the status.

**Parameter 'Logic function'**

Setting page of logic function interface is visible after this parameter enabled.

### 5.3.Parameter window "Output setting"

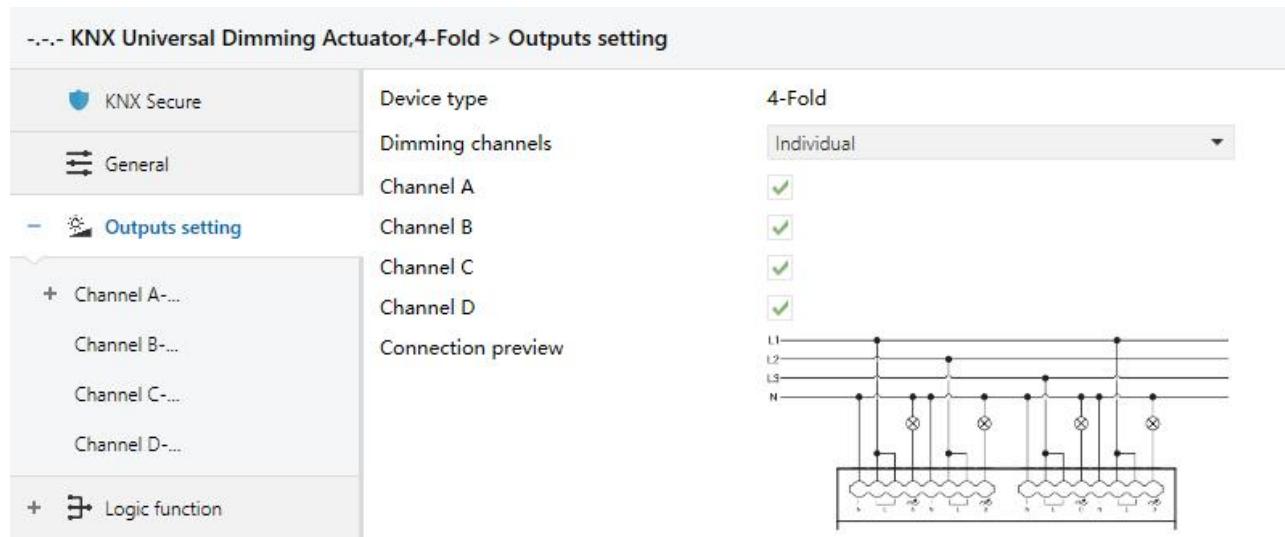


Fig.5.3 "Output setting" parameter window

#### Parameter "Device type"

This parameter is for displaying the device type, it is according to the product:

**1-Fold**

**2-Fold**

**4-Fold**

Display corresponding connection preview below the parameter.

#### Parameter "Dimming channels"

This parameter is visible when device type is 2-Fold or 4-Fold. Set the dimming channels. For the dimmer with multiple channels, individual or parallel channels can be configured. Parallel channels can expand the load capacity.

When 2-Fold, options:

**Individual**

**Parallel (A+B)**

When 4-Fold, options:

**Individual**

**Parallel (A+B) and Parallel (C+D)**

**Parallel (A+B) and Individual (C, D)**

**Individual (A, B) and Parallel (C+D)**

**Parallel (A+B+C) and Individual (D)**

**Individual (A) and Parallel (B+C+D)**

**Parallel (A+B+C+D)**

**Parameter 'Channel A/B/C/D/A+B/...'**

For the dimmer with multiple channels, these parameters are visible depends on the previous parameter. Set whether to enable dimming channel, and corresponding window is visible when enabled.

**For 1-Fold Dimmer, only display Channel A.**

Configuration of individual channel is as same as the parallel channel, the following is an example of Channel A.

**5.3.1.Parameter window "Channel"**

--- KNX Universal Dimming Actuator,4-Fold > Outputs setting > Channel A---

KNX Secure	Description (max 30char.)	<input type="text"/>
General	Load type	LED (trailing edge)
Outputs setting	Dimming curve	User defined
Channel A...	General dimming time (from min. to max.)	4 <input type="button" value="s"/>
	Minimum brightness value	1 <input type="button" value="%"/>
	Maximum brightness value	100 <input type="button" value="%"/>
	Switching on value	<input type="radio"/> Preset brightness value <input checked="" type="radio"/> Last brightness value
	Dimming mode selection for switching on	<input type="radio"/> Jumping <input checked="" type="radio"/> Dimming
	Dimming mode selection for switching off	<input checked="" type="radio"/> Jumping <input type="radio"/> Dimming
	Dimming time for relative dimming	4 <input type="button" value="s"/>
	Dimming time for absolute dimming	4 <input type="button" value="s"/>
	Allow switch off via relative dimming	<input checked="" type="checkbox"/>
	Absolute dimming value lower than the minimum value	0%=0%, otherwise=Minimum brightness value
Channel B...	Additional startup characteristic when the lamp is off	<input checked="" type="checkbox"/>
	Startup brightness value	50 <input type="button" value="%"/>
	Behavior for dimming up	Dim up based on the startup brightness
	Behavior when the switch or dimming value is lower than startup value	Jump to startup brightness
Logic function	Reset behavior	
	Behavior after download	Switching off
	Behavior after bus failure	No reaction
	Behavior after bus recovery	Brightness before bus failure
	Short-circuit detect for operating supply or device reset if output is off	<input checked="" type="checkbox"/>
<b>!</b> Note: the short-circuit detect may occur a briefly flashing for some lamps		

Fig.5.3.1(1) "Channel" parameter window

Forced function	Central control	
Safety function	Switching	<input checked="" type="checkbox"/>
Operating hours counter	Relative dimming	<input checked="" type="checkbox"/>
Channel B...	Absolute dimming	<input checked="" type="checkbox"/>
Channel C...	Status feedback	
Channel D...	Switching	<input type="radio"/> Respond after read only <input checked="" type="radio"/> Respond after change
+ Logic function	Brightness value	<input type="radio"/> Respond after read only <input checked="" type="radio"/> Respond after change
	Short-circuit	<input type="radio"/> Respond after read only <input checked="" type="radio"/> Respond after change
	Over-voltage	<input type="radio"/> Respond after read only <input checked="" type="radio"/> Respond after change
	Over-temperature	<input type="radio"/> Respond after read only <input checked="" type="radio"/> Respond after change
	Operating voltage failure	<input type="radio"/> Respond after read only <input checked="" type="radio"/> Respond after change
Extension function		
Scene function	Switching	<input checked="" type="checkbox"/>
Time function	Relative dimming	<input checked="" type="checkbox"/>
Threshold function	Absolute dimming	<input checked="" type="checkbox"/>
Forced function	Switching	<input checked="" type="checkbox"/>
Safety function	Relative dimming	<input checked="" type="checkbox"/>
Operating hours counter	Absolute dimming	<input checked="" type="checkbox"/>

Fig.5.3.1(2) "Channel" parameter window

Parameter "Description (max 30char.)"

This parameter is for setting the name description of the channel.

### Parameter "Load type"

This parameter is for setting the load type of the channel. Options: `None`, `Constant`, `Random`, `File`.

### Resistive & Capacitive load (trailing edge)







### Inductive load (leading edge)

### LED (trailing edge)

## LED (leading edge)

### Parameter "Dimming curve"

This parameter is for setting dimming cure of the channel, display corresponding preview figure below the parameter. Options:

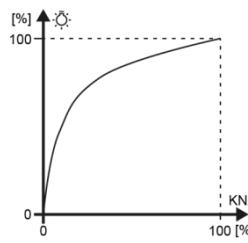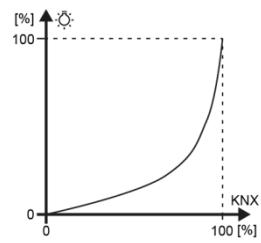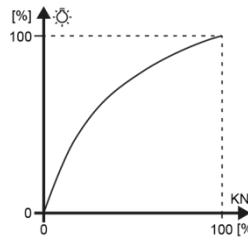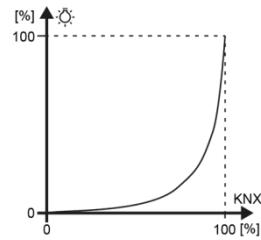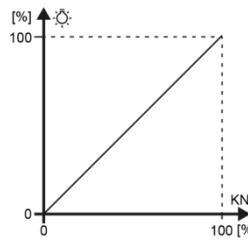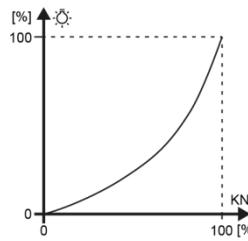**Logarithmic function**

**Cubic function**

**Root function**

**Exponential function**

**Linear function**

**User defined**
**Quadratic function**


When "User defined" is selected, user can custom a dimming curve, more detail please refer to chapter 5.3.2.

**Parameter 'General dimming time' (from min. to max.)**

This parameter is for setting the time for the whole dimming process, which refers to the time from minimum to maximum value. Suppose the time is set as 6s, the min. Value is 0% and the max. is 100%, if the brightness is only dimmed from 0% to 50%, then the dimming time only takes 3s.

Options: 2...255 s

If the channel function has not specified a dimming time, use the time set by this parameter, functions such as switch on/off lamps, forced, safety, staircase lighting, threshold, etc.

**Parameter "Minimum brightness value"****Parameter "Maximum brightness value"**

These parameters are for setting minimum and maximum brightness values individually, to limit the output range of dimming brightness, which allows the lamps to work in a better brightness range depending on the environment or lamp compatibility.

This range is not allowed to be exceeded in any status of lamps on, including threshold, forced, safety functions, etc. Output as min. value when the brightness is lower than the min., and output as max. value when it is higher than the max.

Options of the min. value: **1...49 %**; Options of the max. value: **50...100 %**

**Parameter "Switching on value"**

This parameter is for setting the brightness when the lamp is switched on. Options:

**Preset brightness value****Last brightness value**

Last brightness value: When the device is powered on for the first time or restarted after downloading, the default value for "Switch ON" is 50%, meaning the brightness value is 50%.

**Parameter "Preset brightness value"**

This parameter is visible when previous parameter is selected "Preset brightness value". Set the preset brightness value. Options: **1...100 %**

**Parameter "Dimming mode selection for switching on"**

This parameter is for setting the dimming mode when the lamp is switched on. Options:

**Jumping****Dimming**

Jumping: switch on immediately and directly to the target brightness.

Dimming: switch on with dimming to the target brightness and use the General dimming time.

**Parameter "Dimming mode selection for switching off"**

This parameter is for setting the dimming mode when the lamp is switched off. Options:

**Jumping****Dimming**

Jumping: switch off immediately.

Dimming: switch off with dimming and use the General dimming time.

**Parameter "Dimming time for relative dimming"**

This parameter is for setting the time for the whole relative dimming process. Options: **2...255 s**

**Parameter "Dimming time for absolute dimming"**

This parameter is for setting the time for the whole absolute dimming process. Options: **2...255 s**

**Parameter "Allow switch off via relative dimming"**

This parameter is for setting whether allow to switch lamp off via relative dimming. When disabled, it can only be adjusted downward to the minimum brightness value; while enabled, switch the lamp off directly when the brightness is dimming to less than the minimum brightness value.

**Parameter "Absolute dimming value lower than the minimum value"**

This parameter is for setting the behaviour when absolute dimming value lower than the minimum value, **it only affects the object "Absolute dimming"**. Options:

**0%=0%, otherwise=Minimum brightness value**

**To be the minimum brightness value**

**To be 0%**

0%=0%, otherwise=Minimum brightness value%: output as min. value when the value is lower than the min., but the value is 0% is to switch the lamp off.

To be the minimum brightness value: output as min. value when the value is lower than the min., even if the value is 0%.

To be 0%: switch the lamp off directly when the value is lower than the min.

**Parameter "Additional startup characteristic when the lamp is off"**

This parameter is for setting whether the lamp needs the startup characteristic additionally when the lamp is off. Some lamps require a higher voltage to start up when switched off.

Following four parameters are visible when parameter is enabled.

**Parameter "Startup brightness value"**

This parameter is for setting the brightness value of lamp startup. Options: **5..90 %**

**Note: the brightness must not exceed the max. and min. value, otherwise it cannot be set in the ETS.**

**Parameter "Behavior for dimming up"**

This parameter is for setting the behavior for dimming up when the lamp is off. Options:

**Ignore the telegram**

**Like normal**

**Dim up based on the startup brightness**

Ignore the telegram: feed back an off telegram immediately to synchronize the status with the control device.

Like normal: dimming up and output normally.

Dim up based on the startup brightness: use the startup brightness as a based point, and dimming up from this brightness.

**Parameter "Behavior when the switch or dimming value is lower than startup value"**

This parameter is for setting the behavior when the target brightness is lower than startup value, and the lamp is off. Options:

**Ignore the telegram**

**Like normal**

**Jump to startup brightness**

**Jump to startup then delay to target**

Ignore the telegram: feed back a off telegram immediately to synchronize the status with the control device.

Like normal: dimming and output normally.

Jump to startup brightness: jump to the startup brightness immediately and feed back the new brightness to the bus.

Jump to startup then delay to target: jump to startup brightness firstly then dimming to the target brightness after the delay has elapsed.

If the target brightness is higher than startup value, dimming from the startup value to the target brightness directly, it is only applied to receive the telegrams of objects "Switching" and "Absolute dimming".

**Parameter "Delay time after reach startup"**

This parameter is visible when previous parameter is selected "Jump to startup then delay to

target". Set the delay time for dimming to target brightness after reaching the startup value. Options:

**50ms**

**80ms**

**100ms**

...

**2s**

**4s**

**5s**

## Reset behavior

### Parameter "Behavior after download"

This parameter is for setting the behaviour of channel after download. Options:

**Switching off**

**Preset brightness value**

**Brightness before bus failure**

Preset brightness value: dimming to a setting brightness, defined by next parameter.

Brightness before bus failure: recover to the brightness value stored when the bus failure.

### Parameter "Preset brightness value"

This parameter is visible when "Preset brightness value" is selected. Set the preset brightness value. Options: 1...100 %

### Parameter "Behavior after bus failure"

This parameter is for setting the behaviour of channel after bus failure. Options:

**Switching off**

**Preset brightness value**

**No reaction**

Preset brightness value: dimming to a setting brightness, defined by next parameter.

### Parameter "Preset brightness value"

This parameter is visible when "Preset brightness value" is selected. Set the preset brightness

value. Options: 1...100 %

**Parameter "Behavior after bus recovery"**

This parameter is for setting the behaviour of channel after bus recovery.

**Switching off**

**Preset brightness value**

**Brightness before bus failure**

Preset brightness value: dimming to a setting brightness, defined by next parameter.

Brightness before bus failure: recover to the brightness value stored when the bus failure.

**Parameter "Preset brightness value"**

This parameter is visible when "Preset brightness value" is selected. Set the preset brightness value. Options: 1...100 %

**Parameter "Short-circuit detect for operating supply or device reset if output is off"**

This parameter is for setting whether detect short-circuit for operating supply or device reset if output is off.

When disabled, a short-circuit may be detected only when turn on the lamp until exceed the threshold of short-circuit detection.

When enabled, every time a operating supply or device voltage recovery, it needs to detect a short-circuit firstly if initially the lamp is off or the brightness is lower than the threshold of short-circuit detection, but it is not required to detect if the brightness is higher than the threshold of short-circuit detection. Download database and restart, if the detection has been normal before the download, there is no need to repeat the detection, otherwise it is still necessary to perform a detection.



Note: the short-circuit detect may occur a briefly flashing for some lamps

**Central control**

Central control is used to control the switching and dimming of all channels, each channel can be configured to support central control or not. When receive the telegram of central control from bus, control the outputs centrally for the supported channels.

**Note: central control function only applies for 2/4-Fold Dimmers, and it is not supported by 1-Fold Dimmer.**

**Parameter "Switching"**

This parameter is for setting whether control switch centrally.

**Parameter "Relative dimming"**

This parameter is for setting whether control relative dimming centrally.

**Parameter "Absolute dimming"**

This parameter is for setting whether control absolute dimming centrally.

**Status feedback****Parameter "Switching/Brightness value/Short-circuit/Over-voltage/Over-temperature/Operating voltage failure"**

These parameters are for setting the way to feed back the status of switch, brightness and abnormal status. The abnormal status including short-circuit, over-voltage, over-temperature, operating voltage failure. Options:

**Respond after read only**

**Respond after change**

Handling of abnormal status:

Trigger hardware protection when channel load terminal is short-circuited, and feed back the status to bus. It will disconnect the output when in protection. If it is the first time a short-circuit has been detected since power on, disconnect the output first then wait a 1 minute to output the current control value again; but if there is still a short-circuit, disconnect the output permanently, and cannot be used unless the device is restarted.

Trigger hardware protection when the operated voltage is higher than the rated voltage, and feed back the status to bus. It will disconnect the output when in protection.

When the measured internal temperature exceeds 90°C for 10s, then will trigger over-temperature protection and send the status to bus. The brightness will down to 20% or to the minimum value under the protection status. After the temperature is reduced to below 70°C, output normally if a new control telegram is received.

Operation voltage is failure when no valid over-zero signal is detected, and feed back the status to

---

bus. When in voltage failure, it can not feed back control status and no drive signal if receive the control telegram, need to power supply normally and has actual output value can feed back the current status of the lamp.

## Extension function

**Parameter "Scene function"**

Setting page of scene function interface is visible after this parameter enabled.

**Parameter "Time function"**

Setting page of time function interface is visible after this parameter enabled.

**Parameter "Threshold function"**

Setting page of threshold function interface is visible after this parameter enabled.

**Parameter "Forced function"**

Setting page of forced function interface is visible after this parameter enabled.

**Parameter "Safety function"**

Setting page of safety function interface is visible after this parameter enabled.

**Parameter "Operating hours counter"**

Setting page of operating hours counter interface is visible after this parameter enabled.

### 5.3.2.Parameter window "User defined dimming curve"

-.- KNX Universal Dimming Actuator,4-Fold > Outputs setting > Channel A-... > User defined dimming curve

KNX Secure	Number of curve coordinate points	4
General		
Outputs setting		
Channel A-...		
User defined dimming c...		
Scene function	Coordinate point 1	
Time function	KNX dimming value	1 %
Threshold function	Output value	1 %
Forced function	Coordinate point 2	
Safety function	KNX dimming value	10 %
Operating hours counter	Output value	10 %
Channel B-...	Coordinate point 3	
Channel C-...	KNX dimming value	20 %
Channel D-...	Output value	20 %
	Coordinate point 4	
	KNX dimming value	100 %
	Output value	100 %

Fig.5.3.2 "User defined dimming curve" parameter window

**Parameter "Number of curve coordinate points"**

This parameter is for setting the number of curve coordinate points. Options: **2...16**

**Coordinate point x (x=1~16)**

**Parameter "KNX dimming value"**

This parameter is for setting KNX dimming value of the curve. Options: **1..100%**

For user defined dimming curve, the first and the last one points are fixed to 1% and 100%.

**Note: the previous KNX dimming value must be small than next one, otherwise it can not be set on the ETS:**

### Coordinate point 2

KNX dimming value

15

%

Output value

10

%

### Coordinate point 3

KNX dimming value

14

%

Output value

20

%

### Parameter 'Output value'

This parameter is for setting the output value corresponding to the KNX dimming value.

Options: 1..100%

**Note: the previous output value must be small than next one, otherwise it can not be set on the**

**ETS:**

### Coordinate point 2

KNX dimming value

10

%

Output value

26

%

### Coordinate point 3

KNX dimming value

20

%

Output value


20

%

Custom curves with different number of coordinate points, as shown as following:


#### Example 1

(3 coordinate points)

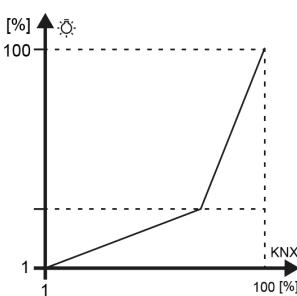


#### Example 2

(4 coordinate points)

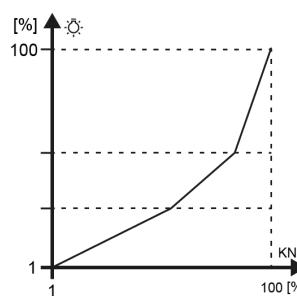


#### Example 3

(5 coordinate points)

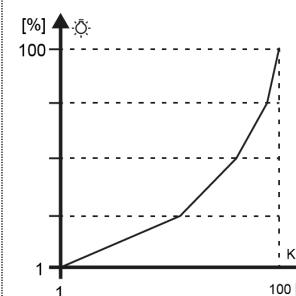

#### Example 4

(6 coordinate points)

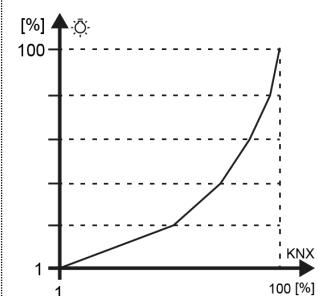

---

Commissioning steps of User defined dimming curve:

Step 1: use the linear function curve at first to determine the adjustable range, then obtain the minimum and maximum adjustable brightness values of the applied lamp with absolute dimming;

Step 2: when testing in step 1, you can experience the brightness changes with relative dimming, then checking the number of curve areas and coordinate points;

Step 3: the minimum brightness value is the point of knx value 1%, the maximum brightness value is the point of knx value 100%;

Step 4: add the coordinate points of the middle section according to the planning area;

Step 5: download and commission, according to the experience of dimming process, there may also be slight adjustment of the coordinate points or increase the configuration areas, and even need to adjust the dimming time, until achieve the best results for user satisfaction.

### 5.3.3.Parameter window "Extension function"

Parameter windows are visible according to the enabling of the extension function parameters.

#### 5.3.3.1.Parameter window "Scene function"

-... KNX Universal Dimming Actuator,4-Fold > Outputs setting > Channel A-... > Scene function						
KNX Secure		Overwrite scene stored values during download <input checked="" type="checkbox"/>				
General		Scenes	Description	Scene NO.	Brightness	Dimming
KNX Secure		Scene 1		1	50	4
General		Scene 2		2	50	4
Outputs setting		Scene 3		3	50	4
Channel A-...		Scene 4		7	50	4
User defined dimming cur...		Scene 5		8	50	4
Scene function		Scene 6		0	NA	NA
Time function		Scene 7		0	NA	NA
Threshold function		Scene 8		0	NA	NA
Forced function		Scene 9		0	NA	NA
Safety function		Scene 10		0	NA	NA
Operating hours counter		Scene 11		0	NA	NA
Channel B-...		Scene 12		0	NA	NA
Channel C-...		Scene 13		0	NA	NA
Channel D-...		Scene 14		0	NA	NA
Logic function		Scene 15		0	NA	NA
		Scene 16		0	NA	NA

Fig.5.3.3.1 "Scene function" parameter window

Scene function can work with the control panel or other software to execute the setting scene and output the specified brightness.

#### Parameter "Overwrite scene stored values during download"

This parameter is for setting whether to override the scene stored values during application download. If select to overwrite, follow the parameter setting, otherwise for the brightness value corresponding to the scene number that has saved the modified value has executed, the last saved value will remain; for the modified brightness has not executed, still use the value set by parameter.

**Scene x (x=1~16)****Parameter "Description"**

This parameter is for setting the name description of the corresponding scene, up to 30 characters.

**Parameter "Scene NO."**

This parameter is for setting the triggered scene number, up to 16 scenes. Options: **0...64**

When scene number is 0, it is invalid, and the brightness and dimming time cannot be set, as shown as following:

Scenes	Description	Scene NO.	Brightness	Dimming
Scene 1		0	NA	NA

When scene numbers are greater than 0, if there are same scene numbers, display following error message:



Exist multiple scene NO. assignment conflict, the valid scene NO. can't be the same, please correct, otherwise only the first one of those conflict scene is valid and others will be ignored

**Parameter "Brightness"**

This parameter is for setting the brightness of the corresponding scene. Options: **0...100 %**

**Parameter "Dimming"**

This parameter is for setting the dimming time of the corresponding scene. Options: **2...255 s**

**5.3.3.2.Parameter window "Time function"**

-... KNX Universal Dimming Actuator,4-Fold > Outputs setting > Channel A-... > Time function

KNX Secure	Time function	Delay switch
General	Delay for switch on	00:00:10 hh:mm:ss
Outputs setting	Delay for switch off	00:00:10 hh:mm:ss

Delay switch

-... KNX Universal Dimming Actuator,4-Fold > Outputs setting > Channel A-... > Time function

KNX Secure	Time function	Flashing switch
General	On time for flashing	00:00:10 hh:mm:ss
Outputs setting	Off time for flashing	00:00:10 hh:mm:ss
Channel A-...	Number of flashing cycles [0..10000,0=no limit]	0
User defined dimming cur...	Status after flashing	Unchange
Scene function	Control mode of flashing	Start with "1", Stop with "0"

Flash switch

-... KNX Universal Dimming Actuator,4-Fold > Outputs setting > Channel A-... > Time function

KNX Secure	Time function	Staircase lighting
General	Duration time	00:02:00 hh:mm:ss
Outputs setting	Time extension	Retriggerable
Channel A-...	Control mode of staircase lighting	Start with "1", Off with "0"
User defined dimming cur...	Prewarning before staircase time end	Dim-down the dimming value and via object
Scene function	Warning time	00:00:30 hh:mm:ss
Time function	Value of dimming down	20 %
Threshold function	Duration time can be changed via bus	<input checked="" type="checkbox"/>
Forced function	<b>!</b> The duration time receiving from bus must be longer than the warning time, otherwise it will be ignored	

Staircase lighting

Fig.5.3.3.2 "Time function" parameter window

Different configurations of time function can be used for different application.

**Parameter "Time function"**

This parameter is for setting the time function, its brightness is depending on the value of switch on/off. Options:

**Delay switch**

**Flashing switch****Staircase lighting**

Delay switch: delay a period time to switch on/off, dimming mode is Jumping.

Flashing switch: flashing to switch on/off, dimming mode is Jumping.

Staircase lighting: dimming mode is Jumping, use the General dimming time.

**Note: time function will be interrupted directly after entering safety or forced operation.**

Parameter "Delay for switch on"

Parameter "Delay for switch off"

These two parameters are visible when "Delay switch" is selected. Set the delay time for switch on/off, execute the on/off telegram received from bus after the delay has elapsed. During delay time, receive the same telegram again, the delay time is reset.

Options: **00:00:00 ...23h:59min:59s**

Parameter "On time for flashing"

Parameter "Off time for flashing"

These two parameters are visible when "Flashing switch" is selected. Set the duration time of flashing for switch on/off.

Options: **00:00:05s ...23h:59min:59s**

Parameter "Number of flashing cycles [0...10000,0=no limit]"

This parameter is visible when "Flashing switch" is selected. Set the number of flashing cycles, a cycle includes an on and an off. 0 means the cycles is no limited. Options: **0...10000**

Parameter "Status after flashing"

This parameter is visible when "Flashing switch" is selected. Set the status after flashing. Options:

**Switching off**

**Switching on**

**Unchange**

**Note: there is a possibility of an extra half cycle of action when "Switching on" or "Switching off" is selected.**

**Parameter "Control mode of flashing"**

This parameter is visible when "Flashing switch" is selected. Set the control mode of flashing.

Options:

**Start with "1", Stop with "0"**

**Start with "0", Stop with "1"**

**Start with "0/1", can not be stopped**

Start with "1", Stop with "0": it will start flashing with value "1" and stop flashing with "0", action to the end status when stopped, which is defined via previous parameter.

Start with "0", Stop with "1": it will start flashing with value "0" and stop flashing with "1", action to the end status when stopped, which is defined via previous parameter.

Start with "0/1", can not be stopped: it will start flashing with value "0" or "1", and can not stop until the number of the flashing cycles is exhausted, or stop via the interruption from other operation.

**Parameter "Duration time"**

This parameter is visible when "Staircase lighting" is selected. Set the duration time of staircase lighting switch on, and switch off automatically after the time has elapsed.

Options: **00:00:05s ...23h:59min:59s**

**Parameter "Time extension"**

This parameter is visible when "Staircase lighting" is selected. Set whether to retrigger or extend the duration time when receive an on telegram during the time. Options:

**Not retriggerable**

**Retriggerable**

**Extend duration time**

Not retriggerable: ignore the telegram, switch off automatically after the time has elapsed.

Retriggerable: retrigger the duration time when receive an on telegram during the time.

Extend duration time: add up a duration time to the remaining time when receive an on telegram during the duration time. For example the duration time is set as 60s, but it is still has 40s left, and receive an on telegram at the moment, then the new duration time is 40s+60s =100s, and the staircase

light will be turned off automatically after the 100s is elapsed. If receive multiple on telegrams continuously, the duration time will continue to add up until the maximum time is reached.

**Parameter "Control mode of staircase lighting"**

This parameter is visible when "Staircase lighting" is selected. Set the control mode of staircase lighting. Options:

**Start with "1", Stop with "0"**

**Start with "1", no reaction with "0"**

**Start with "0/1", can not be stopped**

**Start with "1", Off with "0"**

Start with "1", Stop with "0": it will switch on the staircase light with the value "1" and stop the timing with "0", keep the current lamps status until it is changed by other operations.

Start with "1", no reaction with "0": it will switch on the staircase lights with the value "1" and no reaction with "0".

Start with "0/1", can not be stopped: it will switch on the staircase lights with the value "1" or "0", and can not stop until the duration time is exhausted, or stop via the interruption from other operation.

Start with "1", Off with "0": it will switch on the staircase lights with the value "1" and switch off with "0"

**Parameter "Prewarning before staircase time end"**

This parameter is visible when "Staircase lighting" is selected. Set whether to prewarn before staircase light time end, and set the prewarning mode. User can be noticed before the staircase light time is about to finish. Options:

**No**

**No, but dim-down the dimming value after end**

**Via object**

**Via flashing switching on-off**

**Via flashing switching on-off and object**

**Dim-down the dimming value**

**Dim-down the dimming value and via object**

No: no prewarn, and switch off automatically after the time has elapsed.

No, but dim-down the dimming value after end: no prewarn, but dim down the brightness after the time has elapsed.

Via object: prewarn via the object.

Via flashing switching on-off: prewarn via a short flashing, 1s to switch on and 1s to switch off, dimming mode is Jumping.

Via flashing switching on-off and object: prewarn, refer to the explanation of the previous options.

Dim-down the dimming value: prewarn via dimming down the brightness.

Dim-down the dimming value and via object: prewarn, refer to the explanation of the previous options.

**Parameter "Warning time"**

This parameter is visible when the selection does not contain "No...". Set the time of prewarning.

Options: **00:00:05s...00h:59min:59s**

**Note: the warning time must be less than the duration time, or it cannot be set on the ETS.**

**Note: the warning time is contained in the startup time of staircase lighting. If switch off before the warning time, there is no prewarning.**

**Parameter "Value of dimming down"**

This parameter is visible when the selection contains "Dim-down the dimming value....". Set the brightness value of dimming down at the end of the staircase lighting. Options: **1...100 %**

**Parameter "Duration time can be changed via bus"**

This parameter is visible when "Staircase lighting" is selected. Set whether the duration time can be changed via bus. Store the modified value when bus failure, recovery to the value set by parameter after download.



The duration time receiving from bus must be longer than the warning time, otherwise it will be ignored

### 5.3.3.3. Parameter window "Threshold function"

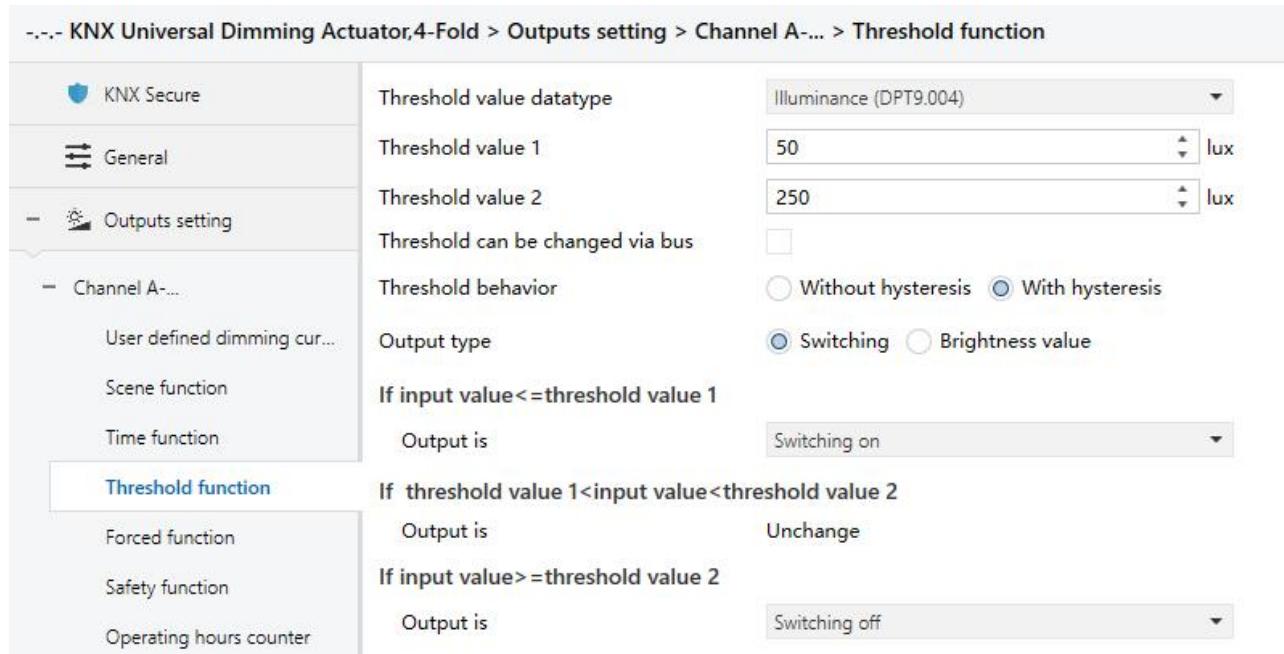


Fig.5.3.3.3 "Threshold function" parameter window

Switch on/off or dimming the brightness according to telegram from the bus and threshold set on the ETS. **Note: the brightness of threshold function is depending on the value of switch on/off.**

#### Parameter "Threshold value datatype"

This parameter is for setting the threshold value datatype. Options:

**1byte unsigned value (DPT5.010)**

**1byte percentage (DPT5.001)**

**Temperature (DPT9.001)**

**Illuminance (DPT9.004)**

#### Parameter "Threshold value 1"

#### Parameter "Threshold value 2"

These two parameters are for setting the threshold value 1 and 2. Options are display according to the threshold value datatype.

When 1byte unsigned value, options: **0...255**

When 1byte percentage, options: **0...100 %**

When Temperature, options: **-20...95 °C**

When Illuminance, options: **0...65535 lux**

**Note: the threshold 1 must be less than threshold 2, or they cannot be set on the ETS, as shown as following:**

Threshold value 1

200

Threshold value 2

200

**Parameter "Threshold value can be changed via bus"**

This parameter is for setting whether the threshold 1 and 2 can be changed via bus.

Store the modified value when bus failure, recovery to the value set by parameter after download.

**Parameter "Threshold behavior"**

This parameter is for setting whether the threshold 1 and 2 with hysteresis. Options:

**Without hysteresis**

**With hysteresis**

The hysteresis can avoid the unnecessary behaviour caused by the input value if the value is between two threshold values.

**Parameter "Output type"**

This parameter is for setting the output type after threshold comparison. Options:

**Switching**

**Brightness value**

**If input value<=threshold value 1**

Set the output value when input value is less than or equal to the threshold 1. Following parameter and its options are displayed according to the output type.

**Parameter "Output is"**

This parameter is visible when "Switching" is selected. Options:

**Switching off**

**Switching on**

**Unchange**

**Parameter "Dimming value is"**

This parameter is visible when "Brightness value" is selected. Options: **0...100 %**

## If threshold value 1<input value threshold value 2 |


Set the output value when input value is between the threshold 1 and 2. Output parameter and its options are displayed according to the output type, as above explanation.

Note: when with hysteresis, the output is only **Unchange**


## If input value>=threshold value 2

Set the output value when input value is greater than the threshold 2. Output parameter and its options are displayed according to the output type, as above explanation.

### 5.3.3.4.Parameter window "Forced function"

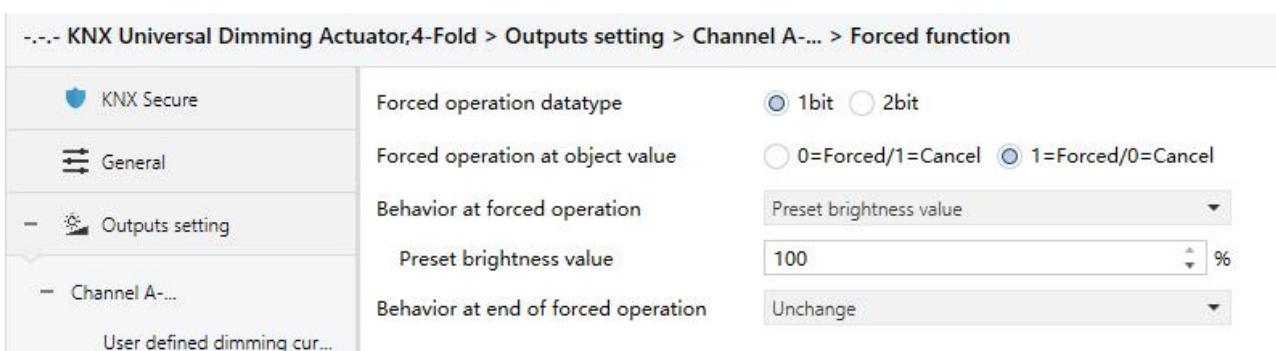

1bit

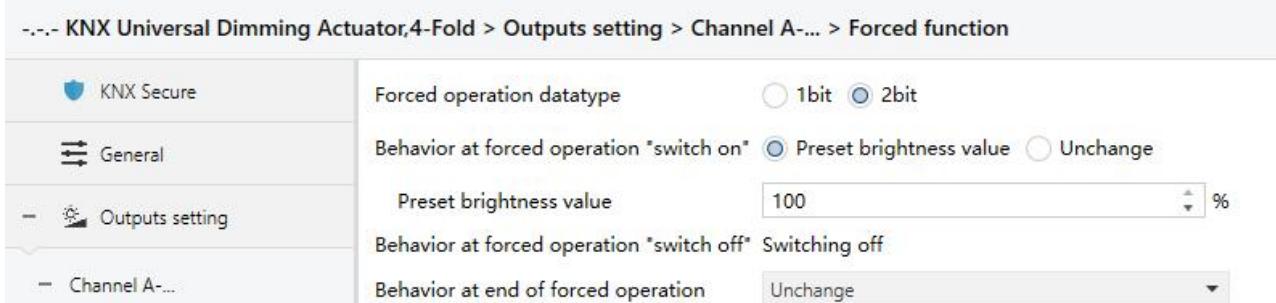

2bit

Fig.5.3.3.4 "Forced function" parameter window

The lamp can be forcibly fixed at a brightness in some special situations. Forced function has the highest priority. Ignore the normal control telegram received from bus when during in forced or safety operation.

## Parameter "Forced operation datatype"

This parameter is for setting the datatype of forced operation. Options:

**1bit****2bit****Parameter "Forced operation at object value"**

This parameter is visible when 1bit. Set the object value for activating or canceling the forced.

Options:

**0=Forced/1=Cancel****1=Forced/0=Cancel****Parameter "Behavior at forced operation"**

This parameter is visible when 1bit. Set behavior at forced operation. Options:

**Switching off****Preset brightness value****Unchange****Parameter "Preset brightness value"**

This parameter is visible when "Preset brightness value" is selected. Set the preset brightness value. Options: **1...100 %**

**Parameter "Behavior at forced operation "switch on"**

This parameter is visible when 2bit. Set the behavior at forced operation "switch on" when receive telegram value 3 from 2bit. Options:

**Preset brightness value****Unchange****Parameter "Preset brightness value"**

This parameter is visible when "Preset brightness value" is selected. Set the preset brightness value. Options: **1...100 %**

**Parameter "Behavior at forced operation "switch off"**

This parameter is visible when 2bit. Set the behavior at forced operation "switch off" when receive telegram value 2 from 2bit. Option is only **Switching off**

**Parameter "Behavior at end of forced operation"**

This parameter is for setting the behavior at end of forced operation. **Note: the telegram values**

0/1 from 2bit are used to cancel forced operation. Options:

**Switching off**

**Preset brightness value**

**Unchange**

1. When receive a telegram to end forced operation, it is valid if the forced operation has been activated before, otherwise ignore the telegram.

2. When a telegram to end forced operation is valid, if there is another priority (safety operation) active in the device, execute this action of this priority; otherwise, ignore the end telegram and execute the action of forced operation.

#### **Parameter "Preset brightness value"**

This parameter is visible when "Preset brightness value" is selected. Set the preset brightness value. Options: **1...100 %**

#### **5.3.3.5.Parameter window "Safety function"**

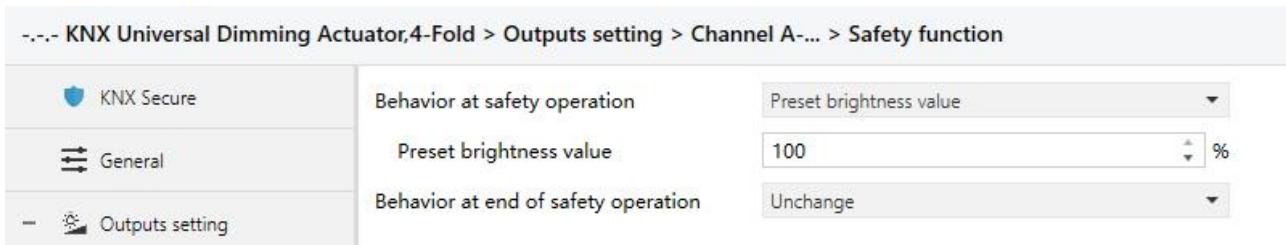


Fig.5.3.3.5 "Safety function" parameter window

Safety function can work with external sensor and perform dimming behaviour in some emergency situations. Safety function has the second highest priority and only lower than forced function.

**Parameter "Behavior at safety operation"**

**Parameter "Behavior at end of safety operation"**

These two parameters are for setting the behavior for activating or canceling the safety operation. Options:

**Switching off**

**Preset brightness value**

**Unchange**

**Parameter "Preset brightness value"**

This parameter is visible when "Preset brightness value" is selected. Set the preset brightness value. Options: **1...100 %**

1. When receive an end telegram, it is valid if the safety operation has been activated before, otherwise ignore the telegram.

2. When the end telegram is valid, if there is another priority (forced operation) active in the device, execute this action of this priority; otherwise, ignore the cancel telegram and execute the action of safety operation.

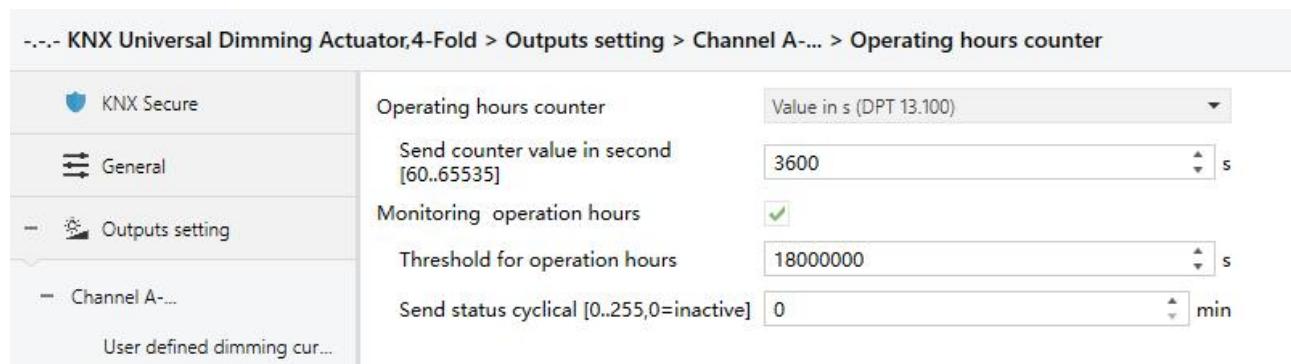
**5.3.3.6.Parameter window "Operating hours counter"**


Fig.5.3.3.6 "Operating hours counter" parameter window

**Parameter "Operating hours counter"**

This parameter is for setting whether activate the function of operating hours counter, and setting the datatype. It is used to count the time that the lamp has been switched on. If brightness is greater than "0", start timing. It can be used as a seconds counter or an hours counter. Options:

**Inactive**

**Value in s (DPT 13.100)**

**Value in h (DPT 7.007)**

These following parameters are visible when parameter is activated:

**Parameter "Send counter value in second [0..65535]"**

This parameter is visible when "Value in s (DPT 13.100)" is selected. Set the cycle for sending

counter value. If set to 3600s, that is send a counter value to the bus every 3600s.

Options: **60...65535 s**

**Parameter "Send counter value in hours [0..255]"**

This parameter is visible when "Value in h (DPT 7.007)" is selected. Set the cycle for sending counter value. If set to 1h, that is send a counter value to the bus every hours. Options: **1...255 h**

**Parameter "Monitoring operation hours"**

This parameter is for setting whether to enable the monitoring of operating hours counter, which is used to monitor the time that the lamp has been switched on. When the time is closed to the end of the lamp's life, send a telegram to remind the user to change a new lamp.

Following parameters are visible when the monitoring is enabled:

**Parameter "Threshold for operation hours"**

This parameter is for setting the threshold for operation hours, usually refer to the lamp's life. The range of options depends on the datatype.


When "Value in s (DPT 13.100)", options: **100...2147483647 s**

When "Value in h (DPT 7.007)", options: **1...65535 h**

**Parameter "Send status cyclical [0..255,0=inactive]"**

This parameter is for setting the cycle of sending status, 0 is no send. Send on change is enabled by default. Options: **0...255 min**

## 5.4. Parameter window "Logic"

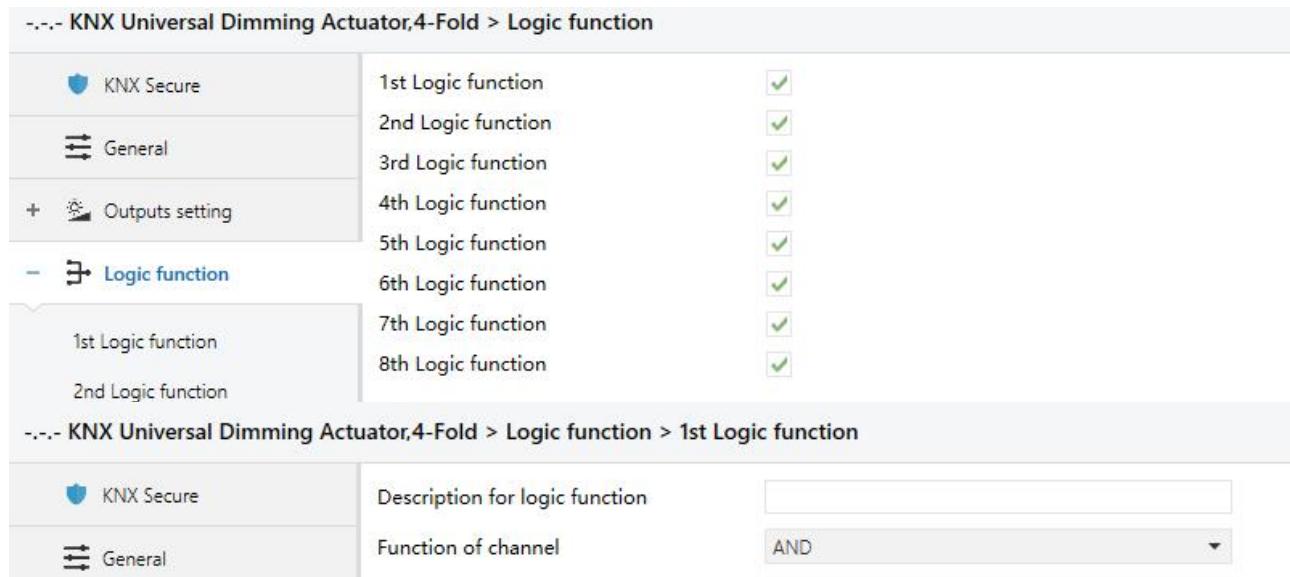

### Parameter "1st/2nd/3rd... Logic function"

This parameter is for setting the setting interface of logic function, display corresponding logic function page when select. Up to enable 8 logic functions.

### Parameter "Description for logic function"

This parameter is for setting the name description for logic function, up to input 30 characters.

### Parameter "Function of channel"

This parameter is for setting function of the channel. Options:

**AND**

**OR**

**XOR**

**Gate forwarding**

**Threshold comparator**

**Format convert**

**Gate function**

**Delay function**

**Staircase lighting**

AND/OR/XOR: as the parameter is similar to the communication object (only the logic algorithm is different), the following parameters taking one options for example.

#### 5.4.1.Parameter window "AND/OR/XOR"

-.- KNX Universal Dimming Actuator,4-Fold > Logic function > 1st Logic function

KNX Secure	Description for logic function	<input type="text"/>
General	Function of channel	AND
+ Outputs setting	Input a	Disconnected
- Logic function	Default value	<input checked="" type="radio"/> 0 <input type="radio"/> 1
<b>1st Logic function</b>	Input b	Disconnected
2nd Logic function	Default value	<input checked="" type="radio"/> 0 <input type="radio"/> 1
3rd Logic function	Input c	Disconnected
4th Logic function	Default value	<input checked="" type="radio"/> 0 <input type="radio"/> 1
5th Logic function	Input d	Disconnected
6th Logic function	Default value	<input checked="" type="radio"/> 0 <input type="radio"/> 1
7th Logic function	Input e	Disconnected
8th Logic function	Default value	<input checked="" type="radio"/> 0 <input type="radio"/> 1
	Input f	Disconnected
	Default value	<input checked="" type="radio"/> 0 <input type="radio"/> 1
	Input g	Disconnected
	Default value	<input checked="" type="radio"/> 0 <input type="radio"/> 1
	Input h	Disconnected
	Default value	<input checked="" type="radio"/> 0 <input type="radio"/> 1
	Result is inverted	<input checked="" type="radio"/> No <input type="radio"/> Yes
	Read input object value after bus voltage recovery	<input checked="" type="radio"/> No <input type="radio"/> Yes
	Output send when	<input checked="" type="radio"/> Receiving a new telegram <input type="radio"/> Every change of output object
	Send delay time: Base	<input type="text"/> None
	Factor: 1..255	<input type="text"/> 1

Fig.5.4.1 "AND/OR/XOR" parameter window

Parameter "Input a/b/c/d/e/f/g/h"

This parameter is for setting whether input x to calculate, whether to normally calculate or inverted calculate.Options:

**Disconnected**

**Normal**

**Inverted**

Disconnected: not to calculate;

Normal: to directly calculate the input value;

Inverted: invert the input value, then to calculate. **Note: not to invert the initiate value.**

#### Parameter "Default value"

This parameter is for setting the initial value of logic input x. Options:

**0**

**1**

#### Parameter "Result is inverted"

This parameter is for setting whether to invert the logic calculation result. Options:

**No**

**Yes**

No: output directly;

Yes: output after inverting.

#### Parameter "Read input object value after voltage recovery"

This parameter is for setting whether to send the read request to the logic input object after device voltage recovery or finish programming. Options:

**No**

**Yes**

#### Parameter "Output send when"

This parameter is for setting the condition of sending logic result. Options:

**Receiving a new telegram**

**Every change of output object**

Receiving a new telegram: every time the object received a new input value will the logic result be sent to the bus;

Every change of output object: only when logic result has changed will it be sent to the bus.

**Tip: when in the first time to logic calculate, the logic result will be sent even if it has no change.**

#### Parameter "Send delay time"

**Base:** **None**

**0.1s**

**1s**
**...**
**10s**
**25s**
**Factor: 1..255**

This parameter is for setting the delay time for sending the logic calculation result to the bus. Delay time = Base × Factor, if option "None" of Base is selected, then there is no delay.

#### 5.4.2.Parameter window "Gate forwarding"

... KNX Universal Dimming Actuator,4-Fold > Logic function > 1st Logic function

<input checked="" type="checkbox"/> KNX Secure	Description for logic function	
<input checked="" type="checkbox"/> General	Function of channel	Gate forwarding
+  Outputs setting	Object type of Input/Output	1bit
-  Logic function	Default scene NO. of Gate after startup [1~64,0=inactive]	0
<b>1st Logic function</b>	1->Gate trigger scene NO. is [1~64,0=inactive]	0
2nd Logic function	Input A send on	Output A
3rd Logic function	Input B send on	Output B
4th Logic function	Input C send on	Output C
5th Logic function	Input D send on	Output D
6th Logic function	2->Gate trigger scene NO. is [1~64,0=inactive]	0
7th Logic function	Input A send on	Output A
8th Logic function	Input B send on	Output B
	Input C send on	Output C
	Input D send on	Output D

Fig.5.4.2 "Gate forwarding" parameter window

#### Parameter "Object type of Input/Output"

This parameter is for setting the object type of input/output. Options:

**1bit**
**4bit**
**1byte**

**Parameter "Default scene NO. of Gate after startup [1~64,0=inactive]"**

This parameter is for setting the initial scene where logical gate forwarding can be performed by default after device starts, which needs to be configured in the parameters. Options: **1..64, 0=inactive**

**Note: gate scene is recommended to be selected before operating, or it will enable the initiate scene by default.**

**Parameter "z>>gate-trigger scene NO. [1~64,0=inactive]" (z=1~8)**

This parameter is for setting scene number of logic gate forwarding. Up to 8 trigger scene number can be set for each logic. Options: **1..64, 0=inactive**

**— Parameter "Input A/B/C/D send on"**

This parameter is for setting the output of input X (X=A/B/C/D) after gate forwarding. Options:

**Disable**

**Output A**

**Output B**

...

**Output B,C,D**

According to the options, one input can be forwarded into one or more outputs, the output value is the same as the input value.

#### 5.4.3.Parameter window "Threshold comparator"

-.- KNX Universal Dimming Actuator,4-Fold > Logic function > 1st Logic function

KNX Secure	Description for logic function	
General	Function of channel	Threshold comparator
+ Outputs setting	Threshold value data type	1byte unsigned value (DPT5.010)
- Logic function	Threshold value	0
1st Logic function	If Object value < Threshold value	Do not send telegram
2nd Logic function	If Object value = Threshold value	Do not send telegram
3rd Logic function	If Object value != Threshold value	Do not send telegram
4th Logic function	If Object value > Threshold value	Do not send telegram
5th Logic function	If Object value <= Threshold value	Do not send telegram
6th Logic function	If Object value >= Threshold value	Do not send telegram
7th Logic function	Output send when	<input checked="" type="radio"/> Receiving a new telegram <input type="radio"/> Every change of output object
8th Logic function	Send delay time: Base	None
	Factor: 1..255	1

Fig.5.4.3 "Threshold comparator" parameter window

**Parameter "Threshold value data type"**

This parameter is for setting the threshold value data type. Options:

<b>4bit value (DPT3.007)</b>	<b>4byte unsigned value[0..4294967295]</b>
<b>1byte unsigned value (DPT5.010)</b>	<b>Ext. temperature value (DPT 9.001)</b>
<b>2byte unsigned value (DPT7.001)</b>	<b>Ext. humidity value (DPT 9.007)</b>
<b>2byte signed value (DPT8.x)</b>	<b>Illuminance value (DPT 9.004)</b>
<b>2byte float value (DPT9.x)</b>	

**Parameter "Threshold value"**

This parameter is for setting threshold value, the range depends on the data type. Options:

**4bit value (DPT3.007) 0..15 / 1byte unsigned value (DPT5.010) 0..255 /**  
**2byte unsigned value (DPT7.001) 0..65535 / 2byte signed value (DPT8.x) -32768..32767 /**  
**2byte float value (DPT9.x) -670760..670760 / 4byte unsigned value[0..4294967295]**  
**0..4294967295 / Ext. temperature value (DPT 9.001) -20..95°C / Ext. humidity value (DPT 9.007)**  
**0..100% / Illuminance value (DPT 9.004) 0..65535lux**

**Parameter "Hysteresis threshold value"**

This parameter is visible when object datatype is selected "2byte float value (DPT9.x)", "Illuminance value (DPT 9.004)". Set the hysteresis threshold value. Options: **0..500**

**Parameter "If Object value=Threshold value"**

**Parameter "If Object value!=Threshold value"**

**Parameter "If Object value>Threshold value"**

**Parameter "If Object value<=Threshold value"**

**Parameter "If Object value>=Threshold value"**

This parameter is for setting the logic result value that should be sent when threshold value Less than, equal to, not equal to, greater than, less than or equal to the setting value. When object datatype is selected "2byte float value (DPT9.x)", can only set the object value less than or greater than threshold value. Options:

**Do not send telegram**

**Send value "0"**

**Send value "1"**

Do not send telegram: not consider to select this option;

Send value "0"/"1": when condition is satisfied, send telegram 0 or1.

If there is a conflict between the setting options between parameters, the base on the value that should be sent when reach the final parameter condition. **For example: parameter "If Object value=Threshold value" is set to be "Send value "0" "; parameter "If Object value<=Threshold value" is set to be "Send value "1" "; when object value is equal to the threshold value, then the logic result will send "1".**

**Parameter "Output send when"**

This parameter is for setting the condition of sending logic result. Options:

**Receiving a new telegram**

**Every change of output object**

Receiving a new telegram: every time the object received a new input value will the logic result be sent to the bus;

Every change of output object: only when logic result has changed will it be sent to the bus.

**Tip: when in the first time to logic algorithm, the logic result will be sent even if it has no change.**

**Parameter "Send delay time"**

**Base:** **None**

**0.1s**

**1s**

...

**10s**

**25s**

**Factor:** **1..255**

This parameter is for setting the delay time for sending the logic algorithm result to the bus. Delay

time = Base x Factor, if option "None" of Base is selected, then there is no delay.

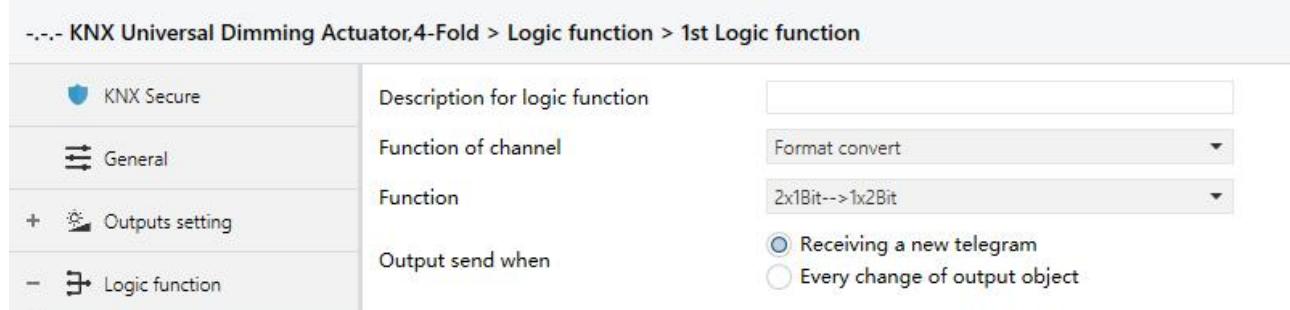
**5.4.4.Parameter window "Format convert"**

Fig.5.4.4 "Format convert" parameter window

**Parameter "Function"**

This parameter is for setting the format convert type. Options:

**2x1bit-->1x2bit**

**8x1bit-->1x1byte**

**1x1byte-->1x2byte**

**2x1byte-->1x2byte**

**2x2byte-->1x4byte**

**1x1byte-->8x1bit**

**1x2byte-->2x1byte**

**1x4byte-->2x2byte****1x3byte-->3x1byte****3x1byte-->1x3byte****Parameter "Output send when"**

This parameter is for setting the condition of sending logic result. Options:

**Receiving a new telegram****Every change of output object**

Receiving a new telegram: every time the object received a new input value will the logic result be sent to the bus;

Every change of output object: only when logic result has changed will it be sent to the bus.

**Tip: when in the first time to logic algorithm, the logic result will be sent even if it has no change.**

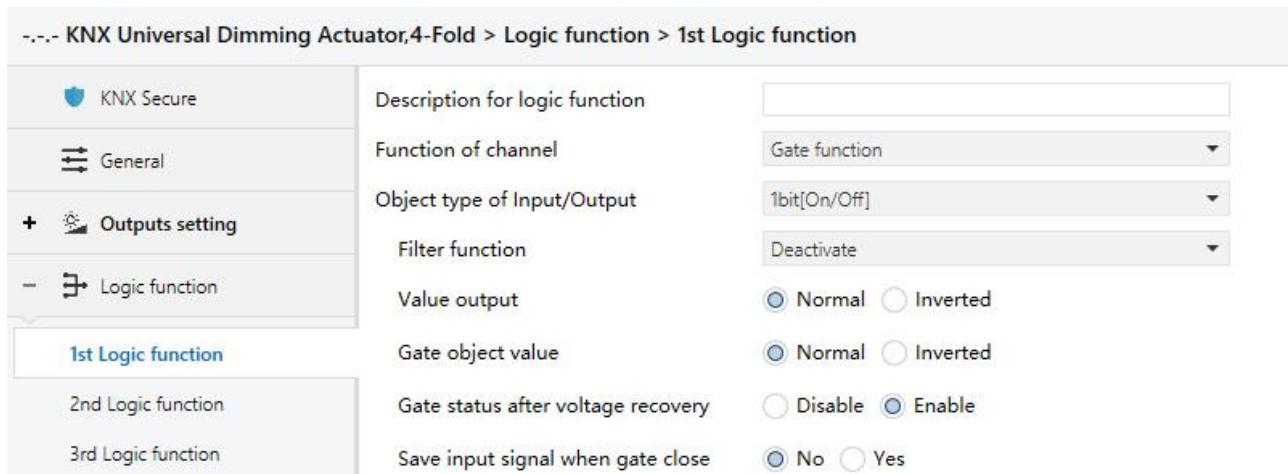
**5.4.5.Parameter window "Gate function"**

Fig.5.4.5 "Gate function" parameter window

**Parameter "Object type of input/Output"**

This parameter is for setting the object type of input/output. Options:

**1bit[On/Off]****1byte[0..100%]****1byte[0..255]****2byte[Float]****2byte[0..65535]**

**Parameter "Filter function"**

This parameter is visible when "1bit[On/Off]" is selected. Set whether to filter On or Off telegram, only pass one of them or pass all. Options:

**Deactivate****On filter out****Off filter out**

Deactivate: Do not filter the On or Off telegrams;

On filter out: Off can pass, On cannot pass;

Off filter out: On can pass, Off cannot pass.

**Parameter "Value output"**

This parameter is visible when "1bit[On/Off]" is selected. Set whether to invert the value then output it. Options:

**Normal****Inverted****Parameter "Gate object value"**

This parameter is for setting whether to invert the gate object value then output it. Options:

**Normal****Inverted****Parameter "Gate status after voltage recovery"**

This parameter is for setting the gate status after power on. Options:

**Disable****Enable****Parameter "Save input signal when gate close"**

This parameter is for setting whether to save input signal on gate close. Options:

**No****Yes**

No: disable to save the input, the input values received during the gate closing period are ignored;

Yes: enable to save the input, the input values received during the gate closing period are output when gate is open (whether the input value is changed or not).

#### 5.4.6.Parameter window "Delay function"

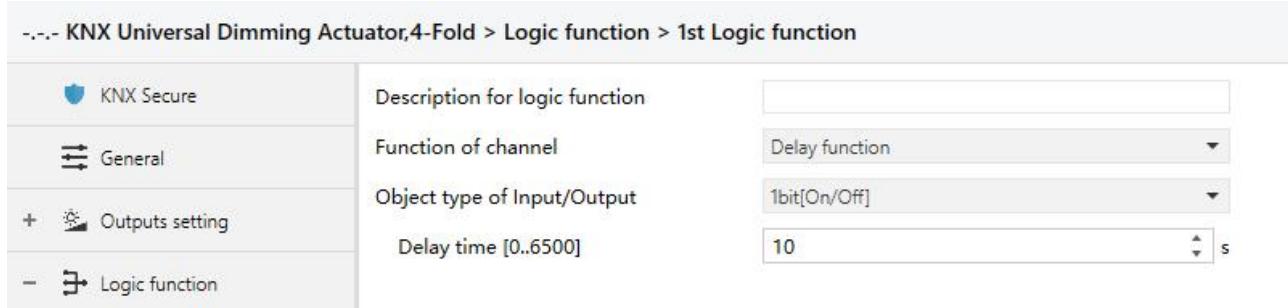


Fig.5.4.6 "Delay function" parameter window

##### Parameter 'Object type of Input/Output'

This parameter is for setting the object type of input/output. Options:

**1bit[On/Off]**

**1byte[0..100%]**

**1byte[0..255]**

**2byte[Float]**

**2byte[0..65535]**

##### Parameter 'Delay time [0..6500]'

This parameter is for setting the delay time that output object forwards the value when the input object receives the telegram. Options: **0..6500 s**

**Note: Receive telegram again in delay time, re-timing.**

### 5.4.7. Parameter window "Staircase lighting"

--- KNX Universal Dimming Actuator,4-Fold > Logic function > 1st Logic function

KNX Secure	Description for logic function		
General	Function of channel	Staircase lighting	
Outputs setting	Trigger value	1	
Logic function	Object type of output	<input checked="" type="radio"/> 1bit	<input type="radio"/> 1byte
1st Logic function	Duration time of staircase lighting [10..6500]	10 <input type="button" value="s"/>	
2nd Logic function	Send value 1 when trigger	<input type="radio"/> OFF	<input checked="" type="radio"/> ON
3rd Logic function	Send value 2 after duration time	<input checked="" type="radio"/> OFF	<input type="radio"/> ON
	Retriggering	<input type="radio"/> Disable	<input checked="" type="radio"/> Enable

Fig.5.4.7 "Staircase lighting" parameter window

#### Parameter "Trigger value"

This parameter is for setting the telegram value of the object "Trigger value". Options:

**0**

**1**

**0 or 1**

#### Parameter "Object type of output"

This parameter is for setting the object type of output. Options:

**1bit**

**1byte**

#### Parameter "Duration time of staircase lighting[10..6500]"

This parameter is for setting duration time of staircase lighting after the stair light power on.

Options: **10..6500 s**

#### --- Parameter "Send value 1 when trigger"

#### --- Parameter "Send value 2 after duration time"

These parameters are for setting the value to send. Send value 1 when trigger, and then send value 2 after duration time. Options display according to the output object datatype.

When 1 bit, options:

**OFF**

**ON**

When 1 byte , options: **0..255**

**Parameter "Retriggering"**

This parameter is for setting whether to trigger re-timing when received trigger value in delay time.

Options:

**Disable****Enable**

## Chapter 6 Description of Communication Object

The communication object is the medium to communicate other device on the bus, namely only the communication object can communicate with the bus.

**NOTE: "C" in "Flag" column in the below table means enable the communication function of the object; "W" means value of object can be written from the bus; "R" means the value of the object can be read by the other devices; "T" means the object has the transmission function; "U" means the value of the object can be updated.**

### 6.1."General" Communication Object

Number	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
1	General	In operation			1 bit	C	-	-	T	-	switch	Low
2	General	Central: Switching			1 bit	C	-	W	-	-	switch	Low
3	General	Central: Relative dimming			4 bit	C	-	W	-	-	dimming control	Low
4	General	Central: Absolute dimming			1 byte	C	-	W	-	-	percentage (0..100%)	Low
5	General	Central: Safety			1 bit	C	-	W	-	-	alarm	Low

Fig.6.1 "General" communication object

NO.	Object Function	Name	Data Type	Flag	DPT
1	<b>In operation</b>	<b>General</b>	<b>1bit</b>	<b>C,R,T</b>	<b>1.001 switch</b>
The communication object is used to periodically send a telegram "1" to the bus to indicate that the device is working properly.					
2	<b>Central: Switching</b>	<b>General</b>	<b>1bit</b>	<b>C,W</b>	<b>1.001 switch</b>
The communication object is used to receive a command of switching on/off lamps for central control, it only applies to the channel that the central control is enabled.					
3	<b>Central: Relative dimming</b>	<b>General</b>	<b>4bit</b>	<b>C,W</b>	<b>3.007 dimming</b>
The communication object is used to receive a command of relative dimming for central control, to dim up or dim down. It only applies to the channel that the central control is enabled.					
4	<b>Central: Absolute dimming</b>	<b>General</b>	<b>1byte</b>	<b>C,W</b>	<b>5.001 percentage</b>
The communication object is used to receive a command of absolute dimming for central control, it only applies to the channel that the central control is enabled.					
5	<b>Central: Safety</b>	<b>General</b>	<b>1bit</b>	<b>C,W</b>	<b>1.005 alarm</b>
The communication object is used to receive the 1bit telegram that is sent from other device (such as sensor, controller, etc.), the cancel telegram value is decided by the parameter.					

If no corresponding telegram is received within the monitoring time, it is assumed that other devices are failure, and the channel with a safety function activates the safety operation. With a monitoring time of 0, it is also possible to activate and exit the safety operation by receiving the corresponding value with this object.

In the case that the safety operation is not active, the cancel telegram is meaningless and it will be ignored.

Table 6.1 "General" communication object table

## 6.2. "Output setting" Communication Object

Number	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
78	Channel A-...	Switching			1 bit	C	-	W	-	-	switch	Low
79	Channel A-...	Relative dimming			4 bit	C	-	W	-	-	dimming control	Low
80	Channel A-...	Absolute dimming			1 byte	C	-	W	-	-	percentage (0..100%)	Low
81	Channel A-...	Switching, status			1 bit	C	R	-	T	-	switch	Low
82	Channel A-...	Brightness value, status			1 byte	C	R	-	T	-	percentage (0..100%)	Low
83	Channel A-...	Short-circuit, status			1 bit	C	R	-	T	-	alarm	Low
84	Channel A-...	Over-voltage, status			1 bit	C	R	-	T	-	alarm	Low
85	Channel A-...	Over-temperature, status			1 bit	C	R	-	T	-	alarm	Low
87	Channel A-...	Operation voltage failure			1 bit	C	R	-	T	-	alarm	Low
88	Channel A-...	Scene			1 byte	C	-	W	-	-	scene control	Low
89	Channel A-...	Staircase lighting			1 bit	C	-	W	-	-	start/stop	Low
90	Channel A-...	Duration of staircase lighting (5..65535s)			2 bytes	C	R	W	-	-	time (s)	Low
91	Channel A-...	Staircase lighting Prewarning			1 bit	C	R	-	T	-	alarm	Low
92	Channel A-...	Threshold input			1 byte	C	-	W	-	-	counter pulses (0..255)	Low
93	Channel A-...	Threshold value 1			1 byte	C	R	W	-	-	counter pulses (0..255)	Low
94	Channel A-...	Threshold value 2			1 byte	C	R	W	-	-	counter pulses (0..255)	Low
95	Channel A-...	Forced operation			2 bit	C	-	W	-	-	switch control	Low

Fig.6.2 "Output setting" communication object

NO.	Object Function	Name	Data Type	Flag	DPT
78	Switching	Channel A-{{...}}	1bit	C,W	1.001 switch

The communication object is used to receive a command of switching on/off lamps. Telegrams:

1—Switch on

0—Switch off

The name in parentheses changes with the parameter "Description (max 30char.)". If description is empty, display "Channel A - ..." by default. The same below.

79	Relative dimming	Channel A-{{...}}	4bit	C,W	3.007 dimming
----	------------------	-------------------	------	-----	---------------

The communication object is used to receive a command of relative dimming, to dim up or dim down.

Dimming down when telegram is 1~7, and the larger this range the adjust step is smaller. That is, the maximum step of dimming down when is 1, and the minimum step of dimming down when is 7, stop dimming when is 0;

Dimming up when telegram is 9~15, and the larger this range the adjust step is smaller. That is, the maximum step of dimming up when is 9, and the minimum step of dimming up when is 15, stop dimming when is 8.

<b>80</b>	<b>Absolute dimming</b>	Channel A-{{...}}	1byte	C,W	<b>5.001 percentage</b>
The communication object is used to receive a command of absolute dimming.					
Telegrams: 0...100%					
<b>81</b>	<b>Switching, status</b>	Channel A-{{...}}	1bit	C,R,T	<b>1.001 switch</b>
The communication object is used to report the status of the current switch to the bus. Send "1" to the bus when the value of the brightness is larger than 0, send "0" to the bus with value of "0". Send the status when voltage recovery.					
<b>82</b>	<b>Brightness value, status</b>	Channel A-{{...}}	1byte	C,R,T	<b>5.001 percentage</b>
The communication object is used to report the status of the current brightness value to the bus. Send the status at power-up when voltage recovery.					
<b>83</b>	<b>Short-circuit, status</b>	Channel A-{{...}}	1bit	C,R,T	<b>1.005 alarm</b>
The communication object is used to report the status of short circuit to the bus. Send the status at power-up when voltage recovery. Telegrams:  1--Short circuit 0--Normal					
<b>84</b>	<b>Over-voltage, status</b>	Channel A-{{...}}	1bit	C,R,T	<b>1.005 alarm</b>
The communication object is used to report the status of over-voltage to the bus. Send the status when voltage recovery. Telegrams:  1--Over voltage 0--Normal					
<b>85</b>	<b>Over-temperature, status</b>	Channel A-{{...}}	1bit	C,R,T	<b>1.005 alarm</b>
The communication object is used to report the status of over-temperature to the bus. Send the status when voltage recovery. Telegrams:  1--Over temperature 0--Normal					
<b>87</b>	<b>Operation voltage failure</b>	Channel A-{{...}}	1bit	C,R,T	<b>1.005 alarm</b>
The communication object is used to report the status of operation voltage failure to the bus. Operation voltage is failure when no valid over-zero signal is detected. Send the status when voltage recovery. Telegrams:  1--Operation voltage failure 0--Normal					

88	Scene	Channel A-{{...}}	1byte	C,W	18.001 scene control																						
<p>The communication object is used to receive a 8 bit command to recall or storage scene.</p> <p>Detailed 8bit the meaning of the directive.</p> <p>Set up a 8bit Orders for the (Binary code): FXNNNNNN</p> <p>F: '0' recall scene; '1' for storage scene;</p> <p>X : 0 ;</p> <p>NNNNNN: Scene number( 0... 63).</p>																											
<p>As follows:</p>																											
<table border="1"> <thead> <tr> <th>Object message value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>0</td><td>Recall scene 1</td></tr> <tr> <td>1</td><td>Recall scene 2</td></tr> <tr> <td>2</td><td>Recall scene 3</td></tr> <tr> <td>...</td><td>...</td></tr> <tr> <td>63</td><td>Recall scene 64</td></tr> <tr> <td>128</td><td>Store scene 1</td></tr> <tr> <td>129</td><td>Store scene 2</td></tr> <tr> <td>130</td><td>Store scene 3</td></tr> <tr> <td>...</td><td>...</td></tr> <tr> <td>191</td><td>Store scene 64</td></tr> </tbody> </table>						Object message value	Description	0	Recall scene 1	1	Recall scene 2	2	Recall scene 3	...	...	63	Recall scene 64	128	Store scene 1	129	Store scene 2	130	Store scene 3	...	...	191	Store scene 64
Object message value	Description																										
0	Recall scene 1																										
1	Recall scene 2																										
2	Recall scene 3																										
...	...																										
63	Recall scene 64																										
128	Store scene 1																										
129	Store scene 2																										
130	Store scene 3																										
...	...																										
191	Store scene 64																										
<p>Parameter setting Options are 1~64, actually communication object "Scene" corresponds to the telegram received is 0~63. Such as parameter settings is the scene 1, communication object "Scene" sends the scene for 0.</p>																											
89	Delay switch	Channel A-{{...}}	1bit	C,W	1.001 switch																						
<p>The communication object is visible when "Delay Switch" is selected for time function, used to turn on the function of delay switch.</p>																											
89	Flashing switch	Channel A-{{...}}	1bit	C,W	1.010 start/stop																						
<p>The communication object is visible when "Flashing Switch" is selected for time function, used to turn on the function of flashing switch.</p>																											
89	Staircase lighting	Channel A-{{...}}	1bit	C,W	1.010 start/stop																						
<p>The communication object is visible when "Staircase lighting" is selected for time function, used to turn on the function of staircase lighting.</p>																											
90	Duration of staircase lighting (5..65535s)	Channel A-{{...}}	2byte	C,W,R	7.005time(s)																						
<p>The communication object is visible when "Staircase lighting" is selected for time function and duration time can be changed via bus. Used to modify the time, and save it after voltage failure. If the duration has not been modified, the value read from the object is the setting value of ETS parameter.</p>																											
91	Staircase lighting Prewarning	Channel A-{{...}}	1bit	C,R,T	1.005 alarm																						

The communication object is visible when "Staircase lighting" is selected for time function and prewarn via bus. Used to send the telegram of prewarning before staircase lighting end. Telegram:

1—Warning

0—End of warning

92	Threshold input	Channel A-{{...}}	1byte 2byte	C,W	5.010 counter pulses(0..255) 5.001 percentage 9.001 temperature 9.004 brightness (lux)
----	-----------------	-------------------	----------------	-----	---

The communication object is receive the input value of threshold function. Telegram value is determined by the datatype, and the datatype is determined by the parameter setting.

93	Threshold value 1	Channel A-{{...}}	1byte 2byte	C,W,R	5.010 counter pulses(0..255) 5.001 percentage 9.001 temperature 9.004 brightness (lux)
94	Threshold value 2	Channel A-{{...}}	1byte 2byte	C,W,R	5.010 counter pulses(0..255) 5.001 percentage 9.001 temperature 9.004 brightness (lux)

These two communication objects are visible when the threshold value 1/2 can be changed via bus. Used to modify the values, and save them after voltage failure. If the thresholds have not been modified, the value read from the object is the setting value of ETS parameter. **Note: threshold value 1 must be less than threshold value 2, or ignore the telegram.**

95	Forced operation	Channel A-{{...}}	1bit 2bit	C,W	1.003 enable 2.001 DPT_Switch control
----	------------------	-------------------	--------------	-----	--

The communication object is used to trigger a forced operation. Save the trigger status when voltage failure, and keep the status at voltage recovery.

When 1bit, activate the forced operation when receive telegram 1, at this time, ignore all the other actions; End the forced operation when receive telegram 0, and the behaviour in forced operation is defined by parameter.

When 2bit, force to switch off when receive telegram 3; force to switch on when receive telegram 2; End the forced operation when receive telegram 1 or 0.

The end telegram is invalid when the forced operation is not active, and ignore it directly.

103	Operating hours counter	Channel A-{{...}}	2byte 4byte	C,R,W,T	7.007 time (h) 13.100 time lag (s)
-----	-------------------------	-------------------	----------------	---------	---------------------------------------

The communication object is used to send the accumulated operating time that the lamp has been switched on to the bus, begin to count when brightness is greater than "0", and the accumulated time can also be modified via the bus, and send it after the device is restarted.

104	<b>Reset operating hours counter</b>	Channel A-{{...}}	1bit	C,W	1.015 reset
-----	--------------------------------------	-------------------	------	-----	-------------

The communication object is used to reset the accumulated operating time to 0. Telegrams:

1—Reset

0—NA

105	<b>Exceedance of operating hours</b>	Channel A-{{...}}	1bit	C,R,T	1.005 alarm
-----	--------------------------------------	-------------------	------	-------	-------------

The communication object is used to send the status to the bus when the accumulated operating time exceeds the threshold, remind user the exceedance. Send the status when voltage recovery.

Telegrams:

1—Exceed

0—Normal

Table 6.2 "Output setting" communication object table

## 6.3."Logic" Communication Object

### 6.3.1."AND/OR/XOR" Communication Object

Number	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
6	1st Logic	Input a			1 bit	C -	W	T	U	boolean	Low	
7	1st Logic	Input b			1 bit	C -	W	T	U	boolean	Low	
8	1st Logic	Input c			1 bit	C -	W	T	U	boolean	Low	
9	1st Logic	Input d			1 bit	C -	W	T	U	boolean	Low	
10	1st Logic	Input e			1 bit	C -	W	T	U	boolean	Low	
11	1st Logic	Input f			1 bit	C -	W	T	U	boolean	Low	
12	1st Logic	Input g			1 bit	C -	W	T	U	boolean	Low	
13	1st Logic	Input h			1 bit	C -	W	T	U	boolean	Low	
14	1st Logic	Logic result			1 bit	C -	-	T -	-	boolean	Low	

Fig.6.3.1 "AND/OR/XOR" communication object

NO.	Object Function	Name	Data Type	Flag	DPT
6/.../13	<b>Input a/b/../h</b>	<b>{}{1st Logic}</b>	<b>1bit</b>	<b>C,W,T,U</b>	<b>1.002 boolean</b>
The communication object is used to receive the value of logical input Input a/b/../h.					
The name in parentheses changes with the parameter "Description for logic function". If description is empty, display "1st Logic" by default. The same below.					
14	<b>Logic result</b>	<b>{}{1st Logic}</b>	<b>1bit</b>	<b>C,T</b>	<b>1.002 boolean</b>
The communication object is used to send the results of logical operation.					

Table 6.3.1 "AND/OR/XOR" communication object table

### 6.3.2. "Gate forwarding" Communication Object

Number	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
6	1st Logic	Gate value select			1 byte	C	-	W	-	-	scene number	Low
7	1st Logic	Input A			1 bit	C	-	W	-	-	switch	Low
8	1st Logic	Input B			1 bit	C	-	W	-	-	switch	Low
9	1st Logic	Input C			1 bit	C	-	W	-	-	switch	Low
10	1st Logic	Input D			1 bit	C	-	W	-	-	switch	Low
11	1st Logic	Output A			1 bit	C	-	-	T	-	switch	Low
12	1st Logic	Output B			1 bit	C	-	-	T	-	switch	Low
13	1st Logic	Output C			1 bit	C	-	-	T	-	switch	Low
14	1st Logic	Output D			1 bit	C	-	-	T	-	switch	Low

Fig.6.3.2 "Gate forwarding" communication object

NO.	Object Function	Name	Data Type	Flag	DPT
6	Gate value select	{}{1st Logic}	1byte	C,W	17.001 scene number

The communication object is used to select the scene of logical gate forwarding.

7/.../10	Input x	{}{1st Logic}	1bit 4bit 1byte	C,W	1.001 switch 3.007 dimming control 5.010 counter pulses(0..255)
----------	---------	---------------	-----------------------	-----	---

The communication object is used to receive the value of the logic gate input Input x.

11/../14	Output x	{}{1st Logic}	1bit 4bit 1byte	C,T	1.001 switch 3.007 dimming control 5.010 counter pulses(0..255)
----------	----------	---------------	-----------------------	-----	---

The communication object is used to output the value forwarded by the logic gate. The output value is the same as the input value, but one input can be forwarded into one or more outputs, set by parameters.

Table 6.3.2 "Gate forwarding" communication object table

### 6.3.3. "Threshold comparator" Communication Object

Number	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
6	1st Logic	Threshold value input			4 bit	C	-	W	-	U	dimming control	Low
6	1st Logic	Threshold value input			1 byte	C	-	W	-	U	counter pulses (0..255)	Low
6	1st Logic	Threshold value input			2 bytes	C	-	W	-	U	pulses	Low
6	1st Logic	Threshold value input			2 bytes	C	-	W	-	U	2-byte signed value	Low
6	1st Logic	Threshold value input			2 bytes	C	-	W	-	U	2-byte float value	Low
6	1st Logic	Threshold value input			4 bytes	C	-	W	-	U	counter pulses (unsigned)	Low
6	1st Logic	Threshold value input			2 bytes	C	-	W	-	U	temperature (°C)	Low
6	1st Logic	Threshold value input			2 bytes	C	-	W	-	U	humidity (%)	Low
6	1st Logic	Threshold value input			2 bytes	C	-	W	-	U	lux (Lux)	Low
14	1st Logic	Logic result			1 bit	C	-	-	T	-	boolean	Low

Fig.6.3.3 "Threshold comparator" communication object

NO.	Object Function	Name	Data Type	Flag	DPT
6	Threshold value input	{}{1st Logic}	4bit 1byte 2byte 4byte	C,W,U	3.007 dimming 5.010 counter pulses 7.001 pulses 12.001 counter pulses
The communication object is used to input threshold value.					
14	Logic result	{}{1st Logic}	1bit	C,T	1.002 boolean
The communication object is used to send the results of logical operation. That is, the value that should be sent after the object input threshold is compared with the setting threshold value.					

Table 6.3.3 "Threshold comparator" communication object table

### 6.3.4. "Format convert" Communication Object

Number	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
6	1st Logic	Input 1bit-bit0			1 bit	C	-	W	-	U	boolean	Low
7	1st Logic	Input 1bit-bit1			1 bit	C	-	W	-	U	boolean	Low
14	1st Logic	Output 2bit			2 bit	C	-	-	T	-	switch control	Low

"2x1bit --> 1x2bit" function: converts two 1bit values to a 2bit value, such as Input bit1=1, bit0=0-->

Output 2bit=2

Number	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
6	1st Logic	Input 1bit-bit0			1 bit	C	-	W	-	U	boolean	Low
7	1st Logic	Input 1bit-bit1			1 bit	C	-	W	-	U	boolean	Low
8	1st Logic	Input 1bit-bit2			1 bit	C	-	W	-	U	boolean	Low
9	1st Logic	Input 1bit-bit3			1 bit	C	-	W	-	U	boolean	Low
10	1st Logic	Input 1bit-bit4			1 bit	C	-	W	-	U	boolean	Low
11	1st Logic	Input 1bit-bit5			1 bit	C	-	W	-	U	boolean	Low
12	1st Logic	Input 1bit-bit6			1 bit	C	-	W	-	U	boolean	Low
13	1st Logic	Input 1bit-bit7			1 bit	C	-	W	-	U	boolean	Low
14	1st Logic	Output 1byte			1 byte	C	-	-	T	-	counter pulses (0..255)	Low

"8x1bit --> 1x1byte" function: converts eight 1bit values to a 1byte value, such as Input bit2=1, bit1=1, bit0=1, other bits are 0--> Output 1byte=7

Number	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
6	1st Logic	Input 1byte			1 byte	C	-	W	-	U	counter pulses (0..255)	Low
14	1st Logic	Output 2byte			2 bytes	C	-	-	T	-	pulses	Low

"1x1byte --> 1x2byte" function: converts one 1byte values to a 2byte value, such as Input 1byte=125-->

Output 2byte=125. Although the value remains the same, the data type of the value is different.

Number	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
6	1st Logic	Input 1byte-low			1 byte	C	-	W	-	U	counter pulses (0..255)	Low
7	1st Logic	Input 1byte-high			1 byte	C	-	W	-	U	counter pulses (0..255)	Low
14	1st Logic	Output 2byte			2 bytes	C	-	-	T	-	pulses	Low

"2x1byte --> 1x2byte" function: converts two 1byte values to a 2byte value, such as Input 1byte-low = 255 (\$FF), Input 1byte-high = 100 (\$64) --> Output 2byte = 25855 (\$64 FF)

Number	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
6	1st Logic	Input 2byte-low			2 bytes	C	-	W	-	U	pulses	Low
7	1st Logic	Input 2byte-high			2 bytes	C	-	W	-	U	pulses	Low
14	1st Logic	Output 4byte			4 bytes	C	-	-	T	-	counter pulses (unsigned)	Low

"2x2byte --> 1x4byte" function: converts two 2 byte values to a 4byte value, such as Input 2byte-low = 65530 (\$FF FA), Input 2byte-high = 32768 (\$80 00)--> Output 2byte = 2147549178 (\$80 00 FF FA)

Number	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
6	1st Logic	Input 1byte			1 byte	C	-	W	-	U	counter pulses (0..255)	Low
7	1st Logic	Output 1bit-bit0			1 bit	C	-	-	T	-	boolean	Low
8	1st Logic	Output 1bit-bit1			1 bit	C	-	-	T	-	boolean	Low
9	1st Logic	Output 1bit-bit2			1 bit	C	-	-	T	-	boolean	Low
10	1st Logic	Output 1bit-bit3			1 bit	C	-	-	T	-	boolean	Low
11	1st Logic	Output 1bit-bit4			1 bit	C	-	-	T	-	boolean	Low
12	1st Logic	Output 1bit-bit5			1 bit	C	-	-	T	-	boolean	Low
13	1st Logic	Output 1bit-bit6			1 bit	C	-	-	T	-	boolean	Low
14	1st Logic	Output 1bit-bit7			1 bit	C	-	-	T	-	boolean	Low

"1x1byte --> 8x1bit" function: converts one 1byte values to eight 1but value, such as Input 1byte=200 --> Output bit0=0, bit1=0, bit2=0, bit3=1, bit4=0, bit5=0, bit6=1, bit7=1

Number	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
6	1st Logic	Input 2byte			2 bytes	C	-	W	-	U	pulses	Low
13	1st Logic	Output 1byte-low			1 byte	C	-	-	T	-	counter pulses (0..255)	Low
14	1st Logic	Output 1byte-high			1 byte	C	-	-	T	-	counter pulses (0..255)	Low

"1x2byte --> 2x1byte" function: converts one 2byte values to two 2byte value, such as Input 2byte = 555500 (\$D8 CC) --> Output 1byte-low = 204 (\$CC), Output 1byte-high =216 (\$D8)

Number	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
6	1st Logic	Input 4byte			4 bytes	C	-	W	-	U	counter pulses (unsigned)	Low
13	1st Logic	Output 2byte-low			2 bytes	C	-	-	T	-	pulses	Low
14	1st Logic	Output 2byte-high			2 bytes	C	-	-	T	-	pulses	Low

"1x4byte --> 2x2byte" function: converts one 4byte values to two 2byte value, such as Input 4byte = 78009500 (\$04 A6 54 9C) --> Output 2byte-low = 21660 (\$54 9C), Output 2byte-high =1190 (\$04 A6)

Number	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
6	1st Logic	Input 3byte			3 bytes	C	-	W	-	U	RGB value 3x(0..255)	Low
12	1st Logic	Output 1byte-low			1 byte	C	-	-	T	-	counter pulses (0..255)	Low
13	1st Logic	Output 1byte-middle			1 byte	C	-	-	T	-	counter pulses (0..255)	Low
14	1st Logic	Output 1byte-high			1 byte	C	-	-	T	-	counter pulses (0..255)	Low

"1x3byte --> 3x1byte" function: converts one 3byte values to three 1byte value, such as Input 3byte = \$78 64 C8--> Output 1byte-low = 200 (\$C8) , Output 1byte-middle = 100 (\$64) , Output 1byte-high =120 (\$78)

Number	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
6	1st Logic	Input 1byte-low			1 byte	C	-	W	-	U	counter pulses (0..255)	Low
7	1st Logic	Input 1byte-middle			1 byte	C	-	W	-	U	counter pulses (0..255)	Low
8	1st Logic	Input 1byte-high			1 byte	C	-	W	-	U	counter pulses (0..255)	Low
14	1st Logic	Output 3byte			3 bytes	C	-	-	T	-	RGB value 3x(0..255)	Low

"3x1byte --> 1x3byte" function: converts three 1byte values to a 3byte value, such as Input 1byte-low = 150 (\$96), Input 1byte-middle = 100 (\$64), Input 1byte-high = 50 (\$32)--> Output 3byte = \$32 64 96

Fig.6.3.4 "Format convert" communication object

NO.	Object Function	Name	Data Type	Flag	DPT
6	Input ...	{1st Logic}	1bit		<b>1.001 switch</b>
			1byte		<b>5.010 counter pulses(0..255)</b>
			2byte	C,W,U	<b>7.001 pulses</b>
			3byte		<b>232.600 RGB value 3x(0..255)</b>
			4byte		<b>12.001 counter pulses</b>

The communication object is used to input a value that needs to be converted.

14	Output ...	{1st Logic}	1bit		<b>1.001 switch</b>
			2bit		<b>2.001 switch control</b>
			1byte		<b>5.010 counter pulses(0..255)</b>
			2byte	C,T	<b>7.001 pulses</b>
			3byte		<b>232.600 RGB value 3x(0..255)</b>
			4byte		<b>12.001 counter pulses</b>

The communication object is used to output the converted value.

Table 6.3.4 "Format convert" communication object table

### 6.3.5."Gate function" Communication Object

Number	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
6	1st Logic	Input			1 bit	C	-	W	-	-	switch	Low
7	1st Logic	Gate input			1 bit	C	-	W	-	-	boolean	Low
14	1st Logic	Output			1 bit	C	-	-	T	-	switch	Low
Input/Output - 1bit[On/Off]												
6	1st Logic	Input			1 byte	C	-	W	-	-	percentage (0..100%)	Low
7	1st Logic	Gate input			1 bit	C	-	W	-	-	boolean	Low
14	1st Logic	Output			1 byte	C	-	-	T	-	percentage (0..100%)	Low
Input/Output - 1byte[0..100%]												
6	1st Logic	Input			1 byte	C	-	W	-	-	counter pulses (0..255)	Low
7	1st Logic	Gate input			1 bit	C	-	W	-	-	boolean	Low
14	1st Logic	Output			1 byte	C	-	-	T	-	counter pulses (0..255)	Low
Input/Output - 1byte[0..255]												
6	1st Logic	Input			2 bytes	C	-	W	-	-	temperature (°C)	Low
7	1st Logic	Gate input			1 bit	C	-	W	-	-	boolean	Low
14	1st Logic	Output			2 bytes	C	-	-	T	-	temperature (°C)	Low
Input/Output - 2byte[Float]												
6	1st Logic	Input			2 bytes	C	-	W	-	-	pulses	Low
7	1st Logic	Gate input			1 bit	C	-	W	-	-	boolean	Low
14	1st Logic	Output			2 bytes	C	-	-	T	-	pulses	Low
Input/Output - 2byte[0..65535]												

Fig.6.3.5 "Gate function" communication object

NO.	Object Function	Name	Data Type	Flag	DPT
6	Input	<b>{}{1st Logic}</b>	<b>1bit</b> <b>1byte</b> <b>2byte</b>	<b>C,W</b>	<b>1.001 switch</b> <b>5.001 percentage</b> <b>5.010 counter pulses</b> <b>9.001 temperature</b> <b>7.001 pulses</b>
The communication object is used to input a value that needs to gate filter.					
7	Gate input	<b>{}{1st Logic}</b>	<b>1bit</b>	<b>C,W</b>	<b>1.002 boolean</b>
The communication object is used to control the switch status of gate input. Input signal is allowed to pass when gate open, then output, and the current input status is still sent if there is a change; Can not pass when gate close.					
14	Output	<b>{}{1st Logic}</b>	<b>bit</b> <b>1byte</b> <b>2byte</b>	<b>C,T</b>	<b>1.001 switch</b> <b>5.001 percentage</b> <b>5.010 counter pulses</b> <b>9.001 temperature</b> <b>7.001 pulses</b>
The communication object is used to output the value after gate filtering. Only when gate input status is open, output is available, defined by the object "Gate input".					

Table 6.3.5 "Gate function" communication object table

### 6.3.6."Delay function" Communication Object

Number	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
6	1st Logic	Input			1 bit	C	-	W	-	-	switch	Low
14	1st Logic	Output			1 bit	C	-	-	T	-	switch	Low
1bit[On/Off]												
6	1st Logic	Input			1 byte	C	-	W	-	-	percentage (0..100%)	Low
14	1st Logic	Output			1 byte	C	-	-	T	-	percentage (0..100%)	Low
1byte[0..100%]												
6	1st Logic	Input			1 byte	C	-	W	-	-	counter pulses (0..255)	Low
14	1st Logic	Output			1 byte	C	-	-	T	-	counter pulses (0..255)	Low
1byte[0..255]												
6	1st Logic	Input			2 bytes	C	-	W	-	-	temperature (°C)	Low
14	1st Logic	Output			2 bytes	C	-	-	T	-	temperature (°C)	Low
2byte[Float]												
6	1st Logic	Input			2 bytes	C	-	W	-	-	pulses	Low
14	1st Logic	Output			2 bytes	C	-	-	T	-	pulses	Low
2byte[0..65535]												

Fig.6.3.6 "Delay function" communication object

NO.	Object Function	Name	Data Type	Flag	DPT
6	Input	{}{1st Logic}}	1bit 1byte 2byte	C,W	<b>1.001 switch</b> <b>5.001 percentage</b> <b>5.010 counter pulses</b> <b>9.001 temperature</b> <b>7.001 pulses</b>

The communication object is used to input a value that needs to delay.

14	Output	{}{1st Logic}}	1bit 1byte 2byte	C,T	<b>1.001 switch</b> <b>5.001 percentage</b> <b>5.010 counter pulses</b> <b>9.001 temperature</b> <b>7.001 pulses</b>
----	--------	----------------	------------------------	-----	--

The communication object is used to output that needs to delay converted value, delay time is defined by the parameter.

Table 6.3.6 "Delay function" communication object table

**6.3.7."Staircase lighting" Communication Object**

Number	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
6	1st Logic	Trigger value			1 bit	C	-	W	-	-	trigger	Low
7	1st Logic	Light-on duration time			2 bytes	C	-	W	-	-	time (s)	Low
14	1st Logic	Output			1 bit	C	-	-	T	-	switch	Low
14	1st Logic	Output			1 byte	C	-	-	T	-	counter pulses (0..255)	Low

Fig.6.3.7 "Staircase lighting" communication object

NO.	Object Function	Name	Data Type	Flag	DPT
6	<b>Trigger value</b>	<b> {{1st Logic}} </b>	<b>1bit</b>	<b>C,W</b>	<b>1.017 trigger</b>
The communication object is used to receive the value to trigger staircase lighting.					
7	<b>Light-on duration time</b>	<b> {{1st Logic}} </b>	<b>2byte</b>	<b>C,W</b>	<b>7.005 time(s)</b>
The communication object is used to modify the staircase light-on duration time, the modified range is referenced from the range defined by the parameter, take the limit value if exceeded.					
14	<b>Output</b>	<b> {{1st Logic}} </b>	<b>1bit 1byte</b>	<b>C,T</b>	<b>1.001 switch 5.010 counter pulses</b>
The communication object is used to output value 1 when trigger, and send value 2 after duration time. Telegram value is determined by the parameter setting datatype.					

Table 6.3.7 "Staircase lighting" communication object table